

ECX-2200A/2100A PEG USER Manual

10th Gen Intel® Xeon®/Core™ i9/i7/i5/i3 AI Computing System
Workstation-grade, NVIDIA® Tesla®/Quadro®/GeForce® Graphics

Record of Revision

Version	Date	Page	Description	Remark
0.10	2022/10/13	All	Preliminary Release	
1.00	2022/10/20	All	Official Release	
1.10	2023/01/17	4, 6, 8, 10, 24, 25, 27, 54,66	Update	
1.20	2023/06/01	All	Update	

Disclaimer

This manual is released by Vecow Co., Ltd. for reference purpose only. All product offerings and specifications are subject to change without prior notice. Vecow Co., Ltd. is under no legal commitment to the details of this document. Vecow shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of this document, the products, or any third party infringements, which may result from such use.

Declaration of Conformity

FCC This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE The products described in this manual comply with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

Copyright and Trademarks

This document contains proprietary information protected by copyright. No part of this publication may be reproduced in any form or by any means, electric, photocopying, recording or otherwise, without prior written authorization by Vecow Co., Ltd. The rights of all the brand names, product names, and trademarks belong to their respective owners.

Order Information

Part Number	Description
ECX-2200A-PEG	ECX-2200, 6 GigE LAN with 4 PoE ⁺ , 1 PCIe x16, 2 SSD Tray, 6 USB 3.2, 4 COM, 3 Nano SIM, 32 Isolated DIO, with System Fan
ECX-2200AF-PEG	ECX-2200, 6 GigE LAN with 4 PoE ⁺ , 1 PCIe x16, 2 SSD Tray, 6 USB 3.2, 4 COM, 3 Nano SIM, 32 Isolated DIO, with Fan Sink and System Fan
ECX-2100A-PEG	ECX-2100, 2 GigE LAN, 1 PCIe x16, 2 SSD Tray, 6 USB 3.2, 4 COM, 3 Nano SIM, 16 GPIO, with System Fan
ECX-2100AF-PEG	ECX-2100, 2 GigE LAN, 1 PCIe x16, 2 SSD Tray, 6 USB 3.2, 4 COM, 3 Nano SIM, 16 GPIO, with Fan Sink and System Fan

CPU List

Series	CPU	Cores	TDP	Cache	Max. Frequency	ECC Memory
Intel® Xeon®	W-1290E	10	95W	20M	Up to 4.8GHz	Y
	W-1290TE	10	35W	20M	Up to 4.5GHz	Y
	W-1270E	8	80W	16M	Up to 4.8GHz	Y
	W-1270TE	8	35W	16M	Up to 4.4GHz	Y
	W-1250E	6	80W	12M	Up to 4.7GHz	Y
	W-1250TE	6	35W	12M	Up to 3.8GHz	Y
Intel® Core™	i9-10900E	10	65W	20M	Up to 4.7GHz	NA
	i9-10900TE	10	35W	20M	Up to 4.5GHz	NA
	i7-10700E	8	65W	16M	Up to 4.5GHz	NA
	i7-10700TE	8	35W	16M	Up to 4.4GHz	NA
	i5-10500E	6	65W	12M	Up to 4.2GHz	NA
	i5-10500TE	6	35W	12M	Up to 3.7GHz	NA
	i3-10100E	4	65W	6M	Up to 3.8GHz	Y
	i3-10100TE	4	35W	6M	Up to 3.6GHz	Y

Optional Accessories

Part Number	Description
DDR4 32G	Certified DDR4 32GB 3200MHz RAM
DDR4 16G	Certified DDR4 16GB 3200MHz RAM
DDR4 8G	Certified DDR4 8GB 3200MHz RAM
DDR4 4G	Certified DDR4 4GB 3200MHz RAM
PWA-160WB-WT	160W, 24V, 85V AC to 264V AC Power Adapter with 3-pin Terminal Block (7.62mm pitch), Wide Temperature -30°C to +70°C
PWA-280WB-WT	280W, 24V, 85V AC to 264V AC Power Adapter with 3-pin Terminal Block (7.62mm pitch), Wide Temperature -30°C to +70°C
PWS-480W-WT	480W, 24V, 90V AC to 305V AC Power Supply, Wide-Temp, IP65
VESA Mount	VESA Mounting Kit
DIN-RAIL Kit	DIN Rail and VESA Mounting Kit
Rack Mount	2U Rackmount Kit
TMK2-20P-100	Terminal Block 20-pin to Terminal Block 20-pin Cable, 100cm
TMK2-20P-500	Terminal Block 20-pin to Terminal Block 20-pin Cable, 500cm
TMB-TMBK-20P	Terminal Board with One 20-pin Terminal Block Connector and DIN-Rail Mounting
M.2 Storage Module	M.2 Key M/Key B PCIe Storage Module
5G Module	5G Module with Antenna
4G Module	4G/GPS Module with Antenna
WiFi & Bluetooth	WiFi & Bluetooth Module with Antenna

Table of Contents

CHAPTER 1	GENERAL INTRODUCTION	1
1.1	Overview	1
1.2	Features	2
1.3	Product Specification	3
1.3.1	Specifications of ECX-2200A PEG	3
1.3.2	Specifications of ECX-2200AF PEG	5
1.3.3	Specifications of ECX-2100A PEG	7
1.3.4	Specifications of ECX-2100AF PEG	9
1.4	Supported CPU List	11
1.5	Mechanical Dimension	12
1.5.1	Dimensions of ECX-2200A PEG	12
1.5.2	Dimensions of ECX-2200AF PEG	12
1.5.1	Dimensions of ECX-2100A PEG	13
1.5.4	Dimensions of ECX-2100AF PEG	13
CHAPTER 2	GETTING TO KNOW YOUR ECX-2200A/2100A PEG	14
2.1	Packing List	14
2.1.1	ECX-2200A PEG Packing List	14
2.1.2	ECX-2100A PEG Packing List	15
2.2	Front Panel I/O Functions	16
2.3	Rear Panel I/O & Functions	23
2.4	Main Board Expansion Connectors	32
2.5	Main Board Jumper Settings	46
2.6	Ignition Control	52

CHAPTER 3	SYSTEM SETUP	55
3.1	How to Open Your ECX-2200A/2100A PEG	55
3.2	Installing CPU	58
3.3	Installing DDR4 SO-DIMM Modules	59
3.4	Installing Mini PCIe Card	61
3.5	Installing Nano SIM Card	64
3.6	Installing Micro SD Cards	65
3.7	Installing PCI/PCIe Card	66
3.8	Installing SSD/HDD	69
3.9	Installing M.2	70
3.10	Installing Antenna Cable	77
3.11	Mounting Your ECX-2200A/2100A PEG	80
CHAPTER 4	BIOS SETUP	85
4.1	Entering BIOS Setup	85
4.2	Main	86
4.3	Advanced	87
4.4	Chipset	103
4.5	Security	109
4.6	Boot	112
4.7	Save & Exit	113
APPENDIX A	: Isolated DIO/GPIO Guide	114
APPENDIX B	: Software Functions	118
APPENDIX C	: RAID Functions	122
APPENDIX D	: Power Consumption	128
APPENDIX E	: Supported Memory & Storage List	134
APPENDIX F	: Install Win11(BIOS TPM Setting)	139

1

GENERAL INTRODUCTION

1.1 Overview

Vecow ECX-2200A/2100A PEG is a rugged AI Computing System. Featuring a new generation workstation-grade platform : 10-core 10th Gen Intel® Xeon®/Core™ processor which provides a 45% increase in system performance and 87% improvement in graphics performance over Vecow previous generation embedded system. By integrating with powerful NVIDIA® Tesla®/Quadro®/GeForce® Graphics, ECX-2200A/2100A PEG is taking AI Computing Systems to the next level. This series provides workstation-grade computing capability and brings balance between reliability and power budget for the innovation applications of edge computing. It also supports an array of high-speed configurations, including USB 3.2 (10G), PCIe 3.0 (8GT/S), SATA III (6G) and GigE LAN (1G).

The ECX-2200A/2100A PEG provides rich I/O interfaces including 6 GigE LAN with 4 IEEE 802.3at PoE⁺, 4 COM, 6 USB, 32 Isolated DIO, 3 external Nano SIM card socket. Complete with integrated configurations, ECX-2200A/2100A PEG provides 2 front-access SSD/HDD trays, 1 PCIe expansion slot for dedicated graphics cards including NVIDIA Tesla/Quadro/GeForce with up to 1280 CUDA cores for advanced AI computing.

Powered by 10th Gen Intel® Xeon®/Core™ i9/i7/i5/3 Processor and includes industrial-grade features of PoE⁺ GigE LAN port, 12V to 50V DC-in and -20°C to 45°C extended operating temperature supported, Vecow ECX-2200A/2100A PEG provides high-performance computing and reliable configurations for mission-crucial applications at the edge and is ideal for Robotic Control, Traffic Vision, Public Surveillance, Smart Vending, Automatic LPR, AMR/AGV, and any AIoT/Industry 4.0 applications.

1.2 Features

- Workstation-grade Platform : 10-core 10th Gen Intel® Xeon®/Core™ i9/i7/i5/i3 Processor (CML-S) running with Intel® W480E chipset, supports max 95W TDP CPU
- Supports up to 250W NVIDIA® or AMD Graphics card
- NVIDIA® Tesla®/Quadro®/GeForce® graphics card delivers leading AI computing productivity by advanced NVIDIA® CUDA® cores
- 12V to 50V wide range DC Power Input with 80V Surge Protection
- 6 Independent GigE LAN with 4 IEEE 802.3at PoE⁺
- Expansion : 1 PCIe, 1 M.2 Key B, 1 M.2 Key E, 2 Mini PCIe
- Storage : 2 2.5" SSD Tray, 1 Micro SD Card, 1 M.2 Key M, 2 SATA III
- Multiple VGA, DVI, HDMI and DisplayPort display interfaces support max 7 independent displays, up to 8K Resolution
- 6-port USB 3.2 support up to 10Gbps data transfer
- 32 Isolated DIO, 4 COM RS-232/422/485
- External Nano SIM Sockets for 5G/WiFi 6/4G/3G/LTE/GPRS/UMTS
- Supports Configurable Software Ignition Power Control and TPM 2.0
- Optimized user-friendly design for easier system maintenance
- Optional VHub One-Stop AIoT Solution Service supports OpenVINO based AI accelerator and advanced Edge AI applications

1.3 Product Specification

1.3.1 Specifications of ECX-2200A PEG

System	
Processor	Intel® 10th Generation Xeon®/Core™ i9/i7/i5/i3 Processor (Comet Lake-S)
Chipset	Intel® W480E
BIOS	AMI
SIO	IT8786E
Memory	• DDR4 2933MHz (ECC/Non-ECC) • Up to 64GB • 2 260-pin SO-DIMM Socket
I/O Interface	
Serial	4 COM RS-232/422/485 (ESD 8kV)
USB	6 USB 3.2 (External)
Isolated DIO	32 Isolated DIO : 16 DI, 16 DO
LED	Power, HDD, Wireless, PoE
SIM Card	3 Nano SIM Card Socket (External)
Expansion	
Mini PCIe	2 Full-size Mini PCIe Socket for PCIe/USB/External SIM Card/mSATA
PCI/PCIe	1 PCIe x16 Slot
M.2	• 1 M.2 Key B Socket (3042/3052) • 1 M.2 Key E Socket (2230)
Graphics	
Graphics Processor	• Intel® UHD Graphics 630 • Independent Graphics : By request
Interface	Up to 7 independent displays : • 1 VGA : Up to 1920 x 1080 @60Hz • 1 DVI-D : Up to 1920 x 1080 @60Hz • 2 DisplayPort : Up to 4096 x 2304 @60Hz • By requested graphic card
Storage	
SATA	2 SATA III (6Gbps) support S/W RAID 0, 1
mSATA	2 SATA III (Mini PCIe Type, 6Gbps)
M.2	1 M.2 Key M Socket (2280, PCIe x4)
Storage Device	• 1 Micro SD Card, Push-in/Push-out Ejector • 2 Front-access 2.5" SSD/HDD Tray
Audio	
Audio Codec	Realtek ALC888S-VD, 7.1 Channel HD Audio
Audio Interface	1 Mic-in, 1 Line-out

Ethernet	
LAN 1	Intel® I219LM GigE LAN supports iAMT 14.0
LAN 2	Intel® I210 GigE LAN
PoE	
LAN 3	GigE IEEE 802.3at (25.5W/48V) PoE+ by Intel® I210
LAN 4	GigE IEEE 802.3at (25.5W/48V) PoE+ by Intel® I210
LAN 5	GigE IEEE 802.3at (25.5W/48V) PoE+ by Intel® I210
LAN 6	GigE IEEE 802.3at (25.5W/48V) PoE+ by Intel® I210
Power	
Input Voltage	12V to 50V, DC-in
Power Interface	3-pin Terminal Block : V+, V-, Frame Ground
Ignition Control	16 Mode Software Ignition Control
Remote Switch	3-pin Terminal Block : On, Off, IGN
Surge Protection	Up to 80V/1ms Transient Power
Others	
TPM	Infineon SLB9665 supports TPM 2.0, LPC interface
Watchdog Timer	Reset : 1 to 255 sec./min. per step
Smart Management	Wake on LAN, PXE supported
HW Monitor	Monitoring temperature, voltages. Auto throttling control when CPU overheats.
Software Support	
OS	Windows 10, Linux
Mechanical	
Dimension (W x D x H)	260.0mm x 240.0mm x 79.0mm (10.24" x 9.45" x 3.11")
Weight	4.5 kg (9.92 lb)
Mounting	• Wallmount by mounting bracket • DIN Rail Mount (Optional) • 2U Rackmount (Optional)
Environment	
Operating Temperature	35W, 65W TDP CPU : -20°C to 45°C (-4°F to 113°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% humidity, non-condensing
Relative Humidity	95% at 45°C
Shock /Vibration	• IEC 61373 : 2010 • Railway Applications : Rolling Stock Equipment, Shock and Vibration Tests
EMC	CE, FCC, EN50155, EN50121-3-2

1.3.2 Specifications of ECX-2200AF PEG

System	
Processor	Intel® 10th Generation Xeon®/Core™ i9/i7/i5/i3 Processor (Comet Lake-S)
Chipset	Intel® W480E
BIOS	AMI
SIO	IT8786E
Memory	• DDR4 2933MHz (ECC/Non-ECC) • Up to 64GB • 2 260-pin SO-DIMM Socket
I/O Interface	
Serial	4 COM RS-232/422/485 (ESD 8kV)
USB	6 USB 3.2 (External)
Isolated DIO	32 Isolated DIO : 16 DI, 16 DO
LED	Power, HDD, Wireless, PoE
SIM Card	3 Nano SIM Card Socket (External)
Expansion	
Mini PCIe	2 Full-size Mini PCIe Socket for PCIe/USB/External SIM Card/mSATA
PCI/PCIe	1 PCIe x16 Slot
M.2	• 1 M.2 Key B Socket (3042/3052) • 1 M.2 Key E Socket (2230)
Graphics	
Graphics Processor	• Intel® UHD Graphics 630 • Independent Graphics : By request
Interface	Up to 7 independent displays : • 1 VGA : Up to 1920 x 1080 @60Hz • 1 DVI-D : Up to 1920 x 1080 @60Hz • 2 DisplayPort : Up to 4096 x 2304 @60Hz • By requested graphic card
Storage	
SATA	2 SATA III (6Gbps) support S/W RAID 0, 1
mSATA	2 SATA III (Mini PCIe Type, 6Gbps)
M.2	1 M.2 Key M Socket (2280, PCIe x4)
Storage Device	• 1 Micro SD Card, Push-in/Push-out Ejector • 2 Front-access 2.5" SSD/HDD Tray
Audio	
Audio Codec	Realtek ALC888S-VD, 7.1 Channel HD Audio
Audio Interface	1 Mic-in, 1 Line-out
Ethernet	
LAN 1	Intel® I219LM GigE LAN supports iAMT 14.0
LAN 2	Intel® I210 GigE LAN

PoE	
LAN 3	GigE IEEE 802.3at (25.5W/48V) PoE ⁺ by Intel® I210
LAN 4	GigE IEEE 802.3at (25.5W/48V) PoE ⁺ by Intel® I210
LAN 5	GigE IEEE 802.3at (25.5W/48V) PoE ⁺ by Intel® I210
LAN 6	GigE IEEE 802.3at (25.5W/48V) PoE ⁺ by Intel® I210
Power	
Input Voltage	12V to 50V, DC-in
Power Interface	3-pin Terminal Block : V+, V-, Frame Ground
Ignition Control	16 Mode Software Ignition Control
Remote Switch	3-pin Terminal Block : On, Off, IGN
Surge Protection	Up to 80V/1ms Transient Power
Others	
TPM	Infineon SLB9665 supports TPM 2.0, LPC interface
Watchdog Timer	Reset : 1 to 255 sec./min. per step
Smart Management	Wake on LAN, PXE supported
HW Monitor	Monitoring temperature, voltages. Auto throttling control when CPU overheats.
Software Support	
OS	Windows 10, Linux
Mechanical	
Dimension (W x D x H)	260.0mm x 240.0mm x 79.0mm (10.24" x 9.45" x 3.11")
Weight	4.5 kg (9.92 lb)
Mounting	• Wallmount by mounting bracket • DIN Rail Mount (Optional) • 2U Rackmount (Optional)
Environment	
Operating Temperature	35W, 65W, 80W, 95W TDP CPU : -20°C to 45°C (-4°F to 113°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% humidity, non-condensing
Relative Humidity	95% at 45°C
Shock /Vibration	• IEC 61373 : 2010 • Railway Applications : Rolling Stock Equipment, Shock and Vibration Tests
EMC	CE, FCC, EN50155, EN50121-3-2

1.3.3 Specifications of ECX-2100A PEG

System	
Processor	Intel® 10th Generation Xeon®/Core™ i9/i7/i5/i3 Processor (Comet Lake-S)
Chipset	Intel® W480E
BIOS	AMI
SIO	IT8786E
Memory	• DDR4 2933MHz (ECC/Non-ECC) • Up to 64GB • 2 260-pin SO-DIMM Socket
I/O Interface	
Serial	4 COM RS-232/422/485 (ESD 8kV)
USB	6 USB 3.2 (External)
Isolated DIO	16 GPIO
LED	Power, HDD, Wireless
SIM Card	3 Nano SIM Card Socket (External)
Expansion	
Mini PCIe	2 Full-size Mini PCIe Socket for PCIe/USB/External SIM Card/mSATA
PCI/PCIe	1 PCIe x16 Slot
M.2	• 1 M.2 Key B Socket (3042/3052) • 1 M.2 Key E Socket (2230)
Graphics	
Graphics Processor	• Intel® UHD Graphics 630 • Independent Graphics : By request
Interface	Up to 7 independent displays : • 1 VGA : Up to 1920 x 1080 @60Hz • 1 DVI-D : Up to 1920 x 1080 @60Hz • 2 DisplayPort : Up to 4096 x 2304 @60Hz • By requested graphic card
Storage	
SATA	2 SATA III (6Gbps) support S/W RAID 0, 1
mSATA	2 SATA III (Mini PCIe Type, 6Gbps)
M.2	1 M.2 Key M Socket (2280, PCIe x4)
Storage Device	• 1 Micro SD Card, Push-in/Push-out Ejector • 2 Front-access 2.5" SSD/HDD Tray
Audio	
Audio Codec	Realtek ALC888S-VD, 7.1 Channel HD Audio
Audio Interface	1 Mic-in, 1 Line-out
Ethernet	
LAN 1	Intel® I219LM GigE LAN supports iAMT 14.0
LAN 2	Intel® I210 GigE LAN

Power	
Input Voltage	12V to 50V, DC-in
Power Interface	3-pin Terminal Block : V+, V-, Frame Ground
Ignition Control	16 Mode Software Ignition Control
Remote Switch	3-pin Terminal Block : On, Off, IGN
Surge Protection	Up to 80V/1ms Transient Power
Others	
TPM	Infineon SLB9665 supports TPM 2.0, LPC interface
Watchdog Timer	Reset : 1 to 255 sec./min. per step
Smart Management	Wake on LAN, PXE supported
HW Monitor	Monitoring temperature, voltages. Auto throttling control when CPU overheats.
Software Support	
OS	Windows 10, Linux
Mechanical	
Dimension (W x D x H)	260.0mm x 240.0mm x 79.0mm (10.24" x 9.45" x 3.11")
Weight	4.5 kg (9.92 lb)
Mounting	• Wallmount by mounting bracket • DIN Rail Mount (Optional) • 2U Rackmount (Optional)
Environment	
Operating Temperature	35W, 65W TDP CPU : -20°C to 45°C (-4°F to 113°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% humidity, non-condensing
Relative Humidity	95% at 45°C
Shock /Vibration	• IEC 61373 : 2010 • Railway Applications : Rolling Stock Equipment, Shock and Vibration Tests
EMC	CE, FCC, EN50155, EN50121-3-2

1.3.4 Specifications of ECX-2100AF PEG

System	
Processor	Intel® 10th Generation Xeon®/Core™ i9/i7/i5/i3 Processor (Comet Lake-S)
Chipset	Intel® W480E
BIOS	AMI
SIO	IT8786E
Memory	• DDR4 2933MHz (ECC/Non-ECC) • Up to 64GB • 2 260-pin SO-DIMM Socket
I/O Interface	
Serial	4 COM RS-232/422/485 (ESD 8kV)
USB	6 USB 3.2 (External)
Isolated DIO	16 GPIO
LED	Power, HDD, Wireless
SIM Card	3 Nano SIM Card Socket (External)
Expansion	
Mini PCIe	2 Full-size Mini PCIe Socket for PCIe/USB/External SIM Card/mSATA
PCI/PCIe	1 PCIe x16 Slot
M.2	• 1 M.2 Key B Socket (3042/3052) • 1 M.2 Key E Socket (2230)
Graphics	
Graphics Processor	• Intel® UHD Graphics 630 • Independent Graphics : By request
Interface	Up to 7 independent displays : • 1 VGA : Up to 1920 x 1080 @60Hz • 1 DVI-D : Up to 1920 x 1080 @60Hz • 2 DisplayPort : Up to 4096 x 2304 @60Hz • By requested graphic card
Storage	
SATA	2 SATA III (6Gbps) support S/W RAID 0, 1
mSATA	2 SATA III (Mini PCIe Type, 6Gbps)
M.2	1 M.2 Key M Socket (2280, PCIe x4)
Storage Device	• 1 Micro SD Card, Push-in/Push-out Ejector • 2 Front-access 2.5" SSD/HDD Tray
Audio	
Audio Codec	Realtek ALC888S-VD, 7.1 Channel HD Audio
Audio Interface	1 Mic-in, 1 Line-out
Ethernet	
LAN 1	Intel® I219LM GigE LAN supports iAMT 14.0
LAN 2	Intel® I210 GigE LAN


Power	
Input Voltage	12V to 50V, DC-in
Power Interface	3-pin Terminal Block : V+, V-, Frame Ground
Ignition Control	16 Mode Software Ignition Control
Remote Switch	3-pin Terminal Block : On, Off, IGN
Surge Protection	Up to 80V/1ms Transient Power
Others	
TPM	Infineon SLB9665 supports TPM 2.0, LPC interface
Watchdog Timer	Reset : 1 to 255 sec./min. per step
Smart Management	Wake on LAN, PXE supported
HW Monitor	Monitoring temperature, voltages. Auto throttling control when CPU overheats.
Software Support	
OS	Windows 10, Linux
Mechanical	
Dimension (W x D x H)	260.0mm x 240.0mm x 79.0mm (10.24" x 9.45" x 3.11")
Weight	4.5 kg (9.92 lb)
Mounting	• Wallmount by mounting bracket • DIN Rail Mount (Optional) • 2U Rackmount (Optional)
Environment	
Operating Temperature	35W, 65W, 80W, 95W TDP CPU : -20°C to 45°C (-4°F to 113°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% humidity, non-condensing
Relative Humidity	95% at 45°C
Shock /Vibration	• IEC 61373 : 2010 • Railway Applications : Rolling Stock Equipment, Shock and Vibration Tests
EMC	CE, FCC, EN50155, EN50121-3-2

1.4 Supported CPU List


Series	CPU	Cores	TDP	Cache	Max. Frequency	ECC Memory
Intel® Xeon®	W-1290E	10	95W	20M	Up to 4.8GHz	Y
	W-1290TE	10	35W	20M	Up to 4.5GHz	Y
	W-1270E	8	80W	16M	Up to 4.8GHz	Y
	W-1270TE	8	35W	16M	Up to 4.4GHz	Y
	W-1250E	6	80W	12M	Up to 4.7GHz	Y
	W-1250TE	6	35W	12M	Up to 3.8GHz	Y
Intel® Core™	i9-10900E	10	65W	20M	Up to 4.7GHz	NA
	i9-10900TE	10	35W	20M	Up to 4.5GHz	NA
	i7-10700E	8	65W	16M	Up to 4.5GHz	NA
	i7-10700TE	8	35W	16M	Up to 4.4GHz	NA
	i5-10500E	6	65W	12M	Up to 4.2GHz	NA
	i5-10500TE	6	35W	12M	Up to 3.7GHz	NA
	i3-10100E	4	65W	6M	Up to 3.8GHz	Y
	i3-10100TE	4	35W	6M	Up to 3.6GHz	Y

1.5 Mechanical Dimension


1.5.1 Dimensions of ECX-2200A PEG

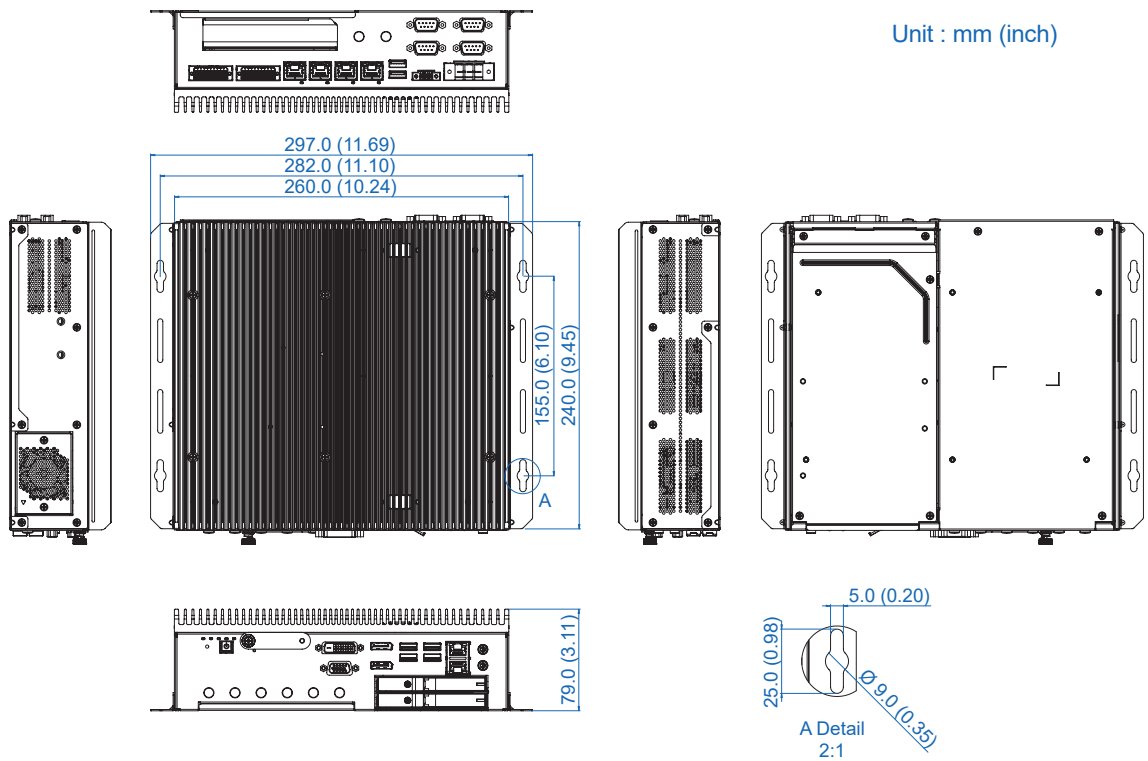


1.5.2 Dimensions of ECX-2200AF PEG

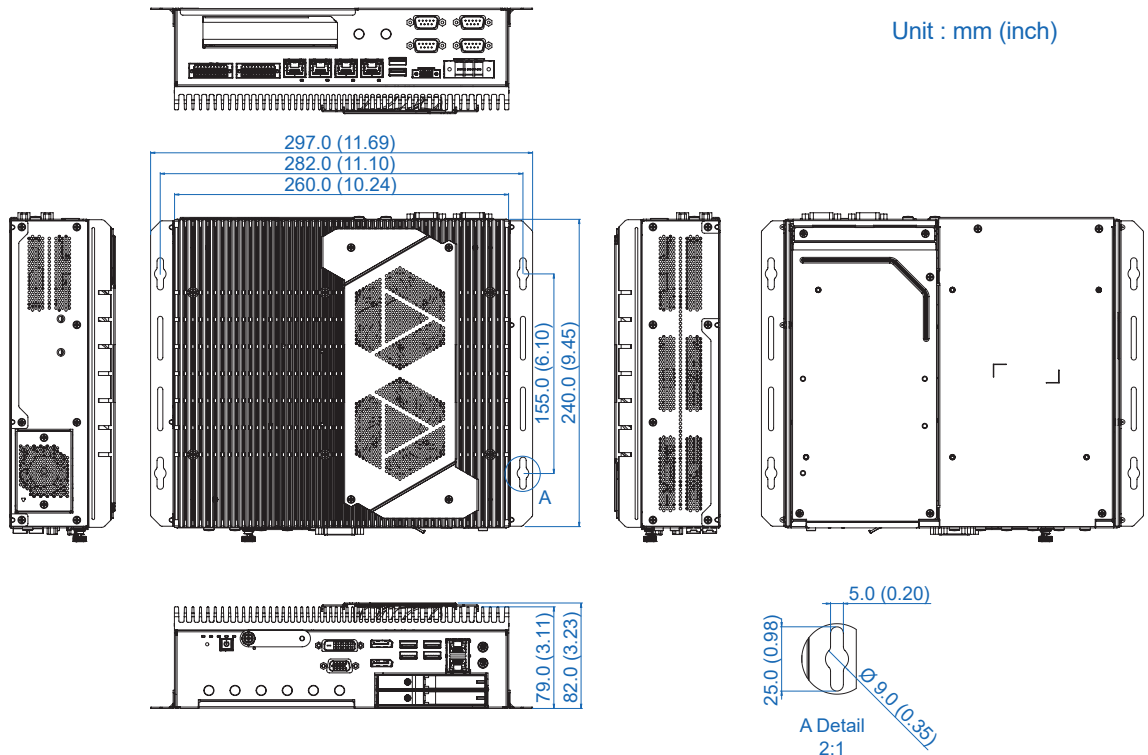

1.5.1 Dimensions of ECX-2100A PEG

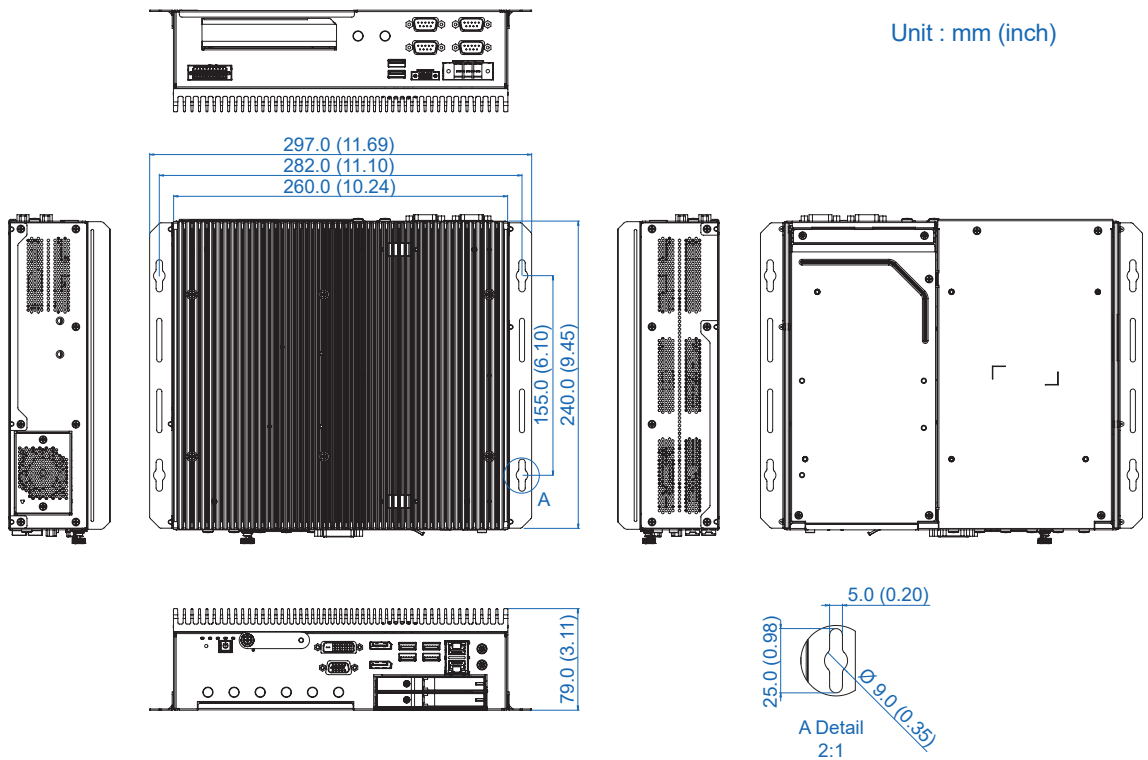

1.5.4 Dimensions of ECX-2100AF PEG

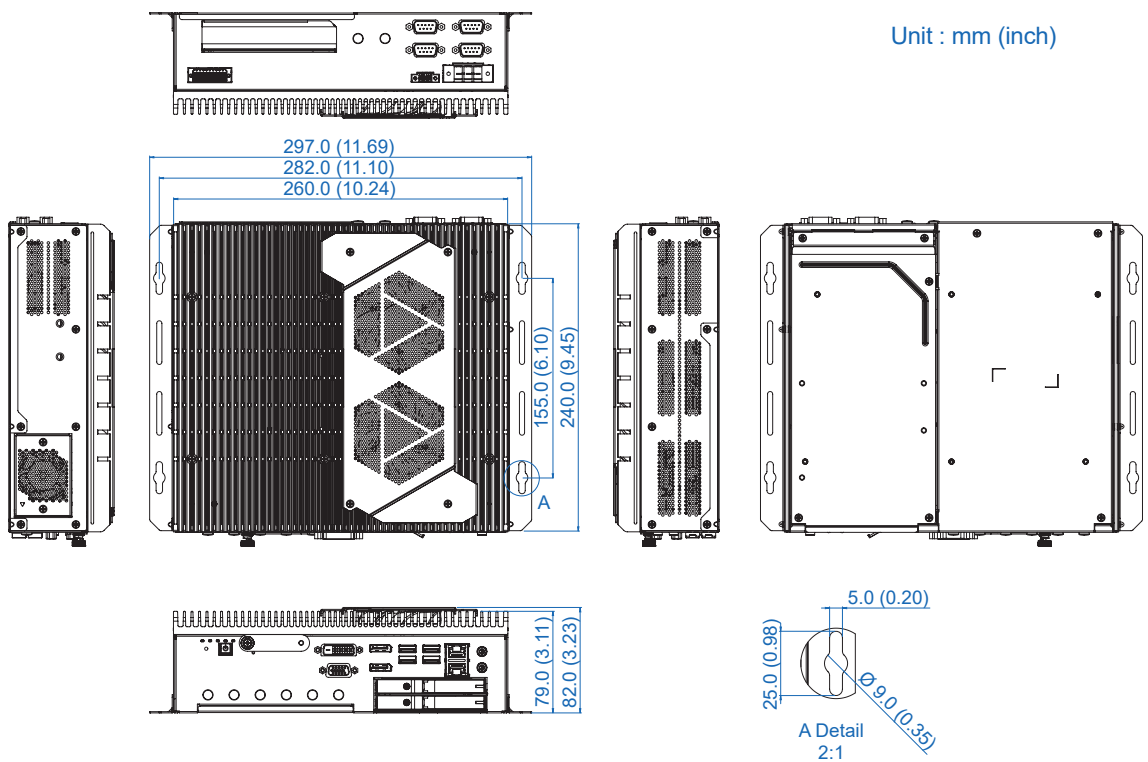

2

GETTING TO KNOW YOUR ECX-2200A/2100A PEG

2.1 Packing List

2.1.1 ECX-2200A PEG Packing List

Item	Description	Qty
1	ECX-2200A PEG AI Computing System (According to the configuration of you order, the ECX-2200A PEG series may contain SSD/HDD and DDR4 SO-DIMM. Please verify these items if necessary.)	1

Item	Description	Outlook	Usage	P/N	Qty
1	P head_ M2.5x6L_Ni		Mini PCIe	53-2426906-30B	2
2	I head_ M3x4L_Ni_Nylok		M.2 Key E 2230 Key M 2280	53-2426206-80B	2
3	I head_ M2x2L_Ni		M.2 Key B 2242, 3050, 3052, 2280	53-M004600-000	1
4	Flat head_ M3x5L_Black_Nylok		Wall mount bracket	53-M004950-310	2
5	Terminal block 3-pin (7.62mm)		DC-IN	51-2611R03-S1N	1
6	Terminal block 3-pin (3.5mm)		Switch	51-2211R03-S1A	1
7	Terminal block 20-pin (2.54mm)		Isolated DIO/ GPIO	51-2112R20-S1D	2
8	Bracket_Wall Mount		Wall Mount	62-03P0591-000	2
9	Key		SSD/HDD tray	N/A	2

2.1.2 ECX-2100A PEG Packing List


Item	Description	Qty
1	ECX-2100A PEG AI Computing System (According to the configuration of you order, the ECX-2100A PEG series may contain SSD/HDD and DDR4 SO-DIMM. Please verify these items if necessary.)	1

Item	Description	Outlook	Usage	P/N	Qty
1	P head_ M2.5x6L_Ni		Mini PCIe	53-2426906-30B	2
2	I head_ M3x4L_ Ni_Nylok		M.2 Key E 2230 Key M 2280	53-2426206-80B	2
3	I head_ M2x2L_ Ni		M.2 Key B 2242, 3050, 3052, 2280	53-M004600-000	1
4	Flat head_ M3x5L_ Black_Nylok		Wall mount bracket	53-M004950-310	2
5	Terminal block 3-pin (7.62mm)		DC-IN	51-2611R03-S1N	1
6	Terminal block 3-pin (3.5mm)		Switch	51-2211R03-S1A	1
7	Terminal block 20-pin (2.54mm)		Isolated DIO/ GPIO	51-2112R20-S1D	1
8	Bracket_Wall Mount		Wall Mount	62-03P0591-000	2
9	Key		SSD/HDD tray	N/A	2

2.2 Front Panel I/O Functions


In Vecow ECX-2200A/2100A PEG series family, all I/O connectors are located on front panel and rear panel. Most of the general connections to computer device, such as USB, LAN Jack, Display, VGA, DVI-D, Display Port and any additional storage, are placed on the front panel.

2.2.1 Reset Tact Switch

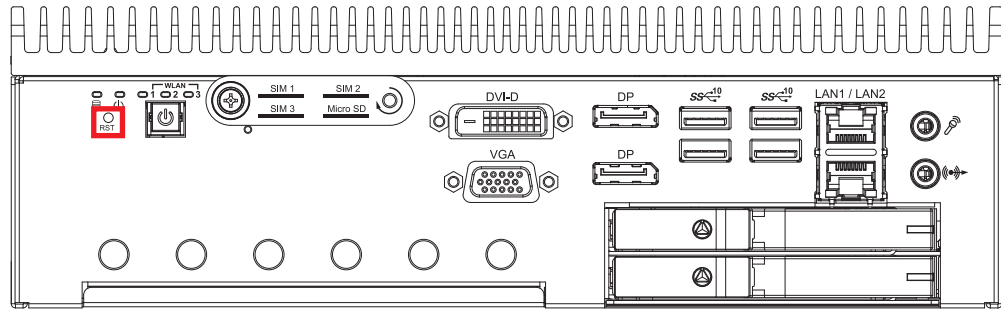

It is a hardware reset switch. Use this switch to reset the system without power off the system. Press the Reset Switch for a few seconds, then reset will be enabled.

2.2.2 Power Button

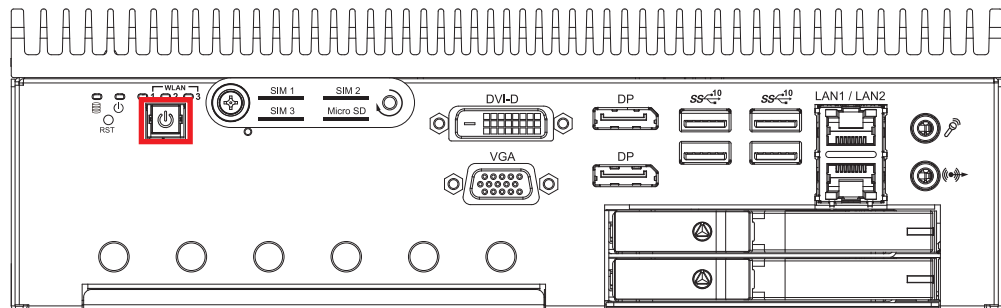


The Power Button is a non-latched switch with dual color LED indication. It indicates power status : S0, S3 and S5. More detail LED indications are listed as follows :

LED Color	Power Status	System Status
Solid Blue	S0	System working
Solid Orange	S3, S5	Suspend to RAM, System off with standby power

To power on the system, press the power button and then the blue LED is lightened. To power off the system, you can either command shutdown by OS operation, or just simply press the power button.

If system error, you can just press the power button for 4 seconds to shut down the machine directly. Please do note that a 4-second interval between each 2 power-on/power-off operation is necessary in normal working status. (For example, once turning off the system, you have to wait for 4 seconds to initiate another power-on operation).

2.2.3 PWR & HDD LED Indicator

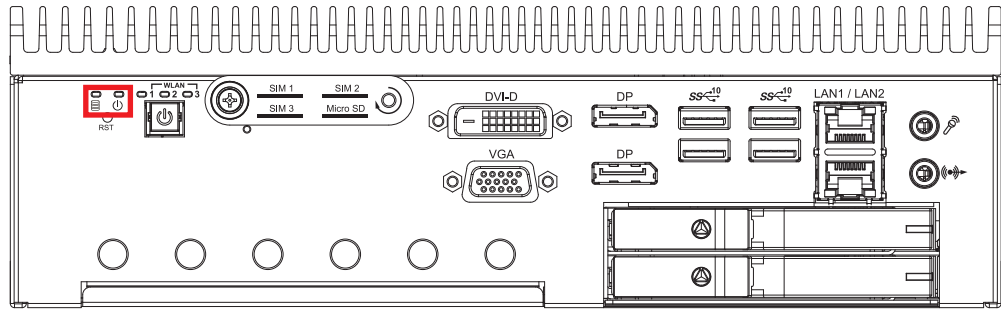


HDD LED/Yellow : A Hard Disk. If the LED is on, it indicates that the system's storage is functional. If it is off, it indicates that the system's storage is not functional. If it is flashing, it indicates data access activities.

Power LED/Green : If the LED is solid green, it indicates that the system is powered on.


LED Color	Indication	System Status
Yellow	HDD	- On/Off : Storage status, function or not. - Twinkling : Data transferring.
Green	Power	System power status (on/off)

2.2.4 DVI-D Connector

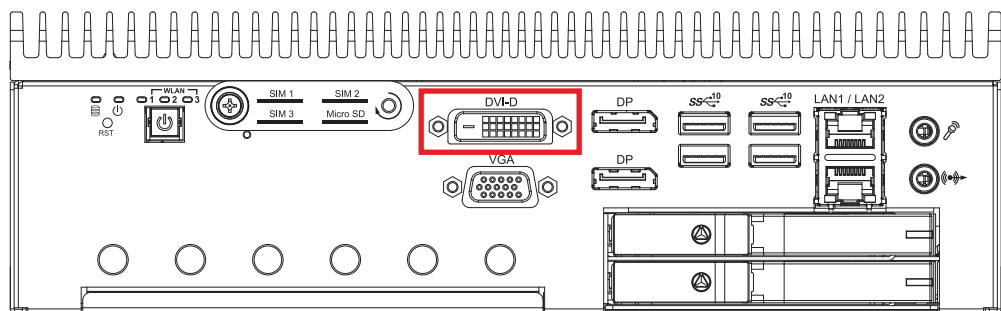


The DVI-D connector on the front panel supports DVI display. This connector can either output DVI signal. The DVI output mode supports up to 1920 x 1200 resolution and output mode supports up to 1920 x 1200 resolution. The DVI is automatically selected according to the display device connected. You will need a DVI-D cable when connecting to a display device.


2.2.5 VGA Connector

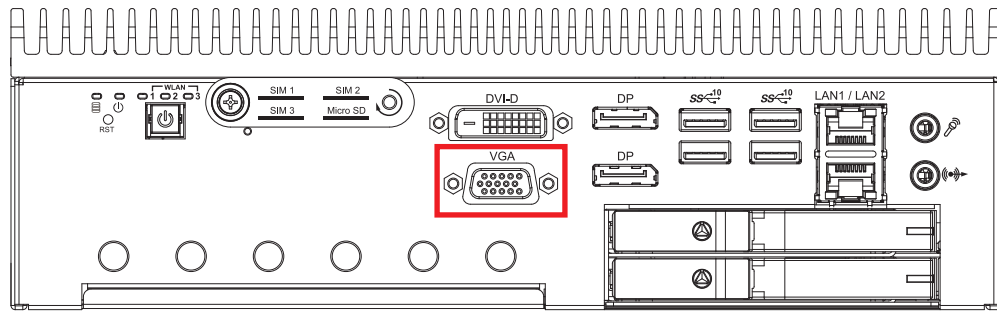

The ECX-2200A/2100A PEG series comes with a DB15 female connector on the front panel to connect a VGA monitor. To ensure that the monitor image remains clear, be sure to tighten the monitor cable after connecting it to the ECX-2200A/2200MA/2100A. The VGA output mode supports up to 1920x1200 resolutions. The pin assignments of the VGA connector are shown below.

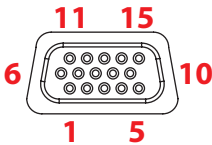
	Pin No.	Description	Pin No.	Description
	1	Red Color Signal	2	Green Color Signal
	3	Blue Color Signal	4	NC
	5	Ground	6	Ground
	7	Ground	8	Ground
	9	VCC	10	Ground
	11	NC	12	DDC-DATA
	13	H-Sync.	14	V-Sync.
	15	DDC-CLK		

2.2.6 DisplayPort

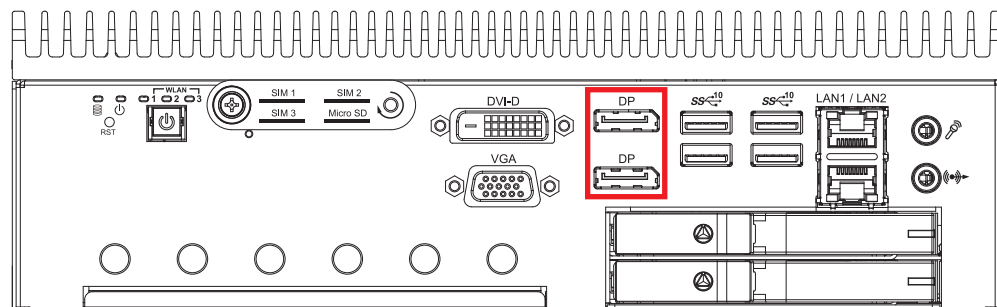


Onboard Display Port support auxiliary channel dual mode, connection supports up to 4096x2304 resolution at 60 Hz.

2.2.7 USB 3.2

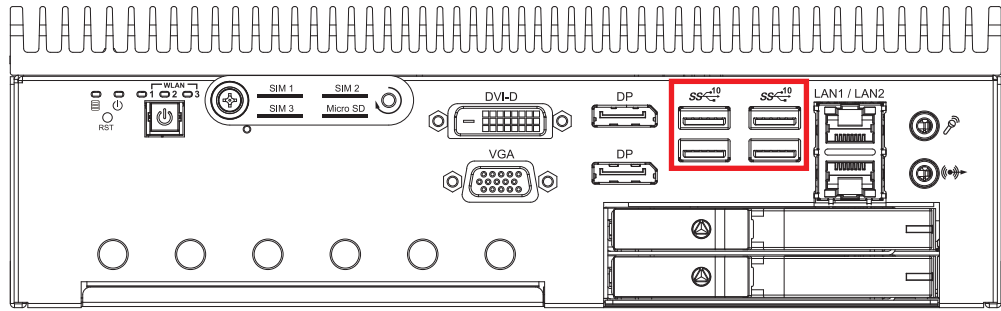


There are 4 USB 3.2 connections available supporting up to 10GB per second data rate in the front side of ECX-2200A/2100A PEG series. It also compliant with the requirements of Super Speed (SS), high speed (HS), full speed (FS) and low speed (LS).



2.2.8 WLAN LED, Mini PCIe, SIM Card, Micro SD Comparison

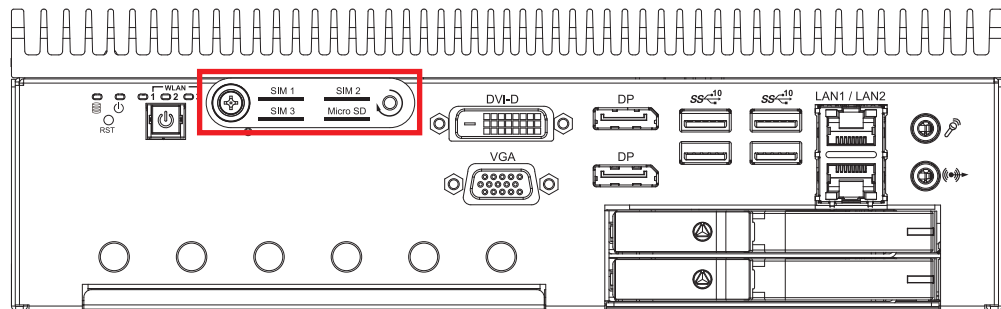

Mini PCIe Slot/ SIM Slot/ Micro SD/ WLAN LED Mapping Table :

MPCle/M.2	Nano SIM	LED
MPCle 1	SIM 1	1
MPCle 2	SIM 2	2
M.2 KEY B	SIM 3	3
Micro SD		

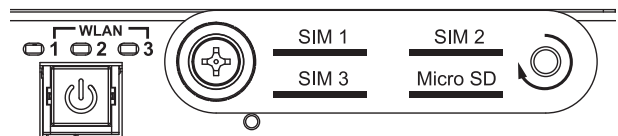


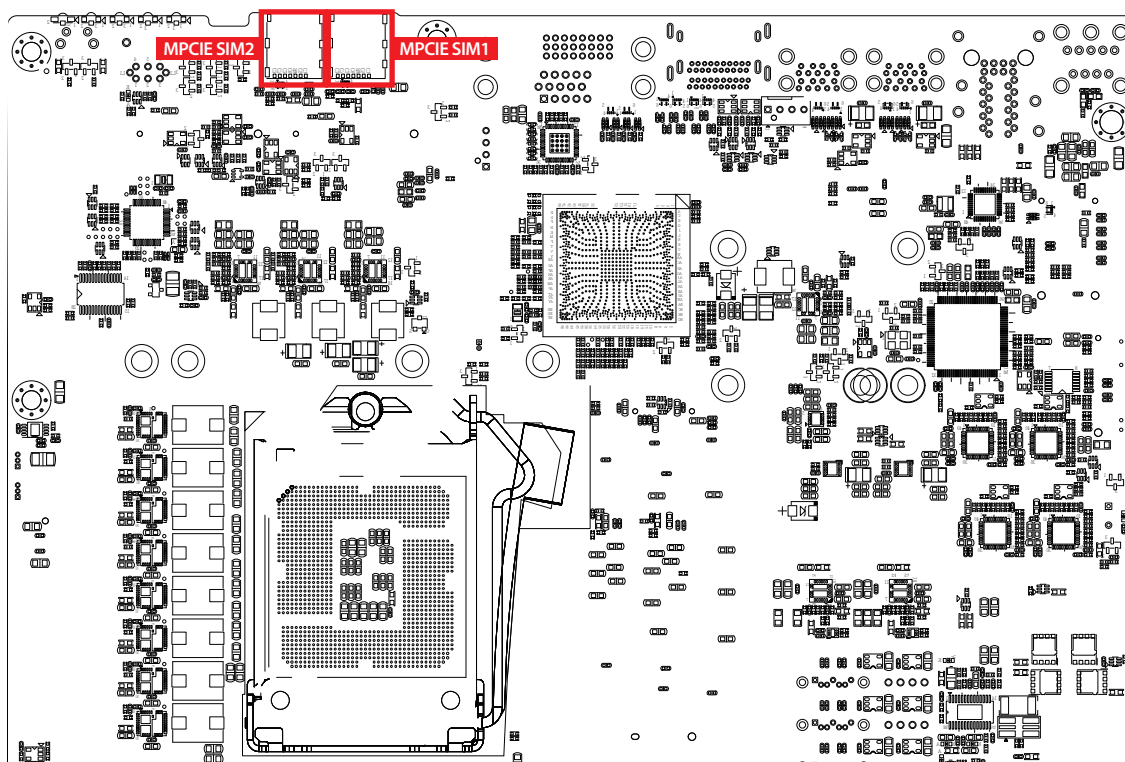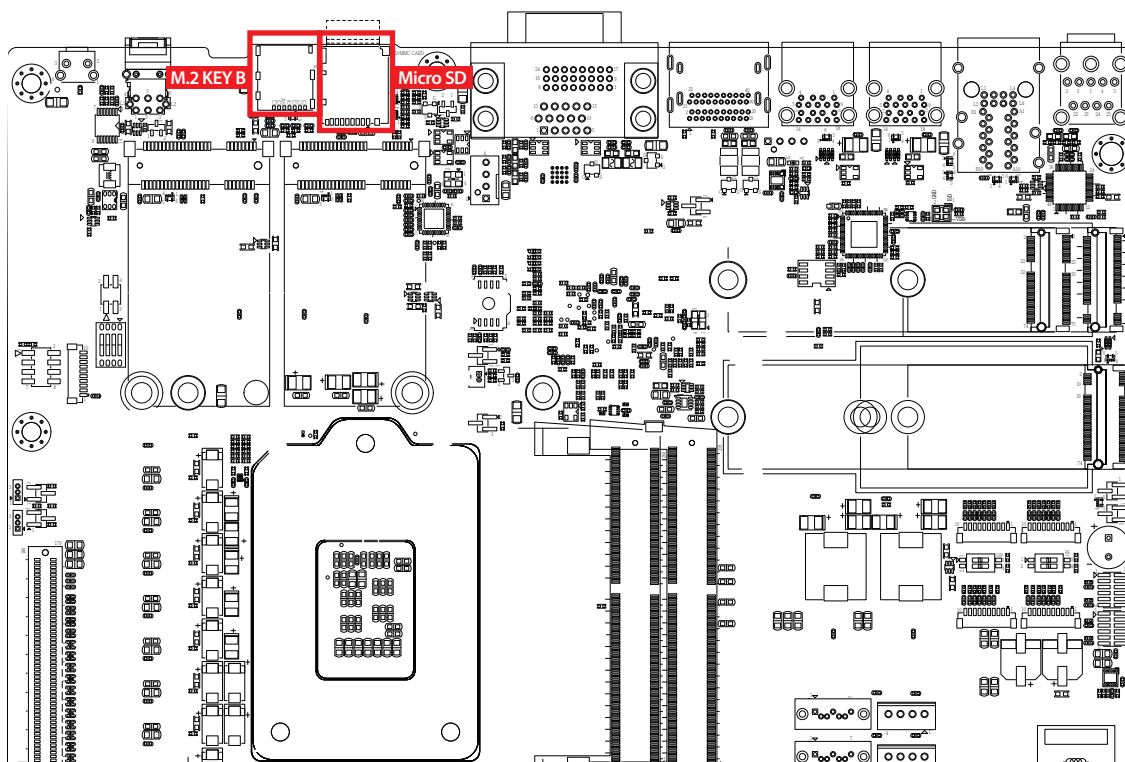

Note :

The SIM card sockets do not support hot-plug. Please make sure to unplug the system power before inserting the SIM card(s).

2.2.9 Ethernet Port

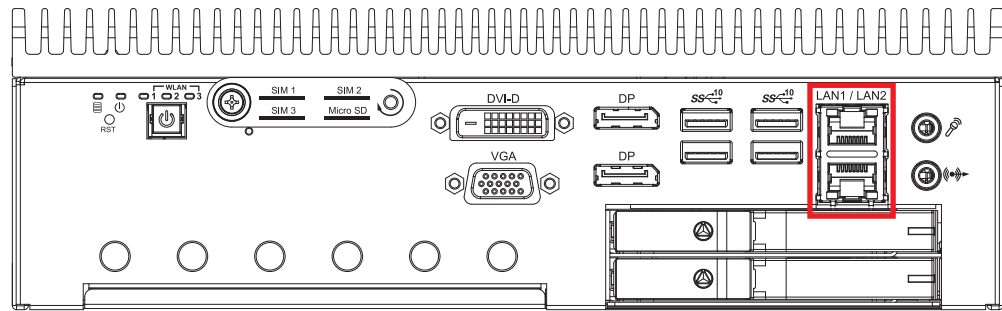

There are 2 8-pin RJ-45 jacks supporting 10/ 100/1000 Mbps Ethernet connections in the front side. LAN 1 is powered by Intel i219 Ethernet Phy; LAN 2 is powered by Intel I210 Ethernet engine. When both LAN 1 and LAN 2 work in normal status, iAMT 11.0 function is enabled.


Using suitable RJ-45 cable, you can connect the system to a computer, or to any other devices with Ethernet connection, for example, a hub or a switch. Moreover, both of LAN 1 and LAN 2 supports Wake on LAN and Pre-boot functions. The pin-outs of LAN 1 and LAN 2 are listed as follows:

Pin No.	10/100 Mbps	1000Mbps
1	E_TX+	MDI0_P
2	E_TX-	MDI0_N
3	E_RX+	MDI1_P
4	----	MDI2_P
5	-----	MDI2_N
6	E_RX-	MDI1_N
7	-----	MDI3_P
8	-----	MDI3_N


Each LAN port is supported by standard RJ-45 connector with LED indicators to present Active/ Link/ Speed status of the connection.

The LED indicator on the right bottom corner lightens in solid green when the cable is properly connected to a 100Mbps Ethernet network; The LED indicator on the right bottom corner lightens in solid orange when the cable is properly connected to a 1000Mbps Ethernet network; The left LED will keep twinkling/off when Ethernet data packets are being transmitted/received.

LED Location	LED Color	10Mbps	100Mbps	1000Mbps
Right	Green/ Orange	Off	Solid Green	Solid Orange
Left	Green	Twinkling Green	Twinkling Green	Twinkling Green

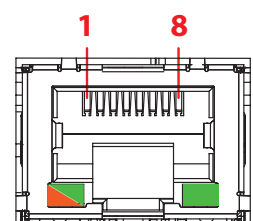


2.2.10 Audio Connector

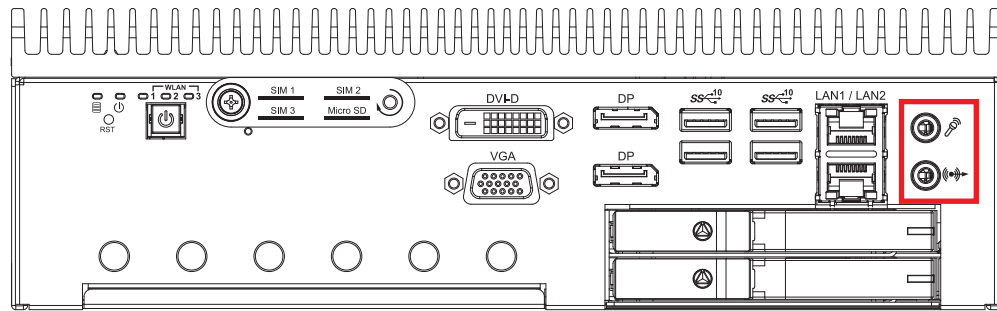

There are 2 audio connectors, Mic-in and Line-out, in the front side of ECX-2200A/2100A PEG series. Onboard Realtek ALC888S-VD audio codec supports 7.1 channel HD audio and fully complies with Intel® High Definition Audio (Azalia) specifications.

To utilize the audio function in Windows platform, you need to install corresponding drivers for both Intel Sunrise Point chipset and Realtek ALC888S-VD codec.


2.2.11 SSD/HDD Tray

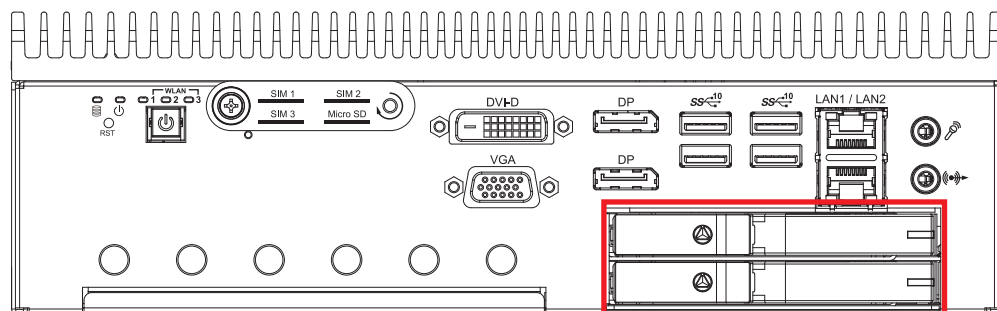

There are 4 front-access 2.5" SSD/HDD trays in the front side of ECX-2200A/2100A PEG series. Just trigger to open the SSD/HDD tray, up to 4TB is available.

2.3 Rear Panel I/O & Functions


2.3.1 Power Terminal Block

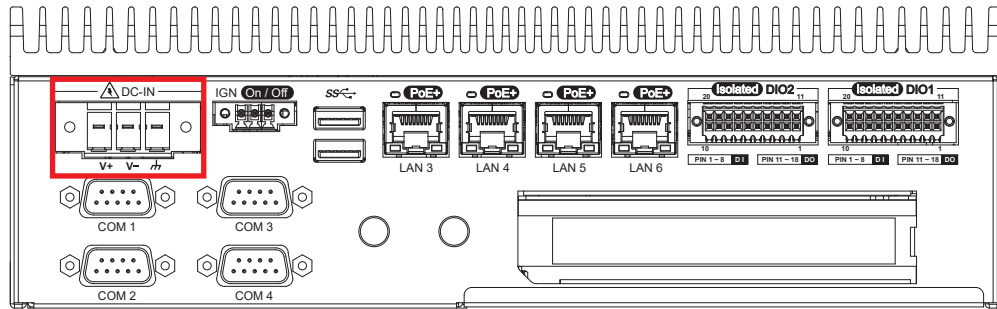

This system supports 9V to 50V DC power input by terminal block in the rear side. In normal power operation, power LED lightens in solid green. Supports up to 80V surge protection.

Pin No.	Definition	Pin No.	Definition
1	V+	2	V-
3	Chassis Ground		

2.3.2 Remote Power On/Off Switch & IGNITION Terminal Block

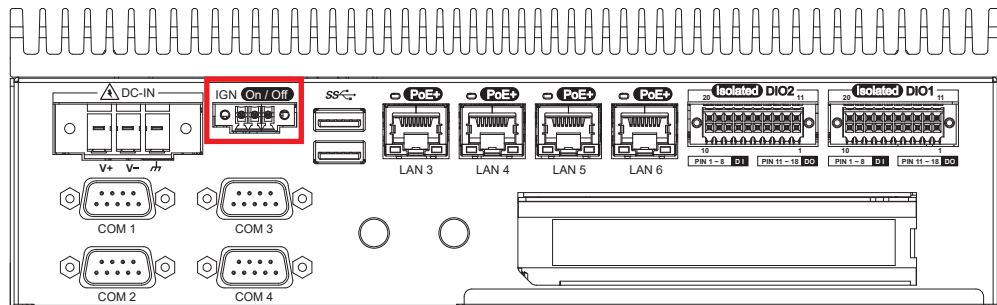


It is a 2-pin power-on or power-off switch through Phoenix Contact terminal block. You could turn on or off the system power by using this contact. This terminal block supports dual function of soft power-on/power-off (instant off or delay 4 second), and suspend mode.

Pin No.	Definition	Pin No.	Definition
1	Ignition	2	SW+
3	SW-		


2.3.3 Isolated DIO

2.3.3.1 ECX-2200A/2200MA PEG Series

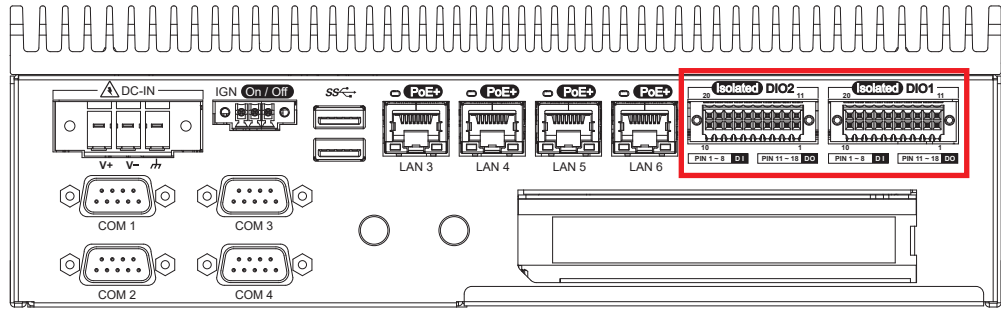

There is a 16-bit (8-bit DI, 8-bit DO) connectors in the rear side. DI/DIO support NPN(sink) and PNP(Source) mode, Each DI channel is equipped with a photocouper for isolated protection. Each DO with isolator chip, Config by a Jumper for each DIO connector. DO Safety-Related Certifications :

- 4242-VPK Basic Isolation per DIN V VDE V 0884-10 and DIN EN 61010-1
- 3-KVRMS Isolation for 1 minute per UL 1577
- CSA Component Acceptance Notice 5A, IEC 60950-1 and IEC 61010-1 End Equipment Standards
- GB4943.1-2011 CQC Certified

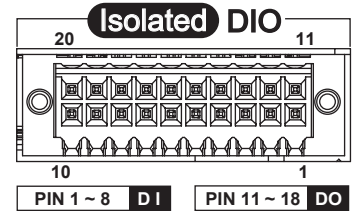


DIO Connectors pin out :

DIO	Pin No.	Definition	Function
DIO1	1	INPUT 0	SIO_GPI70
	2	INPUT 1	SIO_GPI71
	3	INPUT 2	SIO_GPI72
	4	INPUT 3	SIO_GPI73
	5	INPUT 4	SIO_GPI74
	6	INPUT 5	SIO_GPI75
	7	INPUT 6	SIO_GPI76
	8	INPUT 7	SIO_GPI77
	9	DI_COM	-
	10	DIO_GND	-
	11	OUTPUT 0	SIO_GPO80
	12	OUTPUT 1	SIO_GPO81
	13	OUTPUT 2	SIO_GPO82
	14	OUTPUT 3	SIO_GPO83
	15	OUTPUT 4	SIO_GPO84
	16	OUTPUT 5	SIO_GPO85
	17	OUTPUT 6	SIO_GPO86
	18	OUTPUT 7	SIO_GPO87
	19	DIO_GND	-
	20	External 6-40VDC (NPN) External 6-48VDC (PNP)	-


DIO	Pin No.	Definition	Function
DIO2	1	INPUT 0	SIO_GPI37
	2	INPUT 1	SIO_GPI56
	3	INPUT 2	SIO_GPI57
	4	INPUT 3	SIO_GPI15
	5	INPUT 4	SIO_GPI16
	6	INPUT 5	SIO_GPI35
	7	INPUT 6	SIO_GPI46
	8	INPUT 7	SIO_GPI11
	9	DI2_COM	-
	10	DIO2_GND	-
	11	OUTPUT 0	SIO_GPO22
	12	OUTPUT 1	SIO_GPO26
	13	OUTPUT 2	SIO_GPO64
	14	OUTPUT 3	SIO_GPO65
	15	OUTPUT 4	SIO_GPO41
	16	OUTPUT 5	SIO_GPO40
	17	OUTPUT 6	SIO_GPO52
	18	OUTPUT 7	SIO_GPO27
	19	DIO2_GND	-
	20	External 6-40VDC (NPN) External 6-48VDC (PNP)	-

DI reference circuit :

Sink Mode
(NPN)

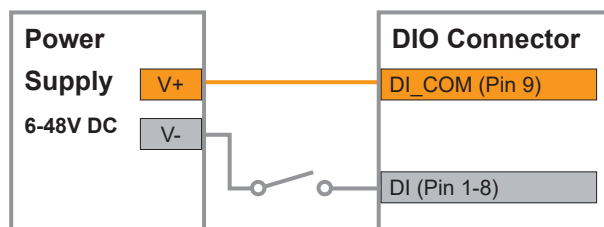


Source Mode
(PNP)

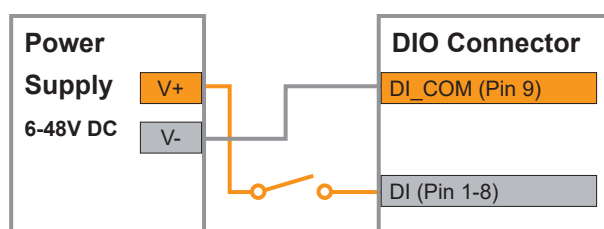


DO reference circuit :


Sink Mode
(NPN, Default)

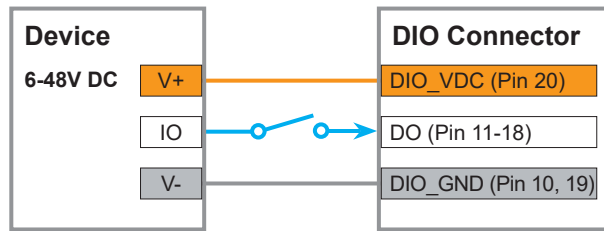


Source Mode
(PNP)

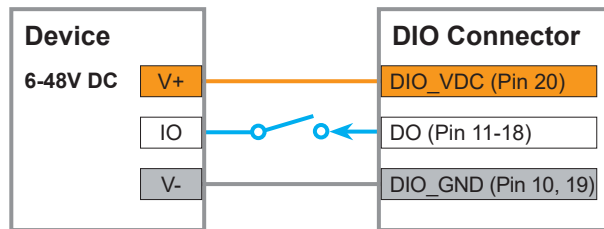

2.3.3.2 ECX-2100A PEG series

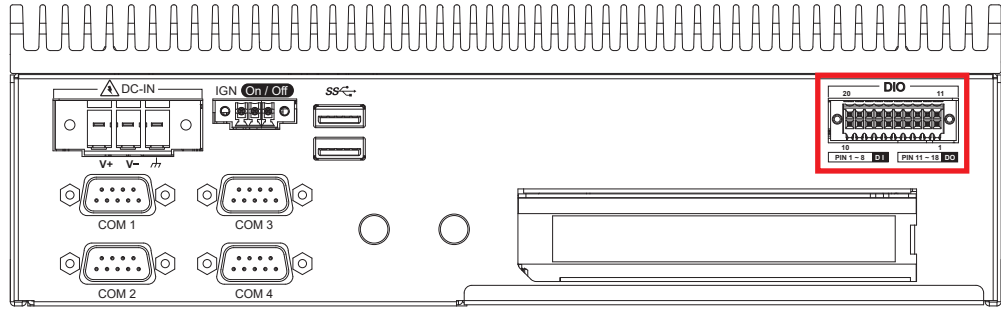


- The system offers sixteen programmable I/O (3.3V Level)
- If the GPIO is logic high, it indicates that the mapping SIO GPIO pin is logic high level.
- If the GPIO is logic low, it indicates that the mapping SIO GPIO pin is logic low level.

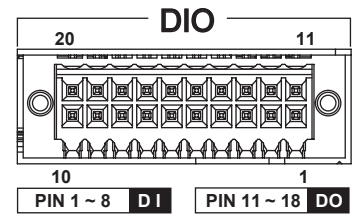

GPIO Connectors pin assignments

Pin No.	Definition	Pin No.	Definition
1	SIO_GPI80	11	SIO_GPO70
2	SIO_GPI81	12	SIO_GPO71
3	SIO_GPI82	13	SIO_GPO72
4	SIO_GPI83	14	SIO_GPO73
5	SIO_GPI84	15	SIO_GPO74
6	SIO_GPI85	16	SIO_GPO75
7	SIO_GPI86	17	SIO_GPO76
8	SIO_GPI87	18	SIO_GPO77
9	-----	19	GND
10	GND	20	-----

2.3.4 Serial Port

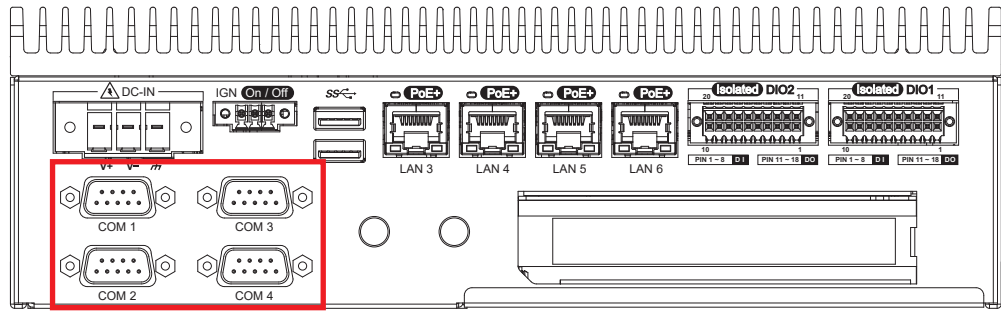

Serial port 1 to 4 (COM 1 to 4) can be configured for RS-232, RS-422, or RS-485 with auto flow control communication. The default definition of COM 1 and COM 2 is RS-232, if you want to change to RS-422 or RS-485, you can find the setting in BIOS.

BIOS Setting	Function
COM 1	RS-232
COM 2	RS-422(5-wire)
COM 3	RS-485
COM 4	RS-485 w/z auto-flow control


The pin assignments are listed in the following table :

Serial Port	Pin No.	RS-232	RS-422 (5-wire)	RS-485 (3-wire)
1 to 4	1	DCD	TXD-	DATA-
	2	RXD	TXD+	DATA+
	3	TXD	RXD+	-----
	4	DTR	RXD-	-----
	5	GND	GND	GND
	6	DSR	-----	-----
	7	RTS	-----	-----
	8	CTS	-----	-----
	9	RI	-----	-----

COM 1 to COM 4 MB connector table :


COM Port	MB Connector	COM Port	MB Connector
COM 1	CN61	COM 2	CN62
COM 3	CN63	COM 4	CN64

CN	Pin No.	Signal Name
CN61 to CN64	1	NC
	2	GND
	3	RI
	4	DTR
	5	CTS
	6	TXD
	7	RTS
	8	RXD
	9	DSR
	10	DCD

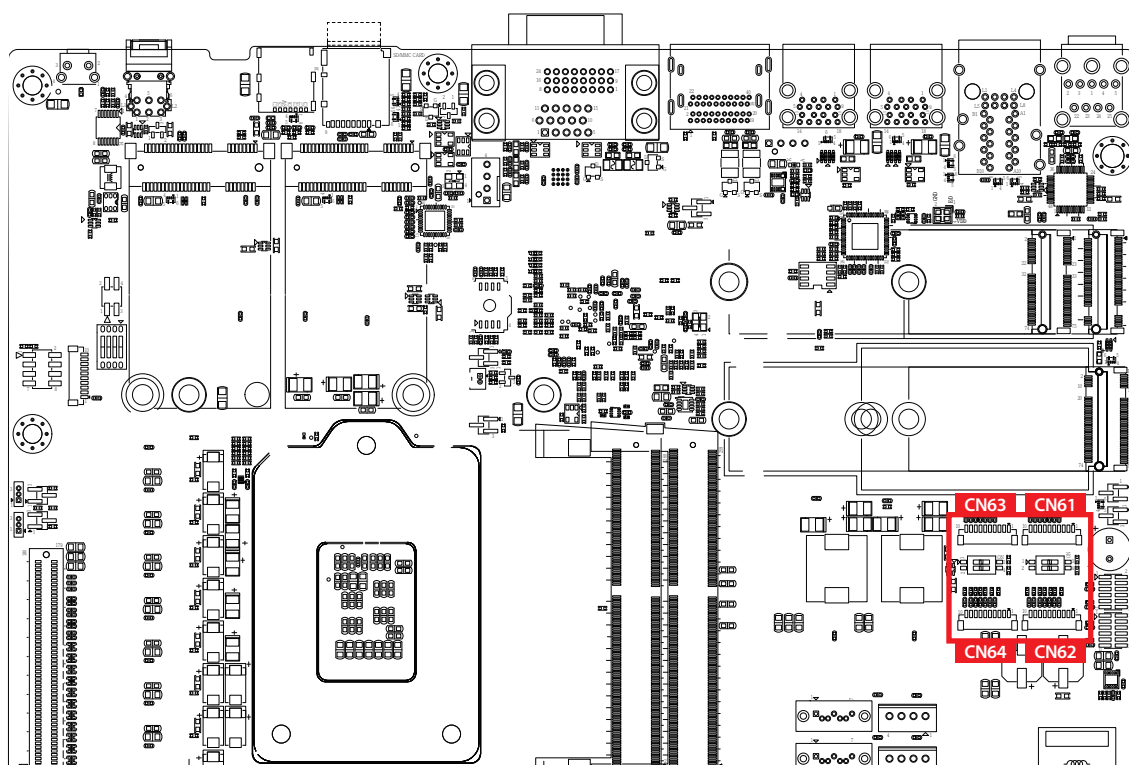

2.3.5 PoE Ports

2.3.5.1 ECX-2200A PEG

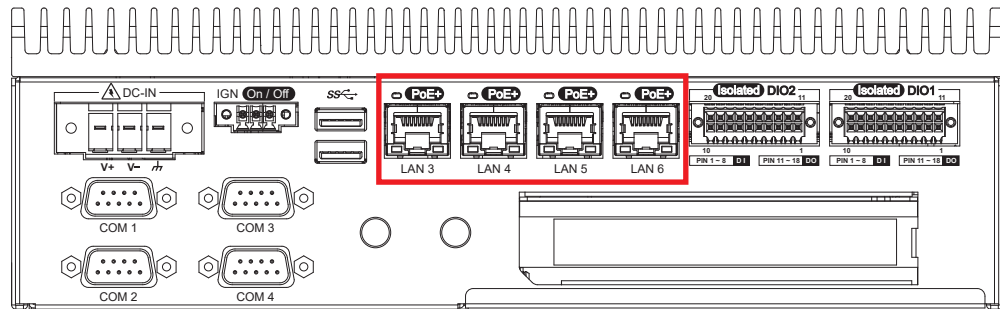

There are 4 RJ45 connectors in the rear side of ECX-2200A PEG. It supports IEEE 802.3at (PoE+) Power over Ethernet (PoE) connection delivering up to 30W/54V per port and 1000BASE-T gigabit data signals over standard Ethernet Cat 5/Cat 6 cable.

Each PoE connection is powered by Intel® I210 Gigabit Ethernet controller and independent PCI express interface to connect with multi-core processor for network and data transmit optimization. Only when PoE port starts to supply power to power devices, the dedicated LED will be lightened.

PS. Suggest to use PoE function when power input is over 12V.

The pin-outs of LAN 3 and LAN 6 are listed as follows :


Pin No.	10/100 Mbps	1000Mbps	PoE
1	E_TX+	MDI0_P	PoE+
2	E_TX-	MDI0_N	PoE+
3	E_RX+	MDI1_P	PoE-
4	----	MDI2_P	----
5	----	MDI2_N	----
6	E_RX-	MDI1_N	PoE-
7	----	MDI3_P	----
8	----	MDI3_N	----

Each LAN port is supported by standard RJ-45 connector with LED indicators to present Active/Link/Speed status of the connection.

The LED indicator on the left bottom corner lightens in solid green when the cable is properly connected to a 100 Mbps Ethernet network; The LED indicator on the left bottom corner lightens in solid orange when the cable is properly connected to a 1000 Mbps Ethernet network; The right LED will keep twinkling yellow when Ethernet data packets are being transmitted/ received.


LED Location	LED Color	10Mbps	100Mbps	1000Mbps
Right	Yellow	Twinkling Yellow	Twinkling Yellow	Twinkling Yellow
Left	Green/ Orange	Off	Solid Green	Solid Orange

POE LED	LED Color	POE Status
LED 1 - 4	Solid Green	POE ON

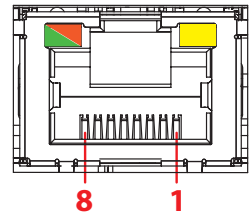


2.4 Main Board Expansion Connectors

2.4.1 Top View (Component Side) of ECX-2200A/2100A PEG Main Board With Connector Location

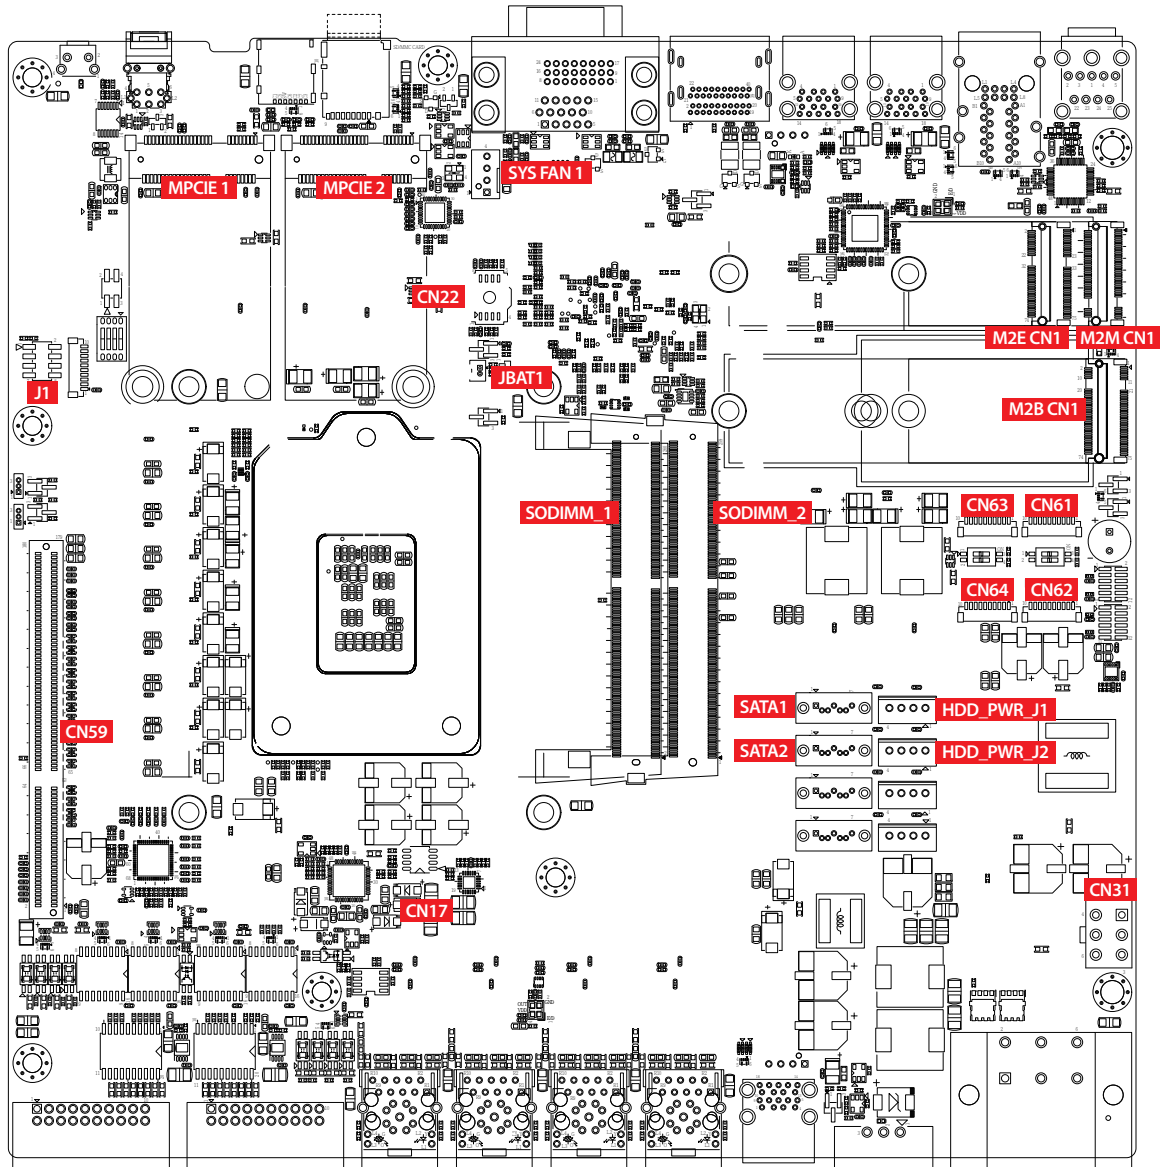


2.4.2 Bottom View (Solder Side) of ECX-2200A/2100A PEG Main Board With Connector Location

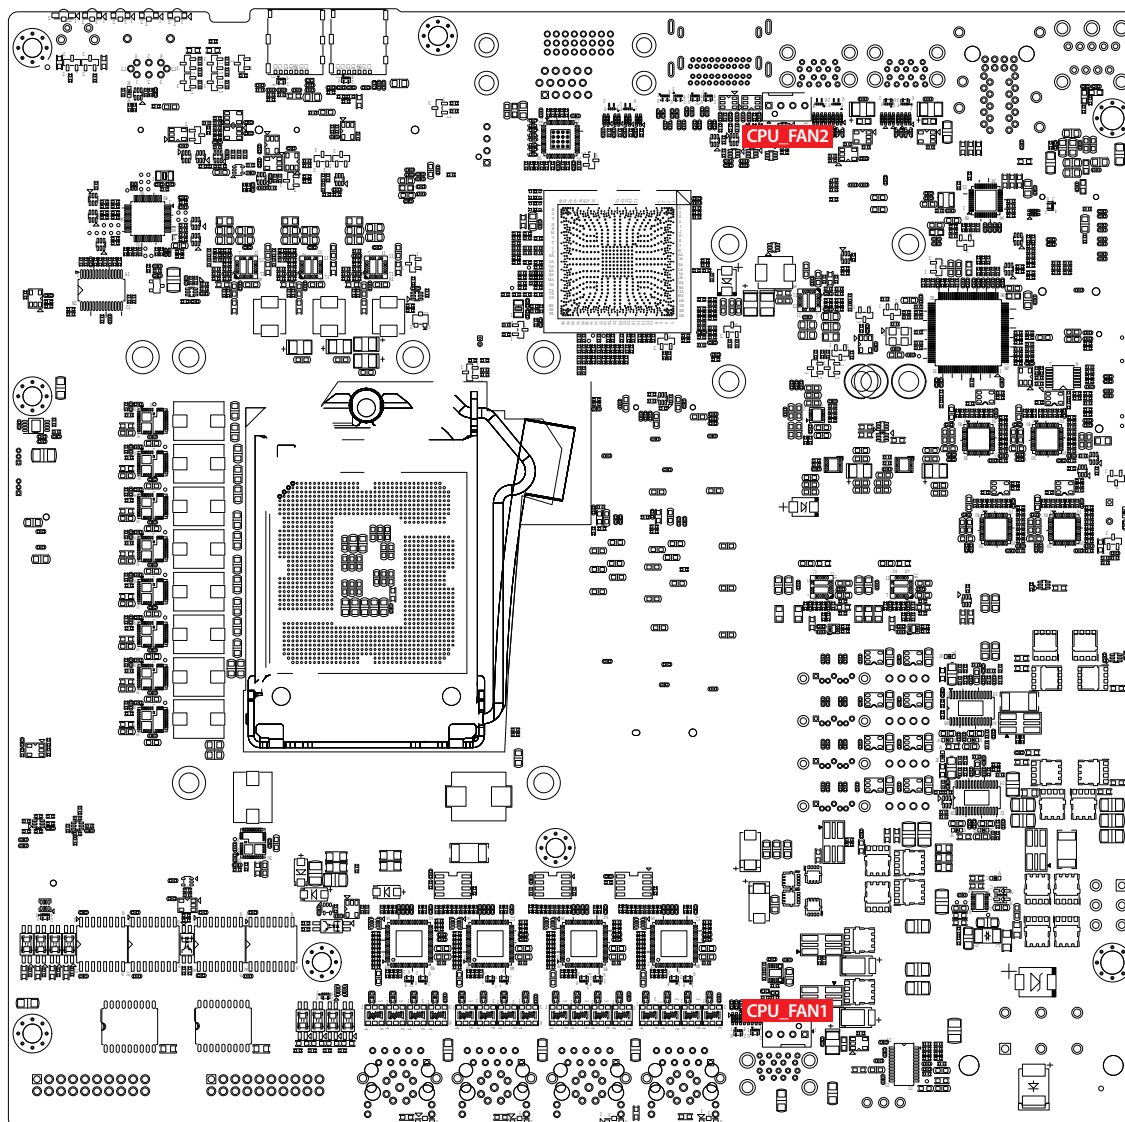


2.4.3 J1 : Miscellaneous Pin Header

2.0mm 2x4p header


This pin header can be used as a backup for following functions, hard drive LED indicator, reset button, power LED indicator, and power-on/off button, which already can be accessed by front panel and top panel. The pin-outs of Miscellaneous port are listed in following table :

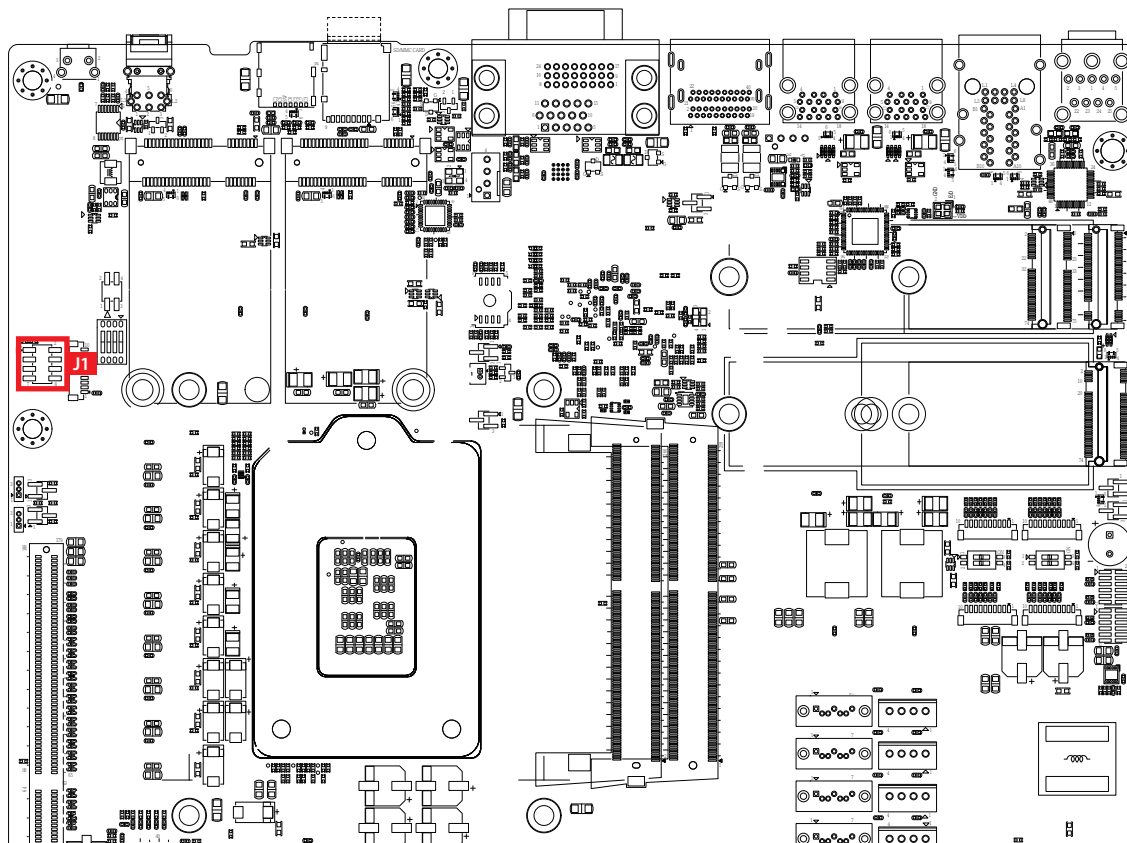


	Group	Pin No.	Description
	HDD LED	1	HDD_LED_P
		3	HDD_LED_N
	RESET BUTTON	5	FP_RST_BTN_N
		7	Ground
	POWER LED	2	PWR_LED_P
		4	PWR_LED_N
	POWER BUTTON	6	FP_PWR_BTN_IN
		8	Ground

2.4.4 SATA1, SATA2 : SATA III Connector


There are 2 onboard high performance Serial ATA III (SATA III) on ECX-2200A/2100A PEG. It supports higher storage capacity with less cabling effort and smaller required space. The pin assignments of SATA1 to SATA2 are listed in the following table :

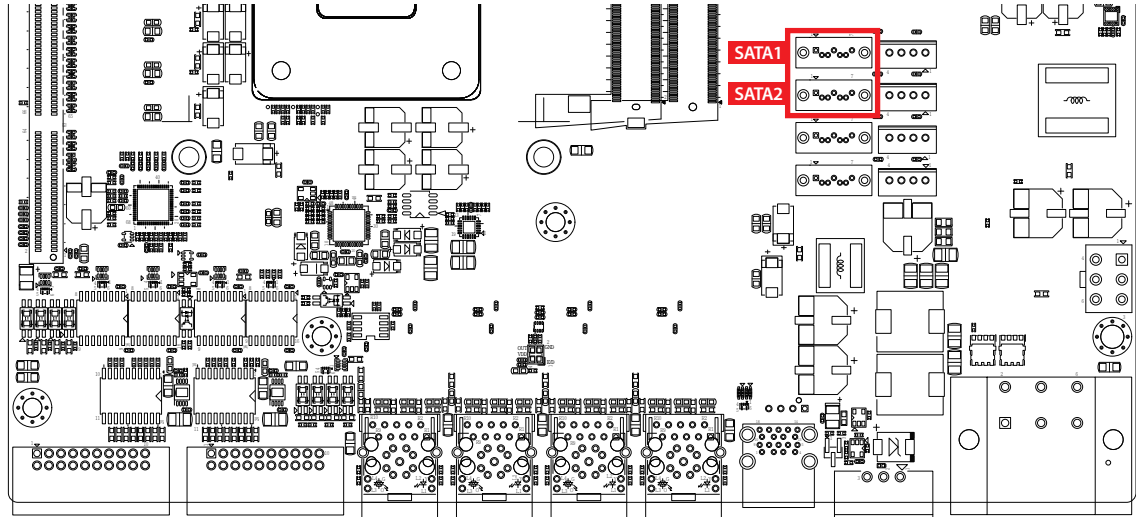

	Pin No.	Definition	Pin No.	Definition
	1	GND	5	RXN
	2	TXP	6	RXP
	3	TXN	7	GND
	4	GND		

2.4.5 HDD_PWR_J1, HDD_PWR_J2 : SATA Power Connector


The ECX-2200A/2100A PEG also equip with a SATA power connector. The one port supports 5V (Up to 2A) and 12V (Up to 2A) current to the hard drive or SSD. The pin assignments of HDD_PWR_J1 to HDD_PWR_J2 are listed in the following table :

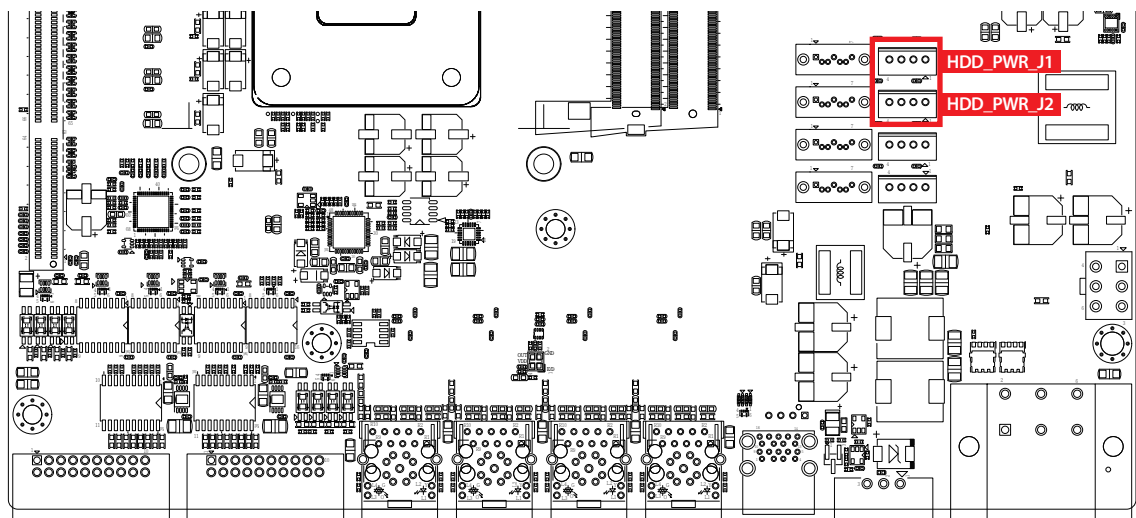

	Pin No.	Definition	Pin No.	Definition
	1	+12V	3	GND
	2	GND	4	+5V

2.4.6 SODIMM_1, SODIMM_1 : DDR4 Slot


There are 2 DDR4 channel onboard, support DDR4 2933, max 64GB
Each channel 32GB

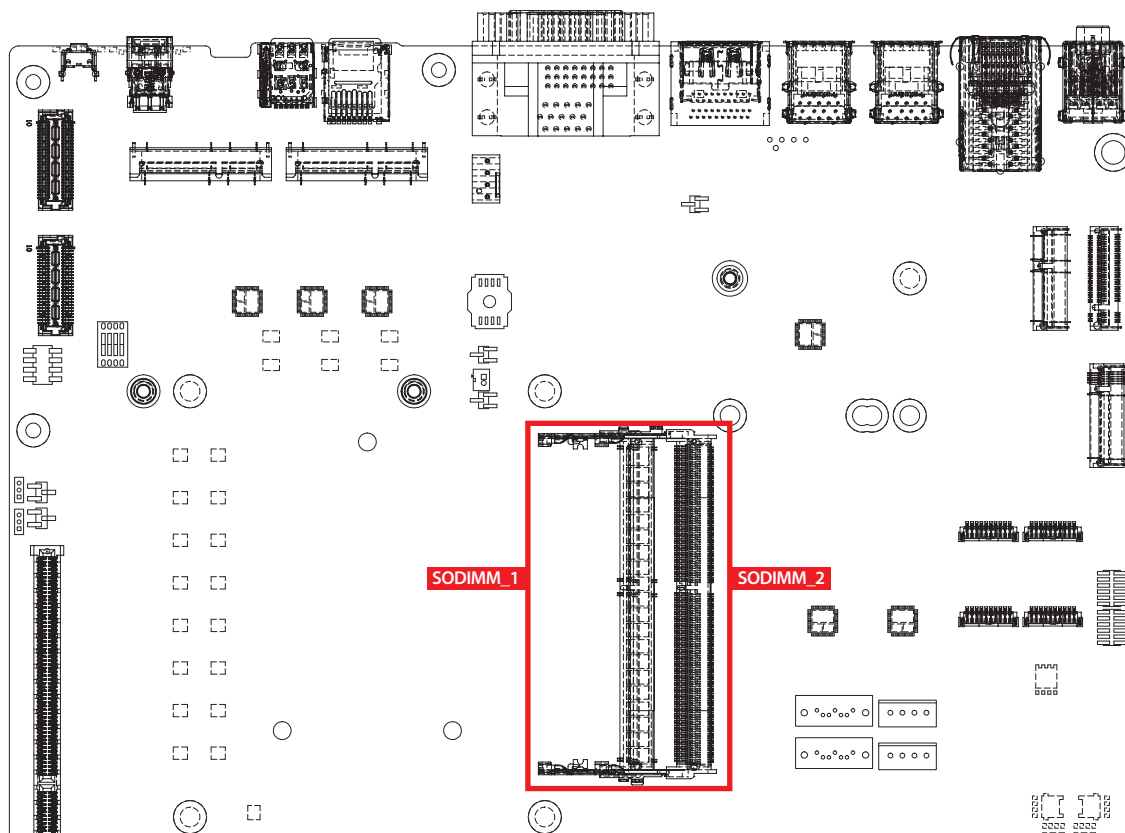

Slot	Description
SODIMM_1	DDR4 Channel A
SODIMM_2	DDR4 Channel B


2.4.7 CN22 : BIOS Socket


If the BIOS needs to be changed, please contact the Vecow RMA service team.

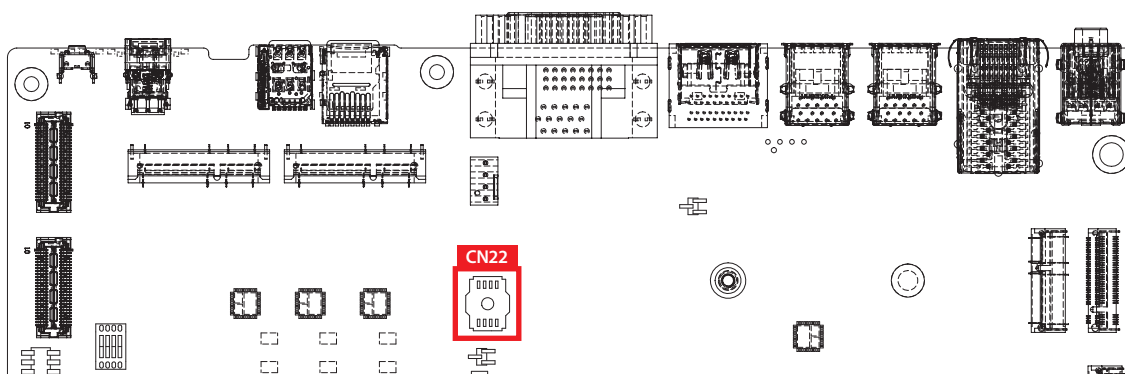

2.4.8 CN31 : UPS Power Connector


For UPS module optional, we use 4.2mm 3x2p power connector.

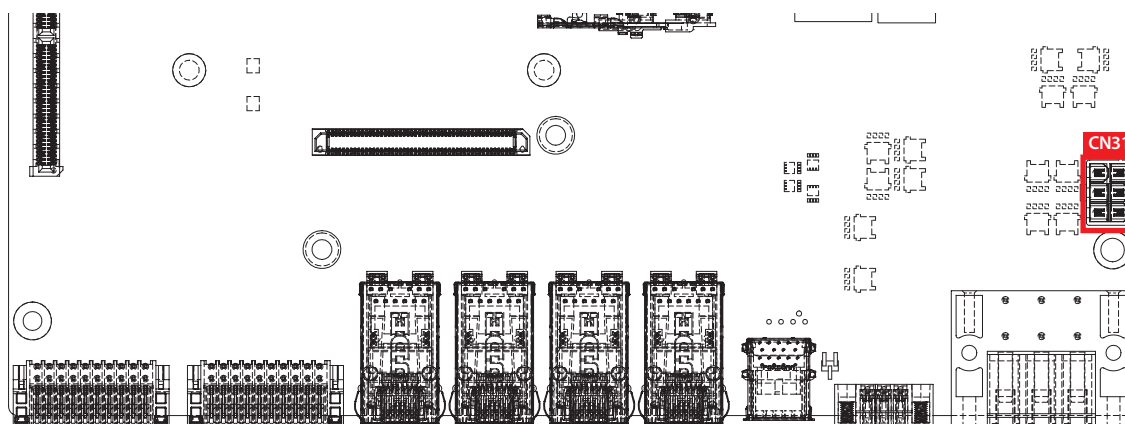

	Pin No.	Description	Pin No.	Description
	1	+VDC_IN (9~50V, Max.9A)	2	+VDC_IN (9~50V, Max.9A)
	3	+VDC_IN (9~50V, Max.9A)	4	Ground
	5	Ground	6	Ground

2.4.9 Mini PCIe : MPCle_1, MPCle_2

Standard full length mini PCIe slot.

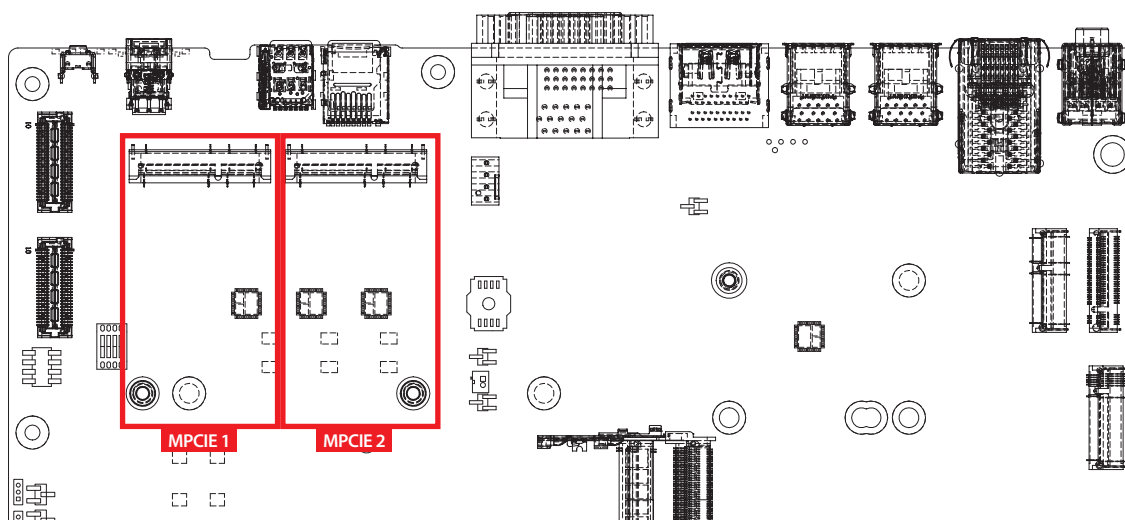


The pin assignments of MPCle 1 ted in the following table :

Pin No.	Signal Name	Pin No.	Signal Name
51	Reserved	52	+3.3Vaux
49	Reserved	50	GND
47	Reserved	48	+1.5V
45	Reserved	46	Reserved

Pin No.	Signal Name	Pin No.	Signal Name
43	GND	44	Reserved
41	+3.3Vaux	42	Reserved
39	+3.3Vaux	40	GND
37	GND	38	USB_D+
35	GND	36	USB_D-
33	PETp0	34	GND
31	PETn0	32	SMB_DATA
29	GND	30	SMB_CLK
27	GND	28	+1.5V
25	PERp0	26	GND
23	PERn0	24	+3.3Vaux
21	GND	22	PERST#
19	Reserved	20	reserved
17	Reserved	18	GND
Mechanical Key			
15	GND	16	UIM_VPP
13	REFCLK+	14	UIM_RESET
11	REFCLK-	12	UIM_CLK
9	GND	10	UIM_DATA
7	CLKREQ#	8	UIM_PWR
5	Reserved	6	1.5V
3	Reserved	4	GND
1	WAKE#	2	3.3Vaux

2.4.10 JBAT1 : RTC Battery


The system's real-time clock is powered by a lithium battery. It is Equipped with MuRata CR2032 190mAh lithium battery. It is recommended that you not replace the lithium battery on your own. If the battery needs to be changed, please contact the Vecow RMA service team.

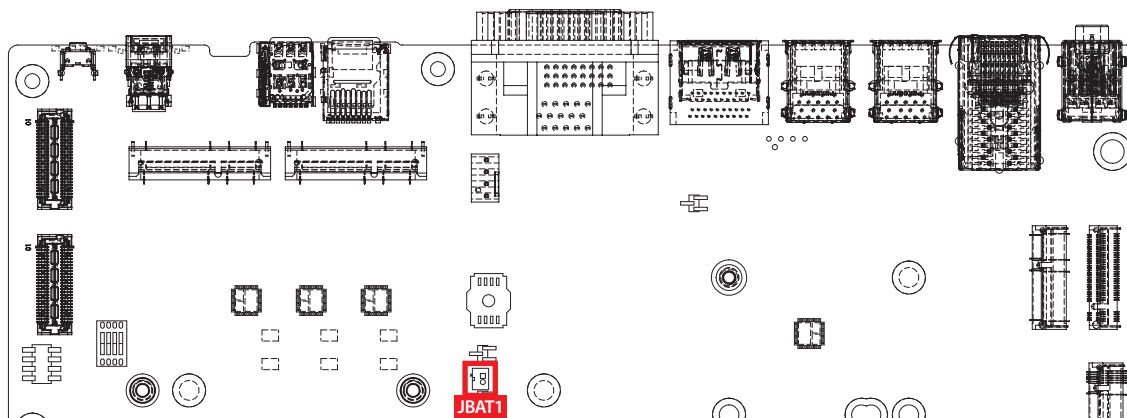


Pin No.	Description
1	BAT-
2	BAT+

2.4.11 CPU_FAN1, CPU_FAN2 : FAN Header


Fan power connector supports for additional thermal requirements. The pin assignments of CPU_FAN1 and CPU_FAN2 are listed in the following table.

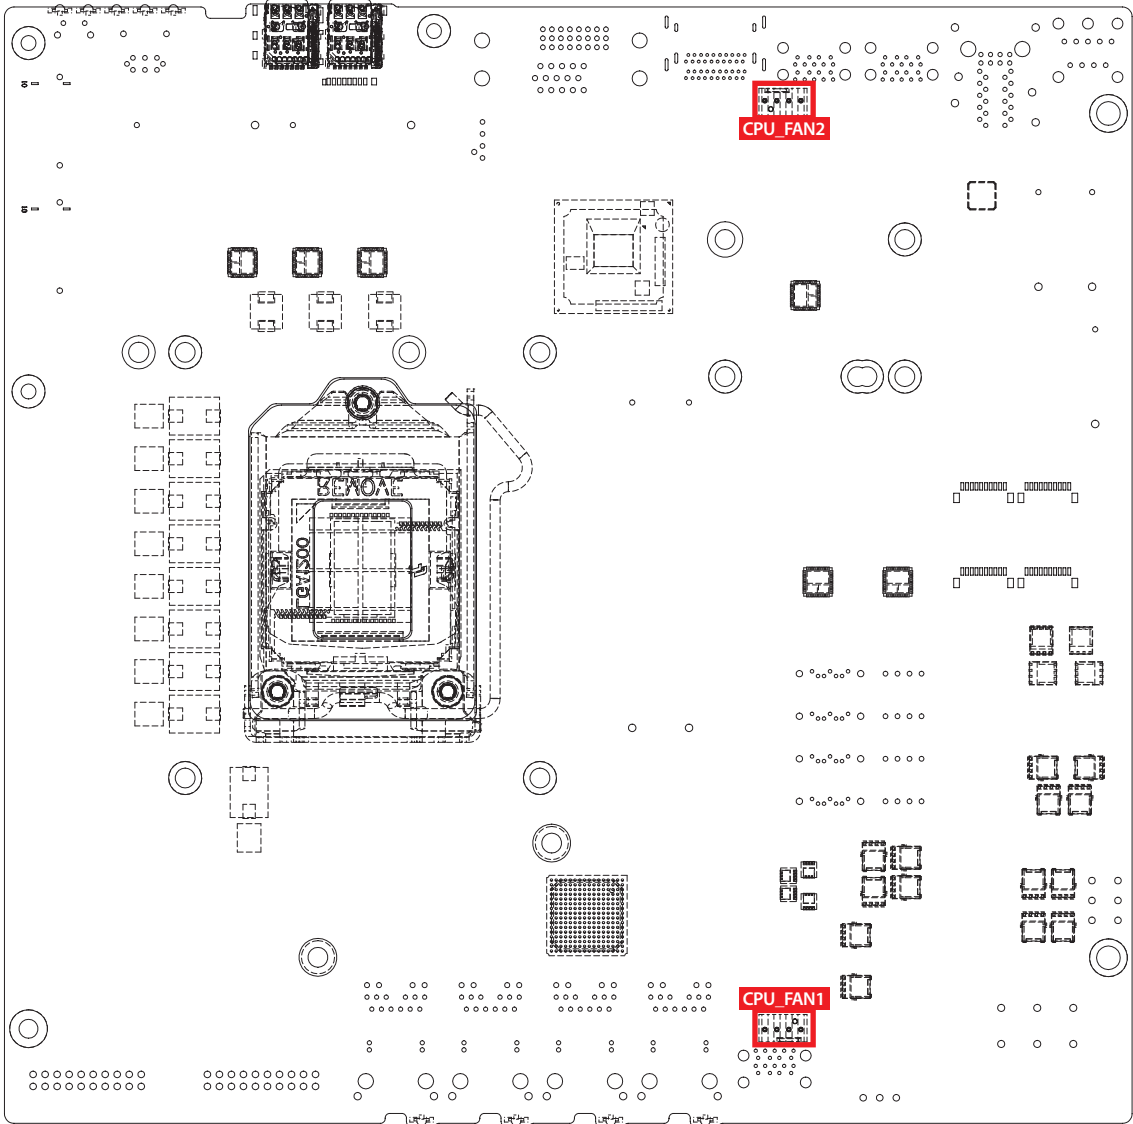


	Pin No.	Function
	1	GND
	2	+12V (2A max)
	3	Fan speed sensor
	4	Fan PWM

2.4.12 SYS_FAN1 : System Fan Header


Fan power connector supports for additional PEG device. The pin assignments of SYS_FAN1 is listed in the following table.

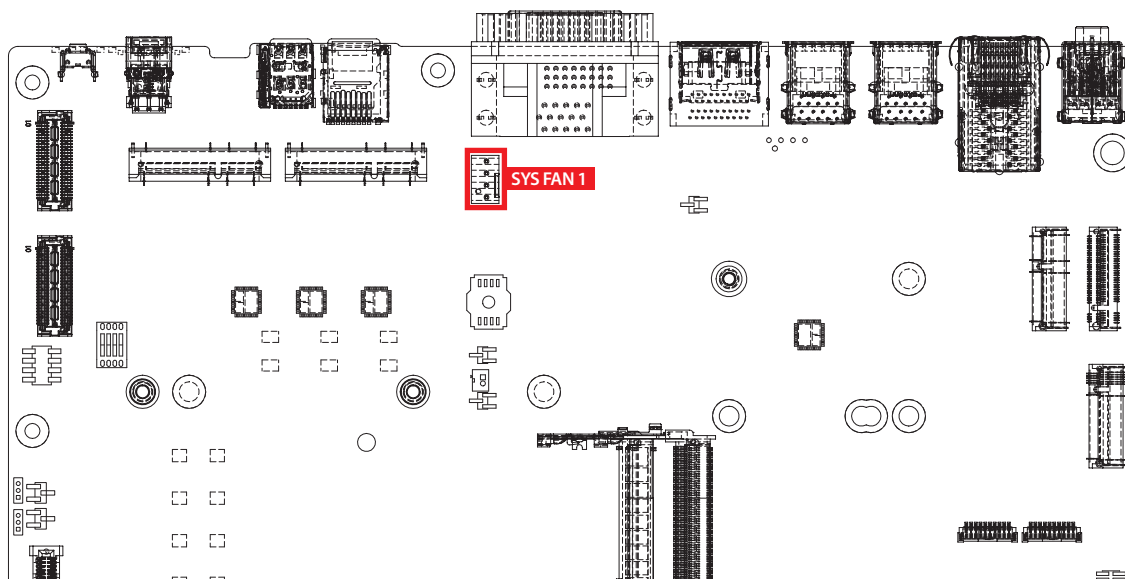

	Pin No.	Function
	1	GND
	2	+12V (2A max)
	3	NC
	4	NC

2.4.13 M2B_CN1, M2M_CN1, M2E_CN1 : M.2 slot

The pin assignments of M2B_CN1, M2M_CN1, M2E_CN1 in the following table

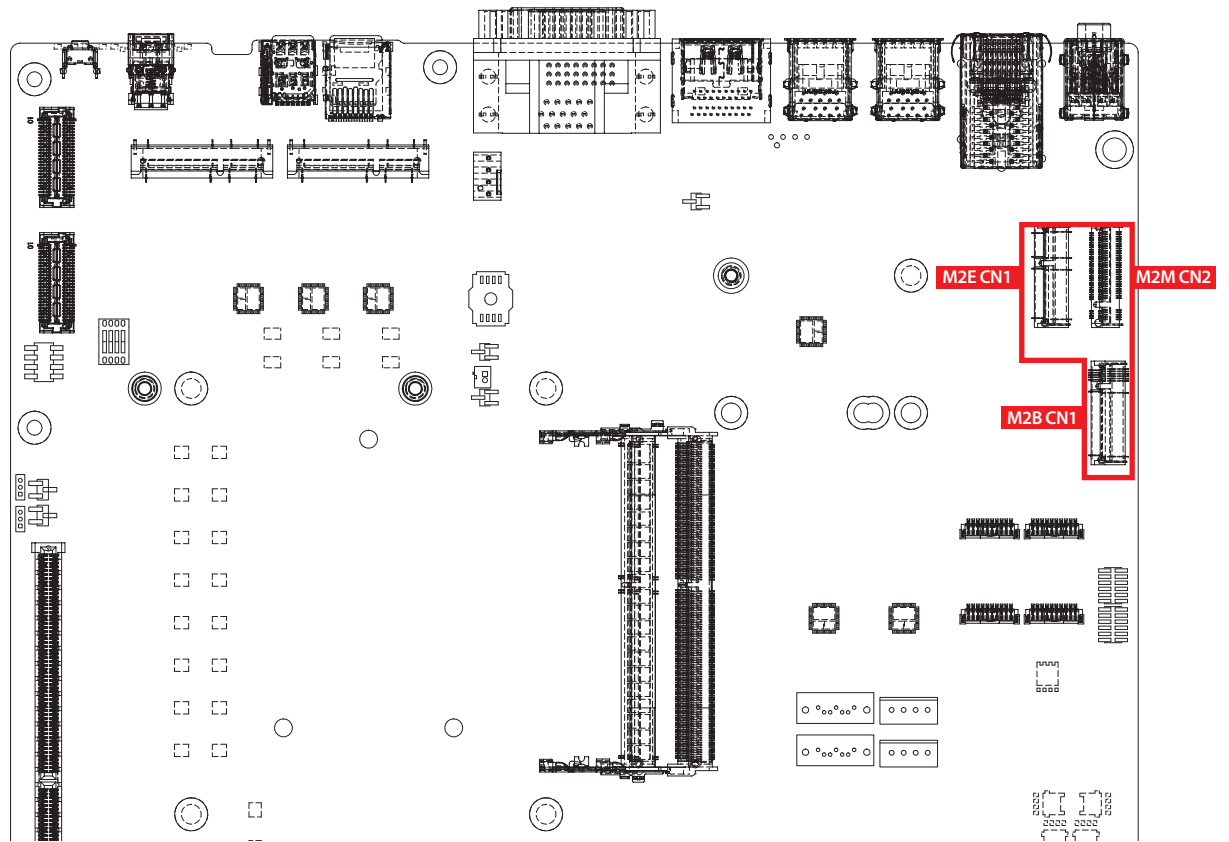

M2B_CN1 : M.2 KEY B (Dimension : 2280, 2242, 3042, 3050, 3052)

Pin No.	Signal Name	Pin No.	Signal Name
		80	Ground
75	NC		
73	Ground	74	3.3V
71	Ground	72	3.3V
69	CONFIG_1	70	3.3V
67	NC	68	NC
65	NC	66	SIM DETECT
63	NC	64	NC
61	NC	62	NC
59	NC	60	NC
57	Ground	58	NC
55	REFCLKp	56	NC
53	REFCLKn	54	PEWAKE#
51	Ground	52	CLKREQ#
49	PETp0/SATA-A+	50	PERST#

Pin No.	Signal Name	Pin No.	Signal Name
47	PETn0/SATA-A-	48	NC
45	Ground	46	NC
43	PERp0/SATA-B-	44	NC
41	PERn0/SATA-B+	42	NC
39	Ground	40	NC
37	PETp1/USB3.1-Tx+	38	DEVSLP
35	PETn1/USB3.1-Tx-	36	UIM-PWR
33	Ground	34	UIM-DATA
31	PERp1/USB3.1-Rx+	32	UIM-CLK
29	PERn1/USB3.1-Rx-	30	UIM-RESET
27	Ground	28	NC
25	NC	26	NC
23	NC	24	NC
21	NC	22	NC
		20	NC
Mechanical Key			
11	Ground		
9	USB-	10	LED_1#
7	USB+	8	W_DISABLE1
5	Ground	6	FULL_CARD_PWR_OFF/ ON
3	Ground	4	3.3V
1	NC	2	3.3V


M2M_CN1 : M.2 KEY M (Dimension : 2280)

Pin No.	Signal Name	Pin No.	Signal Name
75	Ground		
73	Ground	74	3.3V
71	Ground	72	3.3V
69	PEDET	70	3.3V
67	Ground	68	NC
Mechanical Key			
57	Ground	58	NC
55	REFCLKp	56	NC
53	REFCLKn	54	PEWAKE#
51	Ground	52	CLKREQ#
49	PETp0/SATA_A+	50	PERST#
47	PETn0/SATA_A-	48	NC
45	Ground	46	NC
43	PERp0/SATA_B-	44	NC
41	PERn0/SATA_B+	42	NC
39	Ground	40	NC
37	PETp1	38	DEVSLP
35	PETn1	36	NC
33	Ground	34	NC
31	PERp1	32	NC
29	PERn1	30	NC
27	Ground	28	NC
25	PETp2	26	NC
23	PETn2	24	NC
21	Ground	22	NC
19	PERp2	20	NC
17	PERn2	18	3.3V
15	Ground	16	3.3V
13	PETp3	14	3.3V
11	PETn3	12	3.3V
9	Ground	10	LED1#
7	PERp3	8	NC
5	PERn3	6	NC
3	Ground	4	3.3V
1	Ground	2	3.3V

M2E_CN1 : M.2 KEY E (Dimension : 2230)

Pin No.	Signal Name	Pin No.	Signal Name
75	Ground		
73	NC	74	3.3V
71	NC	72	3.3V
69	Ground	70	PEWAKE1#
67	NC	68	NC
65	NC	66	NC
63	Ground	64	NC
61	NC	62	ALERT
59	NC	60	I2C_CLK
57	Ground	58	I2C_DATA
55	PEWAKE0#	56	NC
53	CLKREQ0#	54	NC
51	Ground	52	PERST0#
49	REFCLKn0	50	NC
47	REFCLKp0	48	NC
45	Ground	46	NC
43	PERn0	44	NC
41	PERp0	42	NC
39	Ground	40	NC
37	PETn0	38	DEVSLP
35	PETp0	36	NC
33	Ground	34	NC
		32	NC
Mechanical Key			
23	NC		
21	NC	22	NC
19	Ground	20	NC
17	NC	18	Ground
15	NC	16	NC
13	Ground	14	NC
11	NC	12	NC
9	NC	10	NC
7	Ground	8	NC
5	USB-	6	LED1#
3	USB+	4	3.3V
1	Ground	2	3.3V


2.4.14 Graphic Card Power CONN

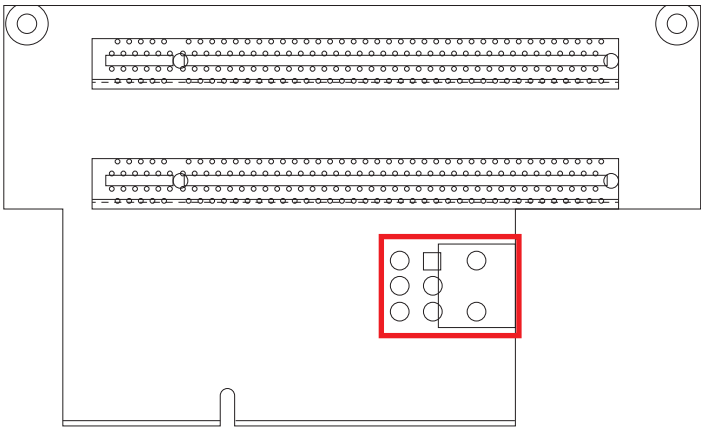

Pin No.	Definition
1	+12V
2	GND
3	+12V
4	GND
5	+12V
6	GND


2.5 Main Board Jumper Settings

2.5.1 Board top view of the system main board with jumper and DIP switch

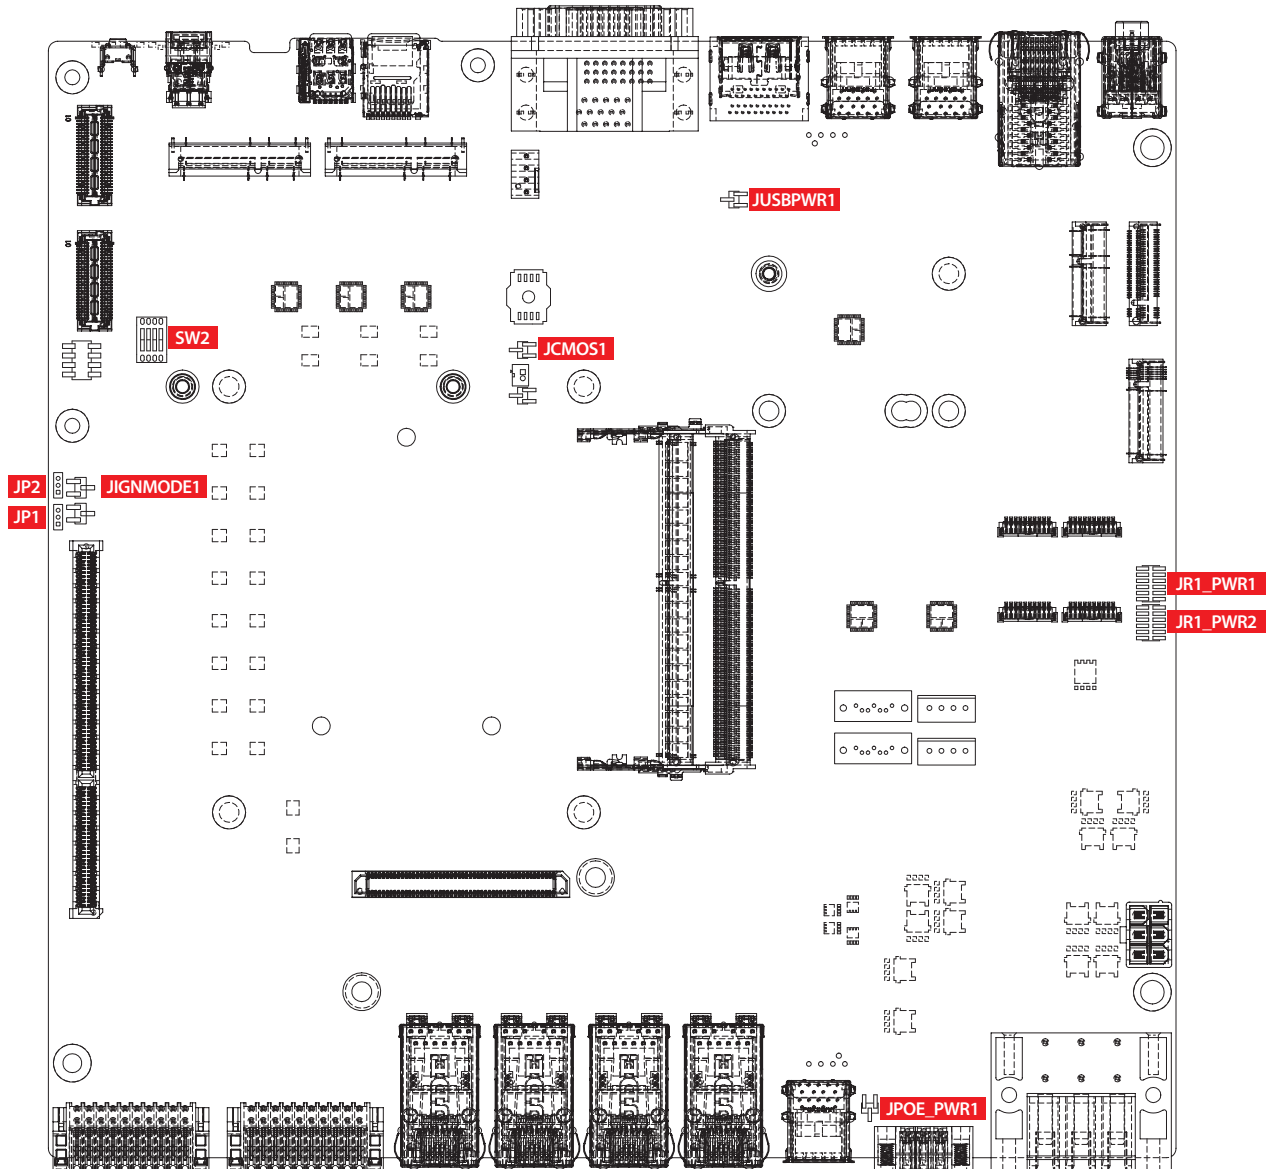


The figure below is the top view of the system main board which is the main board. It shows the location of the jumpers and the switches.


You may configure your card to match the needs of your application by setting jumpers. A jumper is a metal bridge used to close an electric circuit. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To "close" a jumper, you connect the pins with the clip. To "open" a jumper, you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2, or 2 and 3.

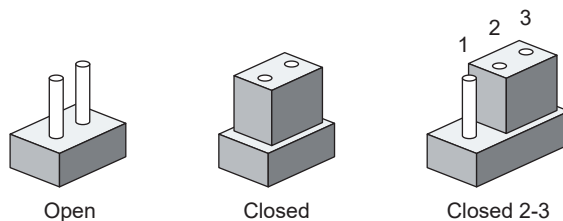

You may configure your card to match the needs of your application by DIP switch. As below show the DIP switch on and off.

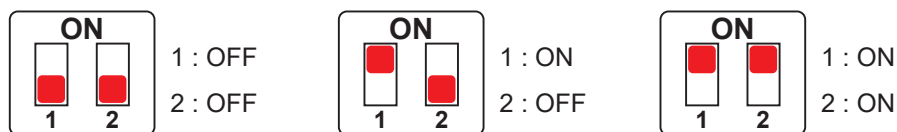


2.5.2 JUSBPWR1 : USB Wake Up

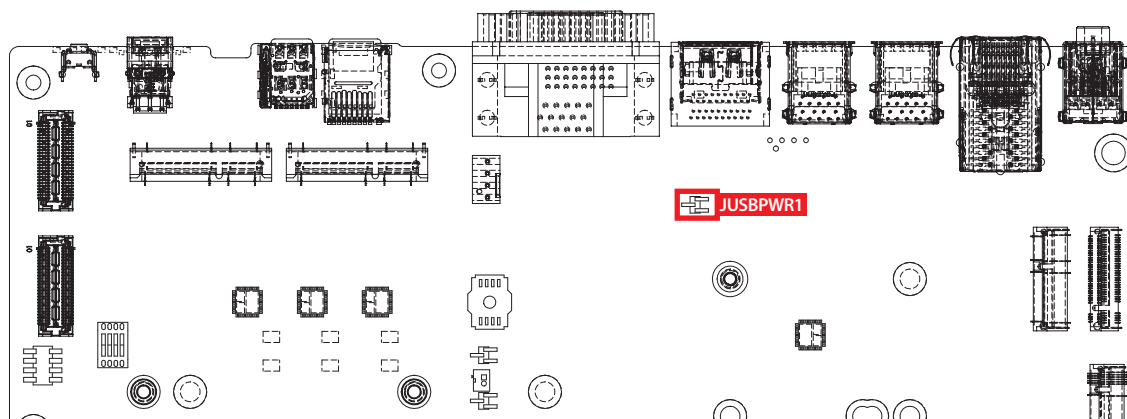


Jumper	Setting	Function
JUSBPWR1	2-3	Non Wake Up support
JUSBPWR1	1-2	Supported Wake Up (Default)


Front Plane View

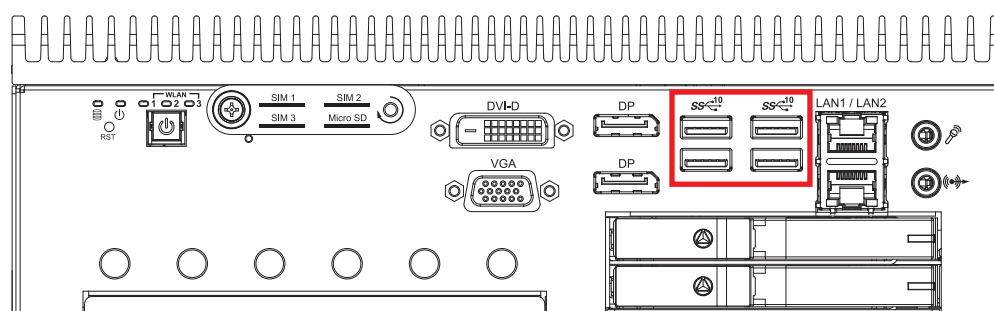

Rear Plane View

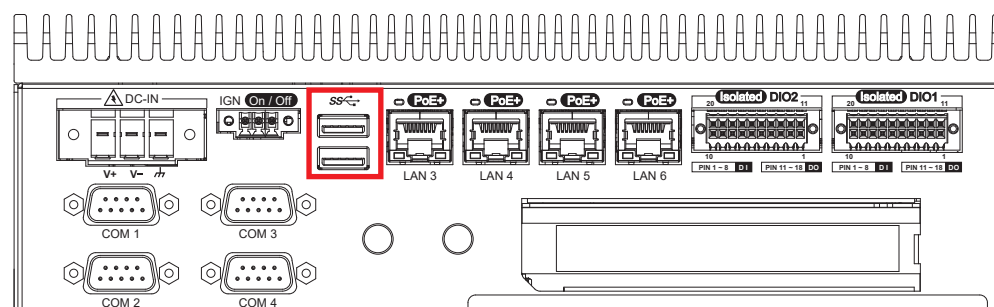



2.5.3 JRI_PWR1, JRI_PWR2 : COM Port RI pin Select

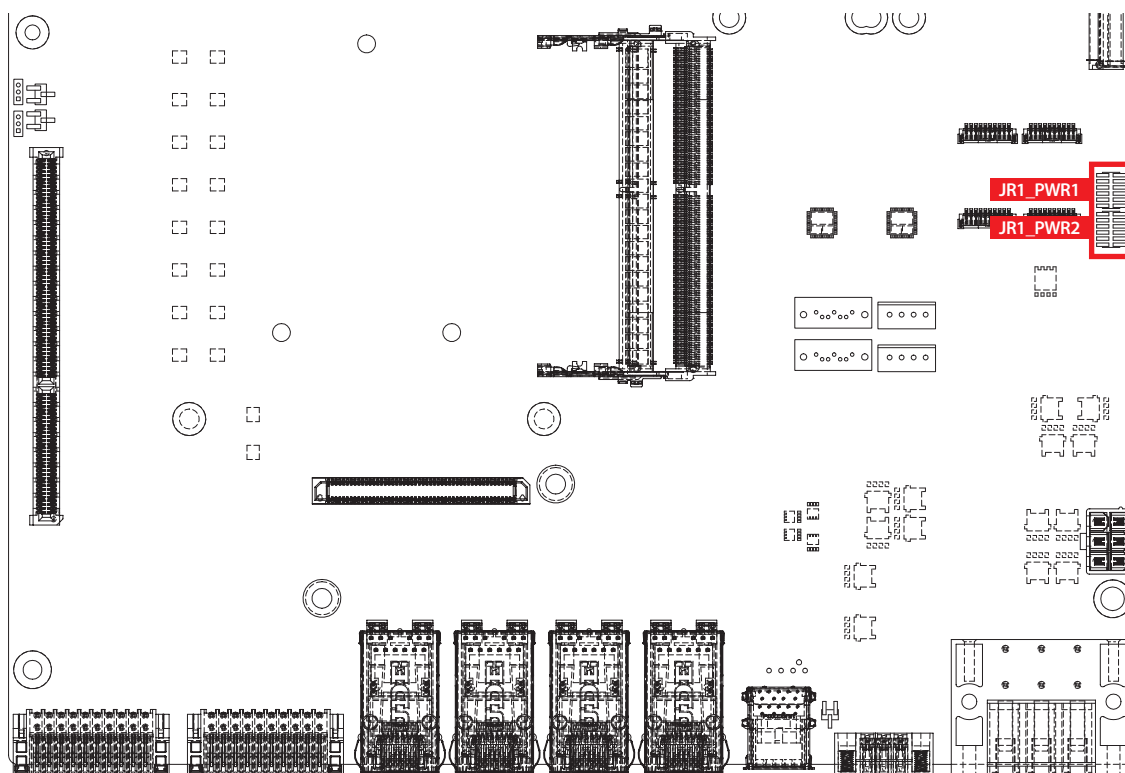


JRI_PWR1

JRI_PWR2

		
Pin No.	Description	COM Port
1 - 2	+5V (1A max.)	COM1
3 - 4	+12V (0.5A max.)	
5 - 6	RI (Default)	
7 - 8	+5V (1A max.)	COM2
9 - 10	+12V (0.5A max.)	
11 - 12	RI (Default)	


		
Pin No.	Description	COM Port
1 - 2	+5V (1A max.)	COM3
3 - 4	+12V (0.5A max.)	
5 - 6	RI (Default)	
7 - 8	+5V (1A max.)	COM4
9 - 10	+12V (0.5A max.)	
11 - 12	RI (Default)	

2.5.4 JPOE_PWR1 : PoE Power ON Select

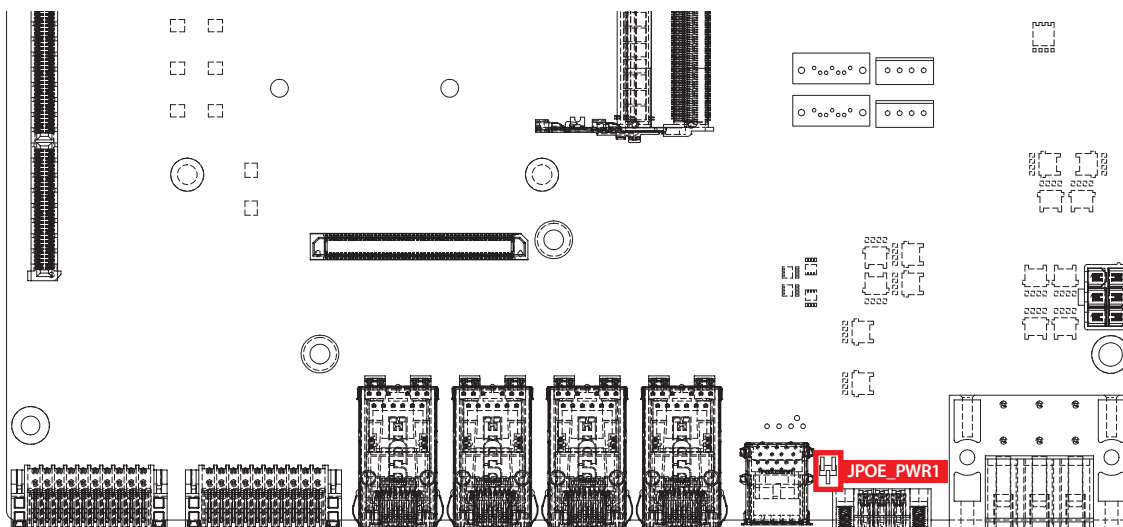

Setting	Function
1-2	PoE power on at standby power ready
2-3	PoE power on after system power on (Default)
No Jumper	Disable PoE power


2.5.5 JCMOS1 : Clear CMOS

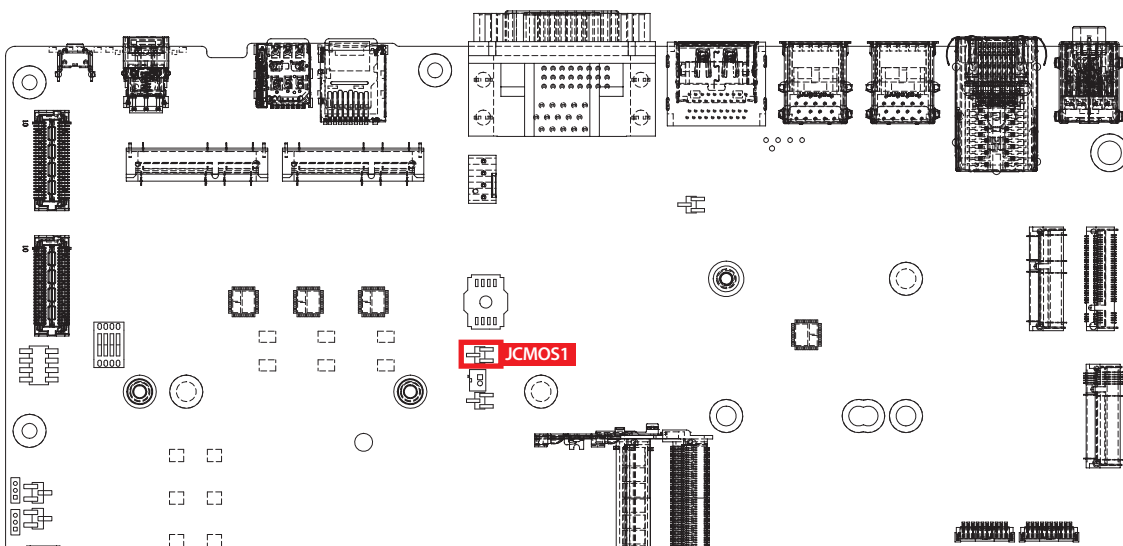

JCMOS1 :

	Setting	Function
	1-2	*Normal (Default)
	2-3	Clear CMOS

2.5.6 JP1, JP2 : PCI Express* Configuration

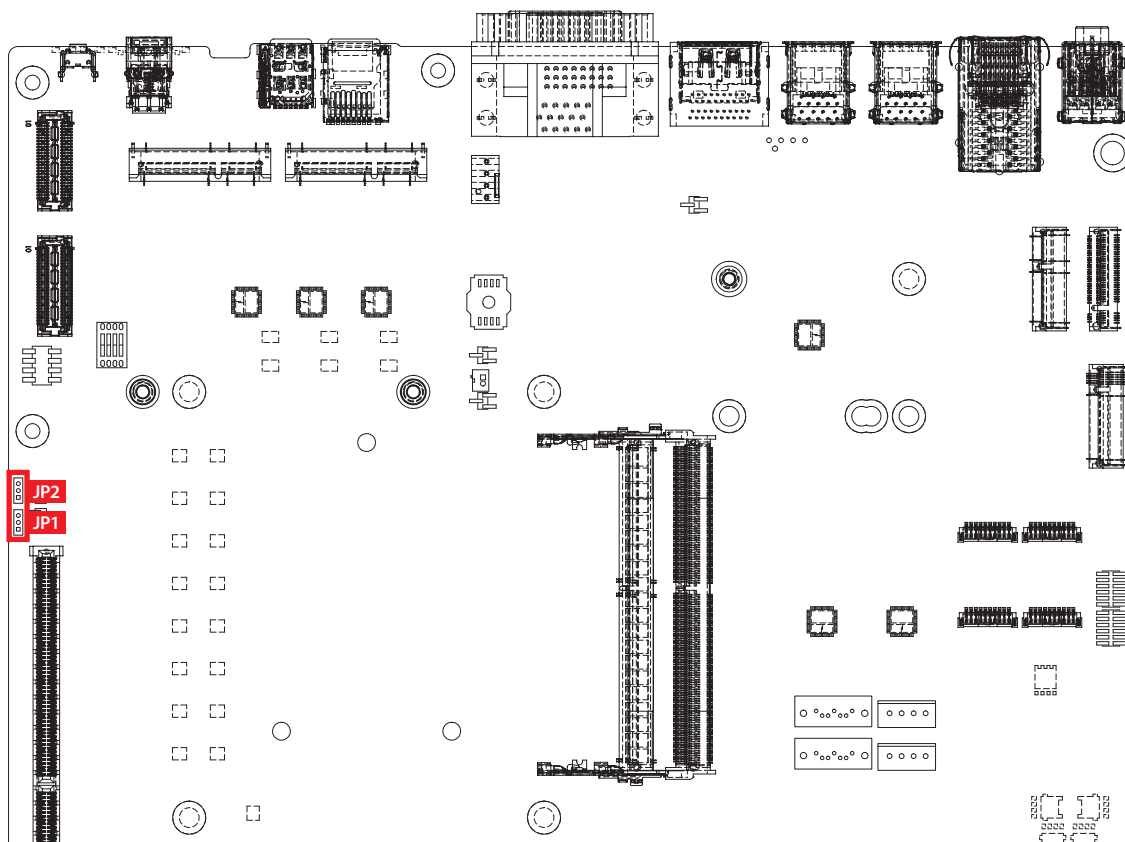

JP1, JP2 provide PCIe slot (CN59) configuration function, Closing Pin 1 and Pin 2 is logic "0". Closing Pin 2 and Pin 3 is logic "1".

JP1, JP2 logic setting are listed in the following table.


JP1	Logic
1-2	0
2-3	1

JP2	Logic
1-2	0
2-3	1


JP1, JP2 PCI Express configurations are listed in the following table.

JP2	JP1	PCI Express* Bifurcation
0	0	1 x8 PCI Express*
1	0	2 x8 PCI Express*
1	1	1 x16 PCI Express*

2.5.7 JIGNMODE1 : IGNITION Mode

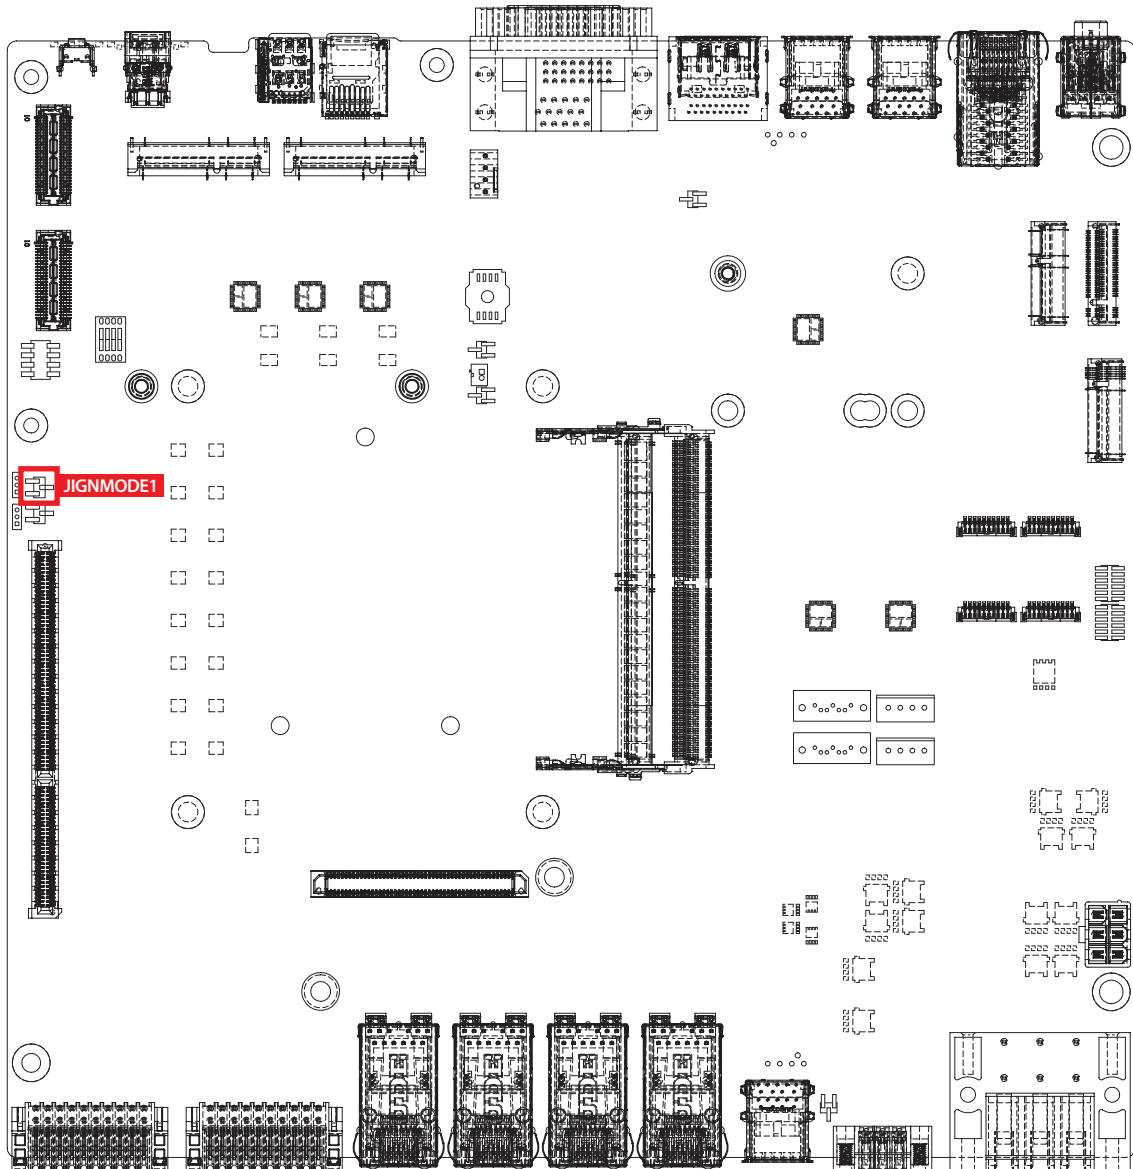

JIGNMODE1 :

	Setting	Function
	1-2	H/W mode
	2-3	S/W mode (default)


2.6 Ignition Control

ECX-2200A/2100A PEG series provides ignition power control feature for in-vehicle applications. The built-in MCU monitors the ignition signal and turns on/off the system according to pre-defined on/off delay period.


2.6.1 Adjust Ignition Control Modes

ECX-2200A/2100A PEG series provides 16 modes of different power on/off delay periods adjustable via SW2 switch. The default switch is set to 0 in ATX/AT power mode.

SW2 : Ignition Control

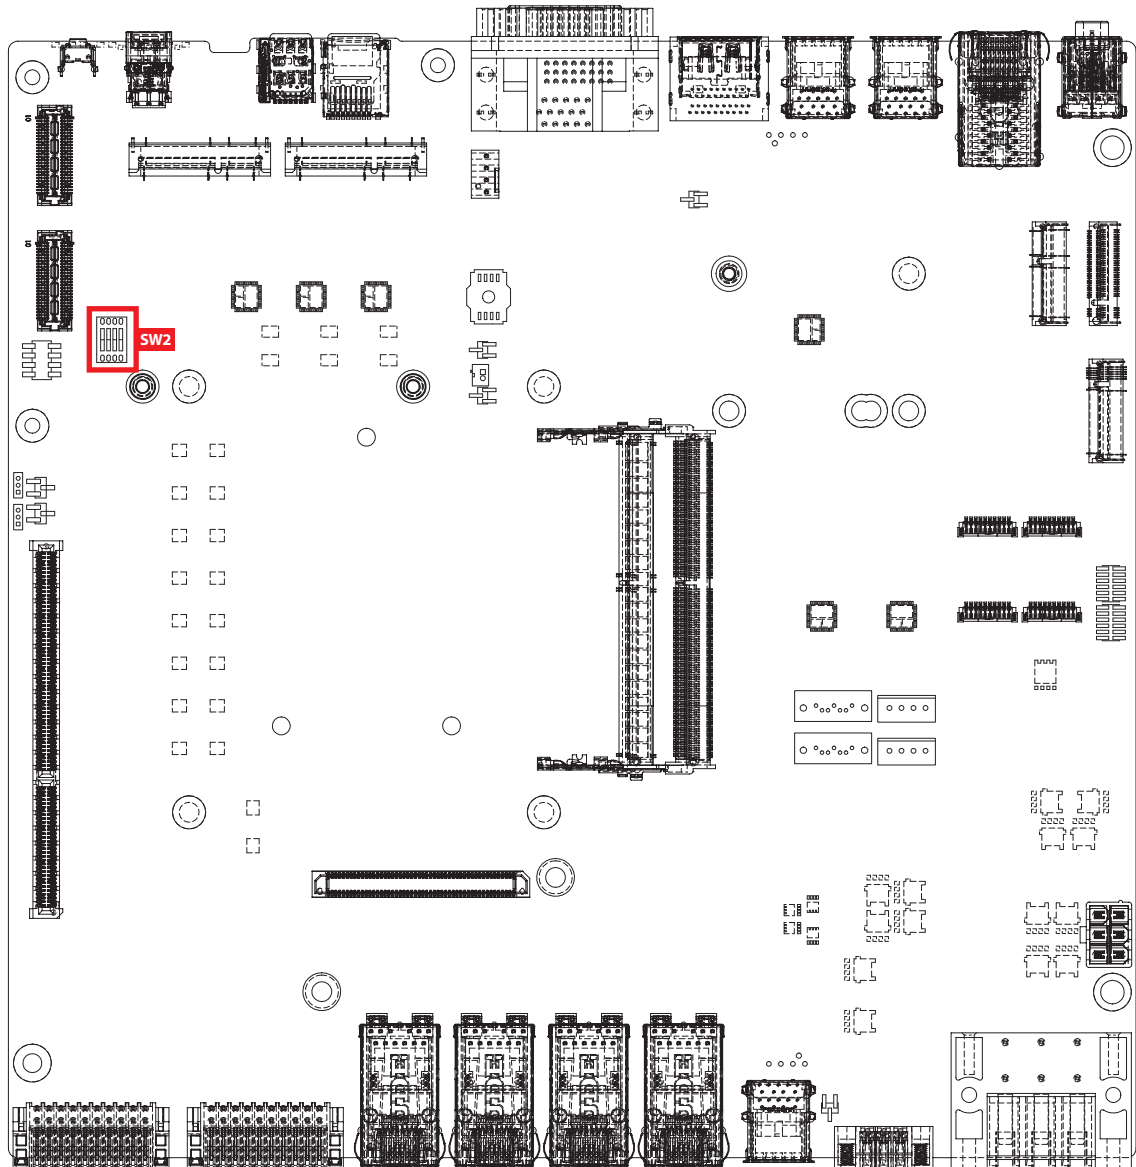


The modes are listed in below table :

DIP Switch Position	Power on delay	Power off delay	Switch Position
0	ATX/AT mode (Default)		
1	No delay	No delay	
2	No delay	5 seconds	
3	No delay	10 seconds	
4	No delay	30 seconds	
5	No delay	60 seconds	
6	5 seconds	10 seconds	
7	5 seconds	30 seconds	
8	5 seconds	60 seconds	
9	5 seconds	90 seconds	
A	5 seconds	120 seconds	
B	10 seconds	10 seconds	
C	10 seconds	30 seconds	
D	10 seconds	60 seconds	
E	10 seconds	90 seconds	
F	10 seconds	120 seconds	

2.6.2 Ignition Control Wiring

To activate ignition control, you need to provide IGN signal via the 3-pin pluggable terminal block locates in the back panel. Please find below the general wiring configuration.

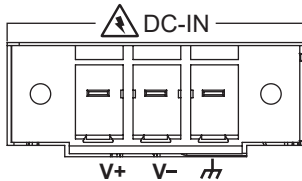


Pin No.	Definition
1	Ignition
2	SW+
3	SW-



For testing purpose, you can refer to the picture blow to simulate ignition signal input controlled by a latching switch.

Note :

1. DC power source and IGN share the same ground.
2. ECX-2200A/2100A PEG supports 9V to 50V wide range DC power input in ATX/ AT mode. In Ignition mode, the input voltage such as the wide voltage operating range of the system is 9V to 50V DC.
3. For proper ignition control, the power button setting should be "Power Down" mode.

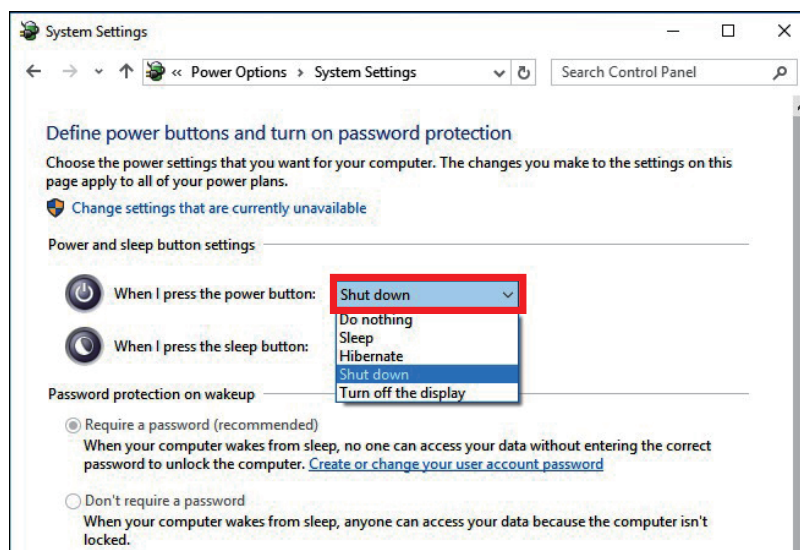

In Windows for example, you need to set "When I press the power button" to Shut down.


3

SYSTEM SETUP


3.1 How to Open Your ECX-2200A/2100A PEG

3.1.1 ECX-2200AF & ECX-2100AF Series


Step 1 Remove the screws indicated and separate Cover Fan Cpu from the enclosure.

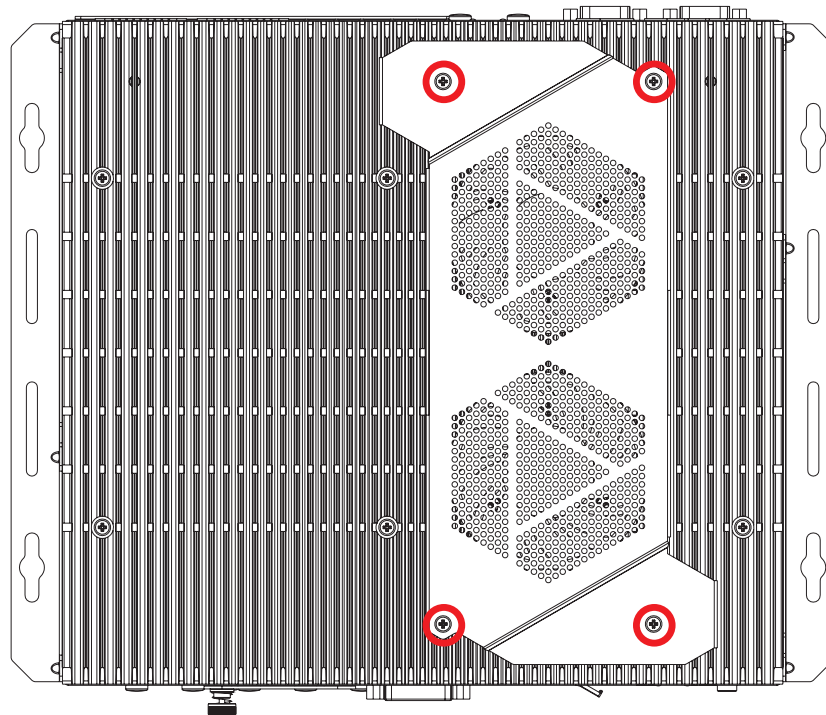

Step 2 Remove the plugs indicated.

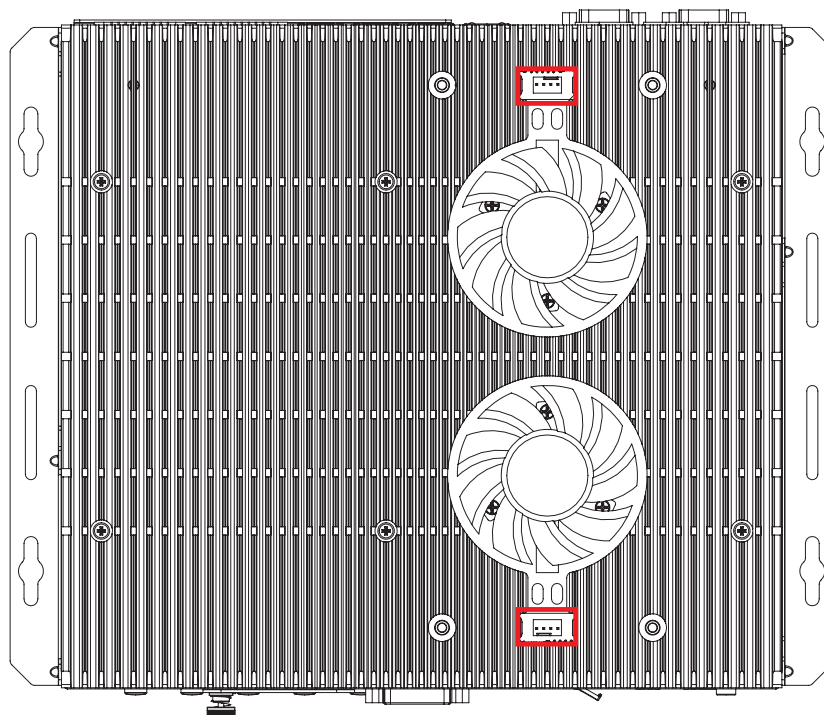


Step 3 Remove the screws indicated and separate the cooler from the enclosure.

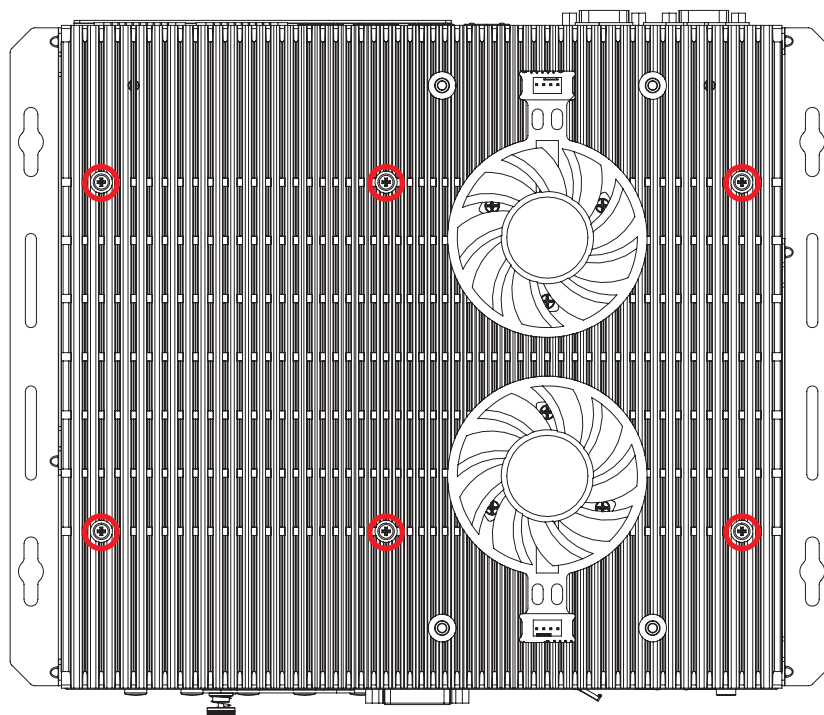


3.1.2 ECX-2200A & ECX-2100A Series

Step 1 Remove the screws indicated and separate the heat sink from the enclosure.

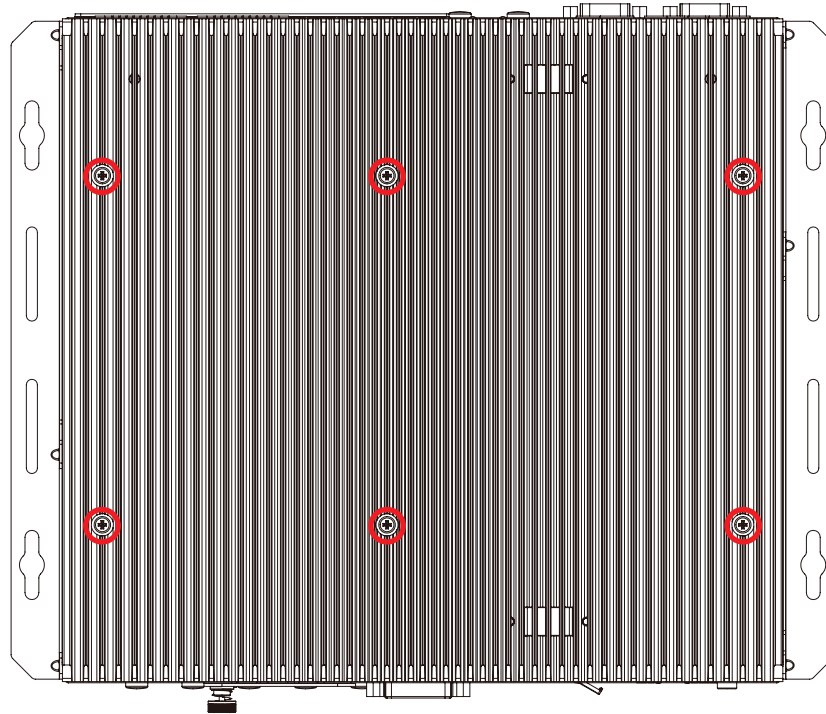


3.2 Installing CPU


Step 1 Open CPU Independent Loading Mechanism (ILM).

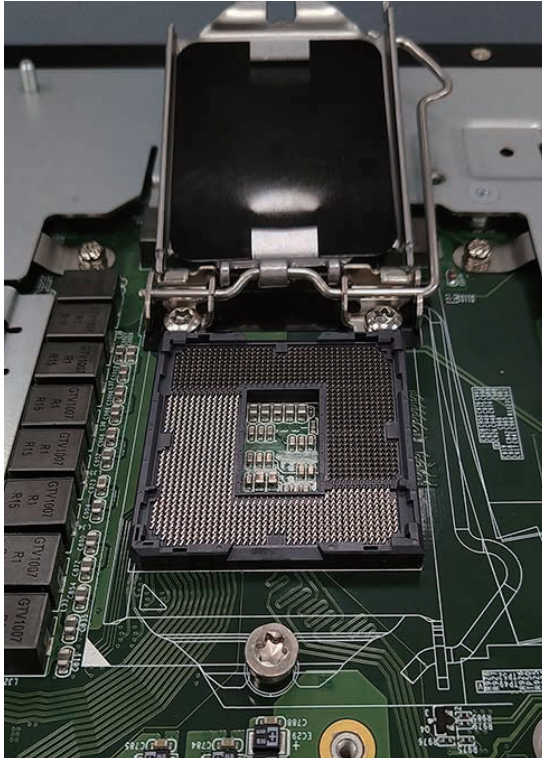

Step 2 Install CPU (Be careful CPU pin).

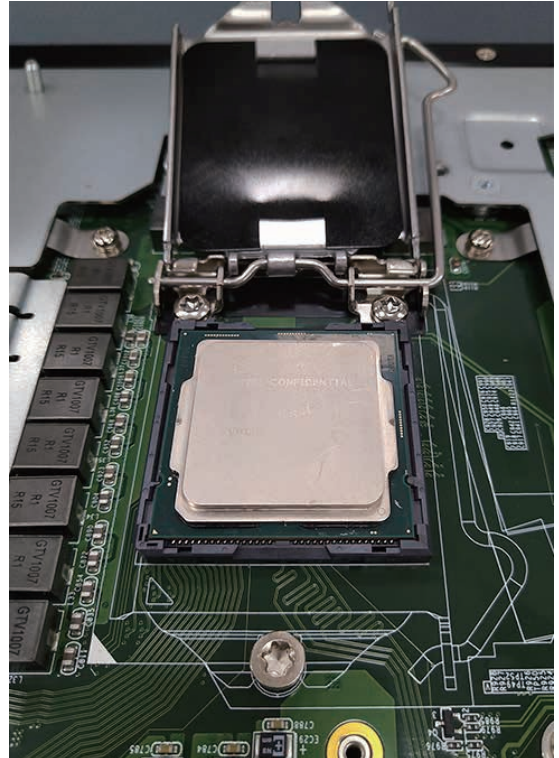

Step 3 Remove the mylar.

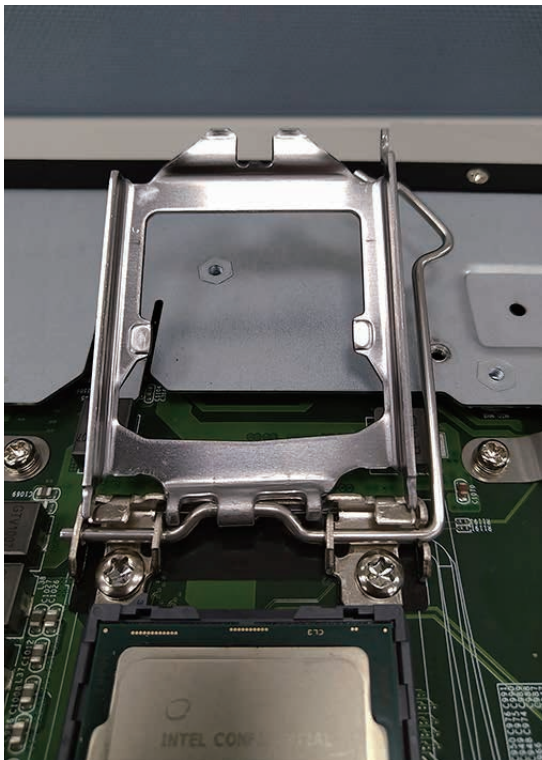


Step 4 Close CPU Independent Loading Mechanism (ILM) and finish.




3.3 Installing DDR4 SO-DIMM Modules


Step 1 Turn the system upside-down on a steady surface. Remove the screws indicated.

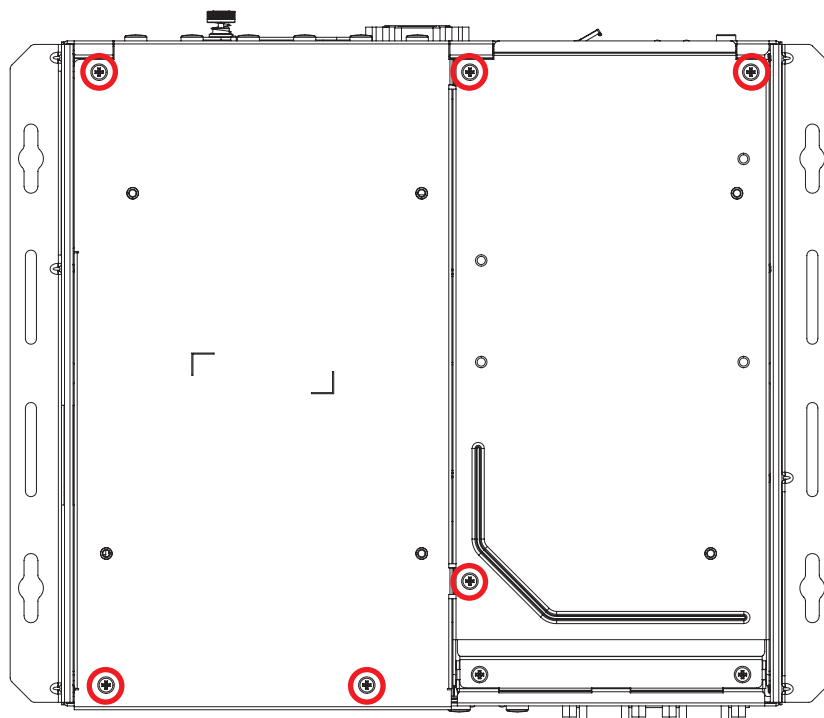


Step 2 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

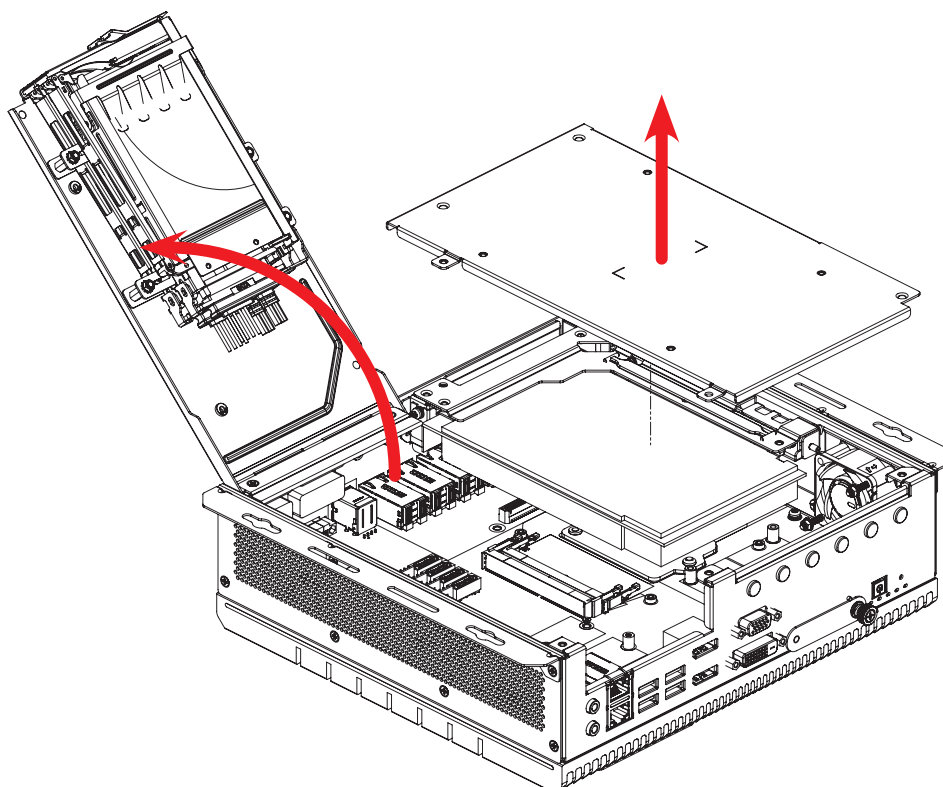

Step 3 Separate Assembly_Riser Card from the enclosure with the puller.

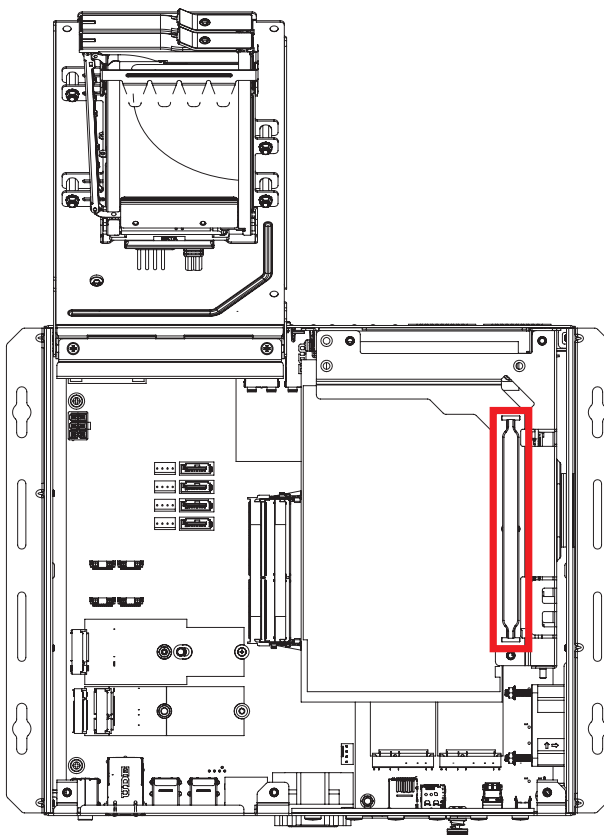


Step 4 Install DDR4 RAM module into SO-DIMM socket.

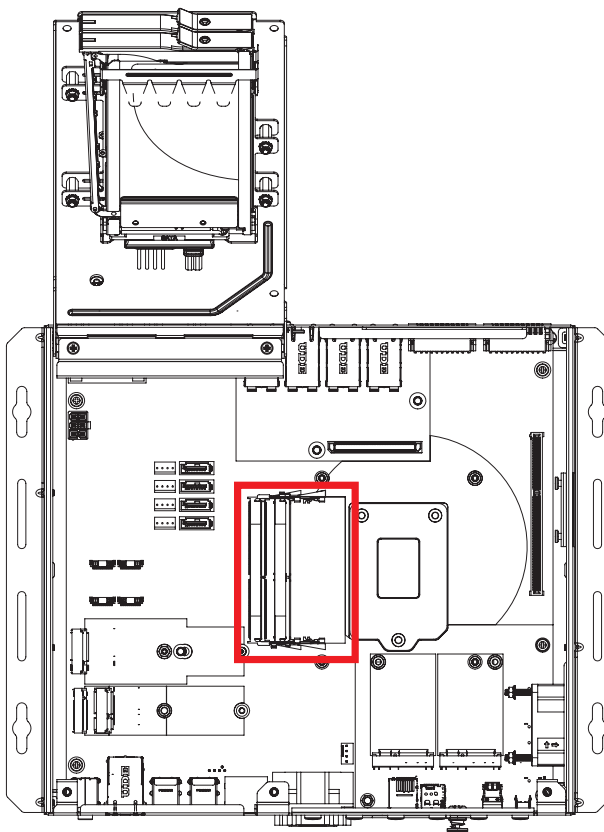


3.4 Installing Mini PCIe Card


Step 1 Turn the system upside-down on a steady surface. Remove the screws indicated.

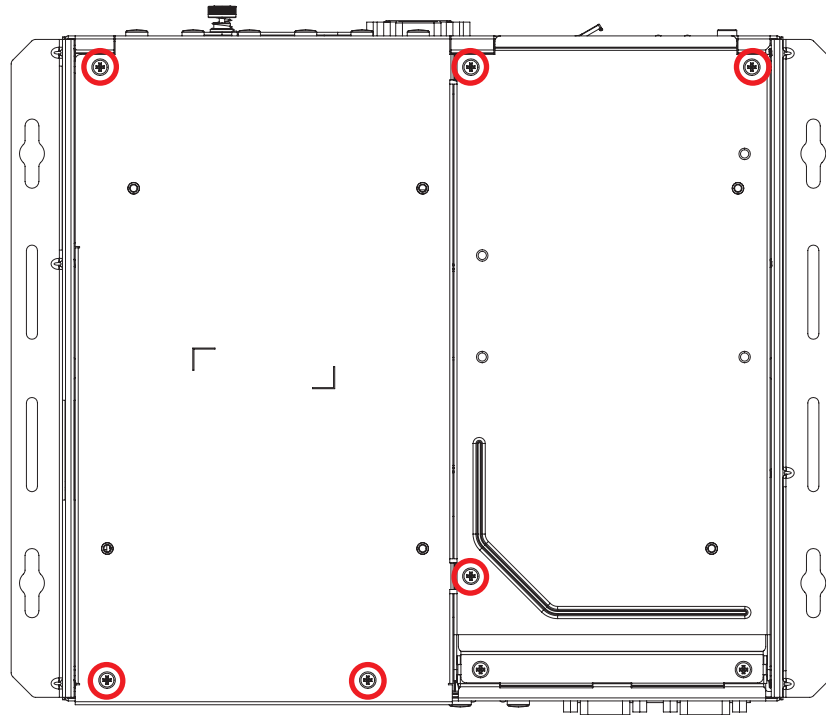


Step 2 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

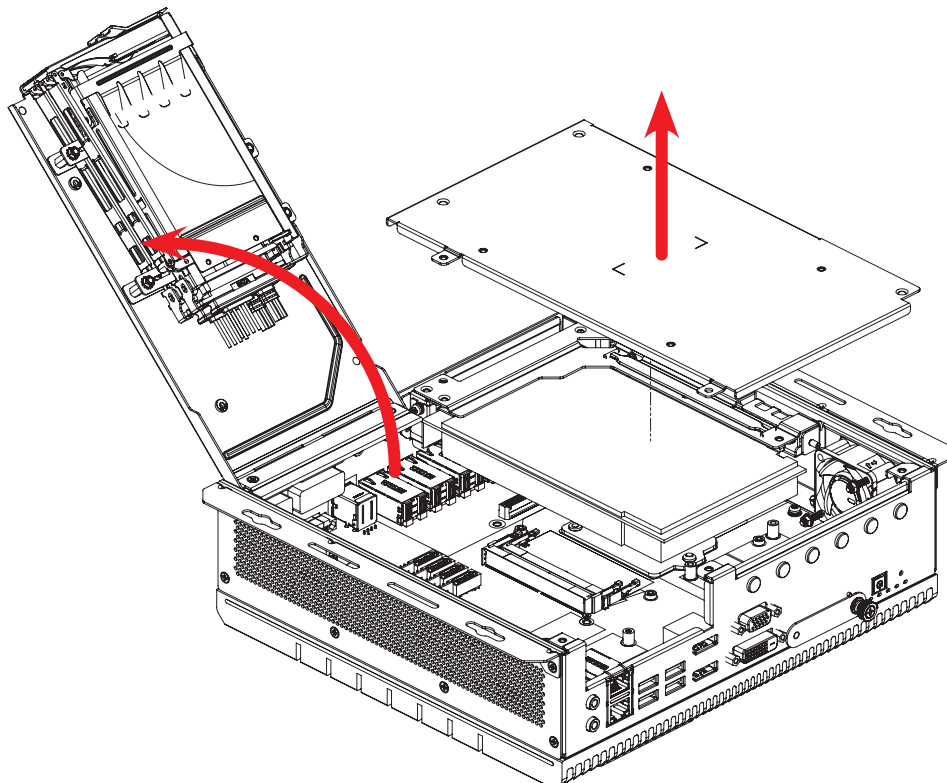


Step 3 Separate Assembly_Riser Card from the enclosure with the puller.

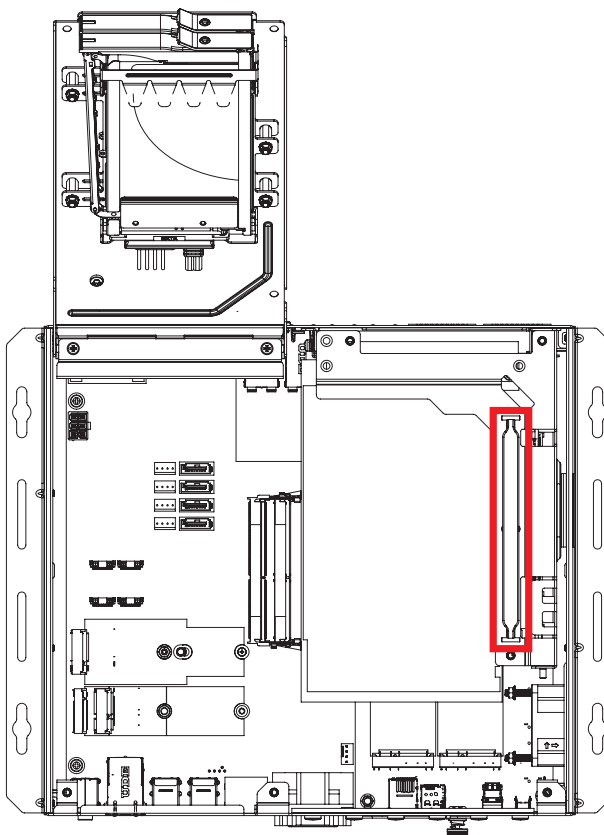

Step 4 Install mini PCIe card into slot.

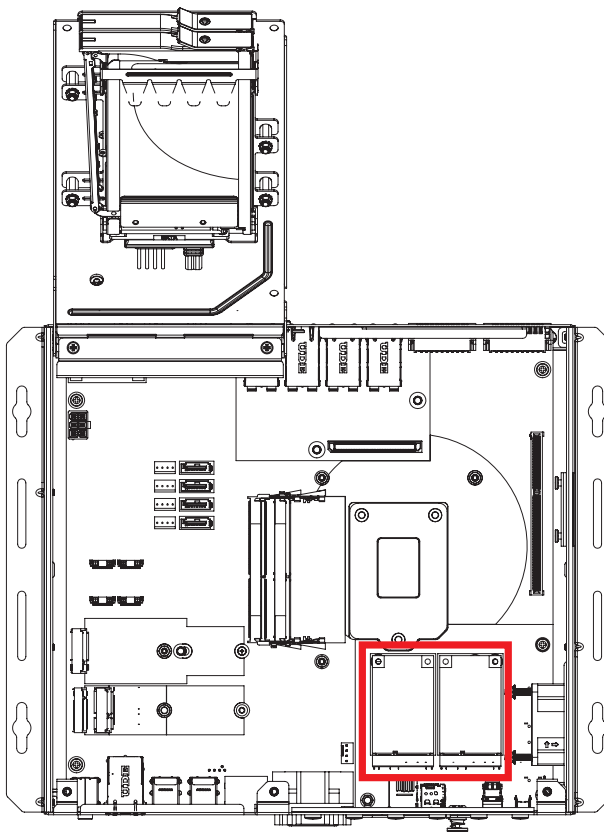


Step 5 Fasten one PHILLIPS M2.5 screw.

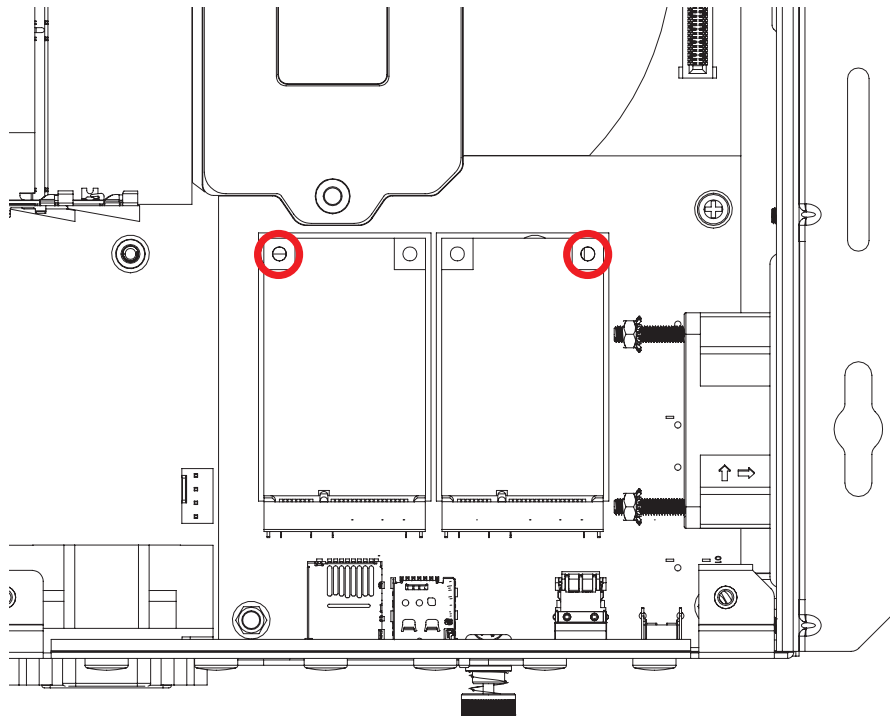


3.5 Installing Nano SIM Card


Step 1 Loosen captive panel screw and open Cover Card.

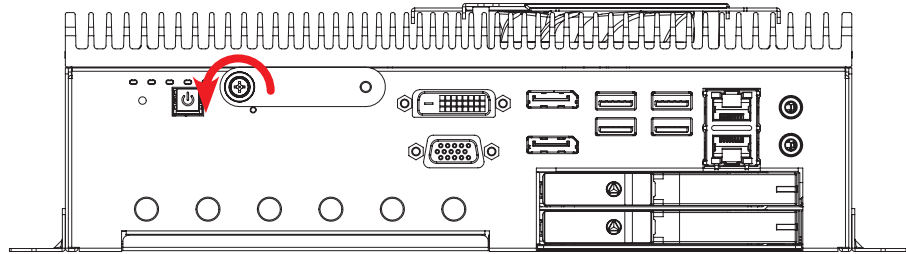

Step 2 Open Cover Card.

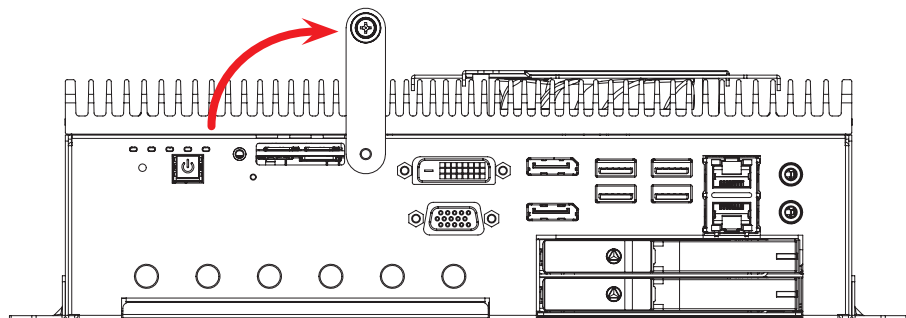


Step 3 Insert Nano SIM card and push to lock.

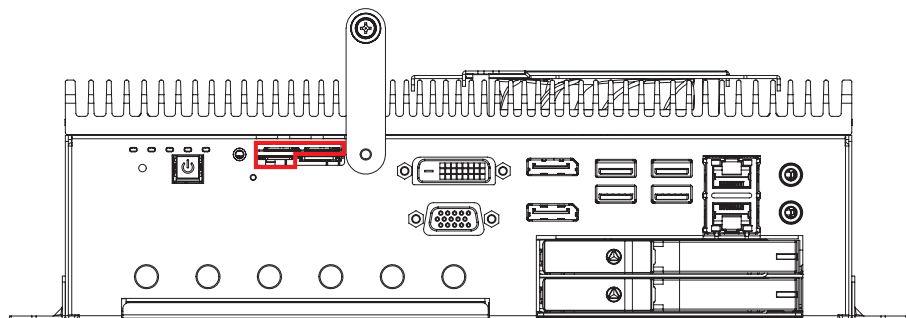


3.6 Installing Micro SD Cards


Step 1 Loosen captive panel screw and open Cover Card.

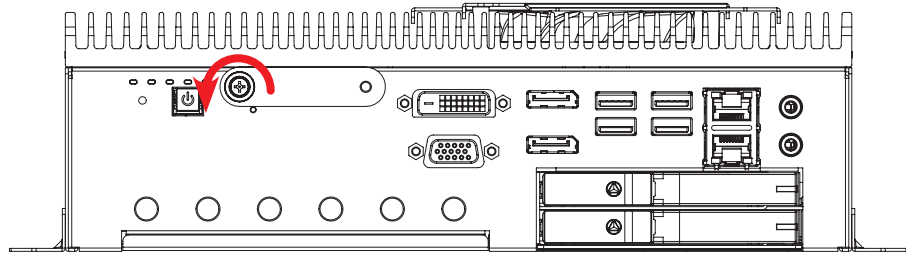

Step 2 Open Cover Card.

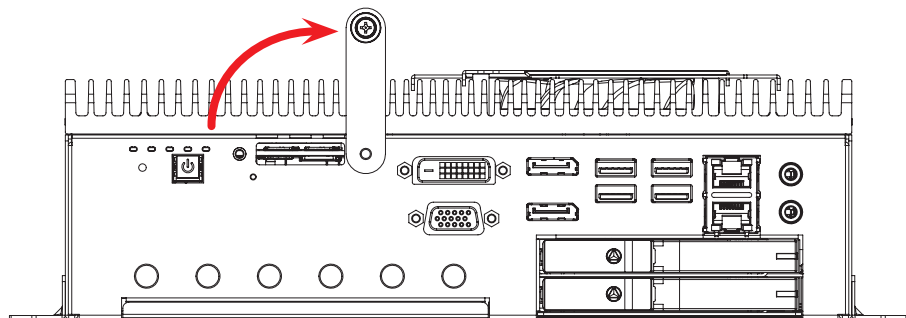

Step 3 Insert Micro SD card and push to lock.

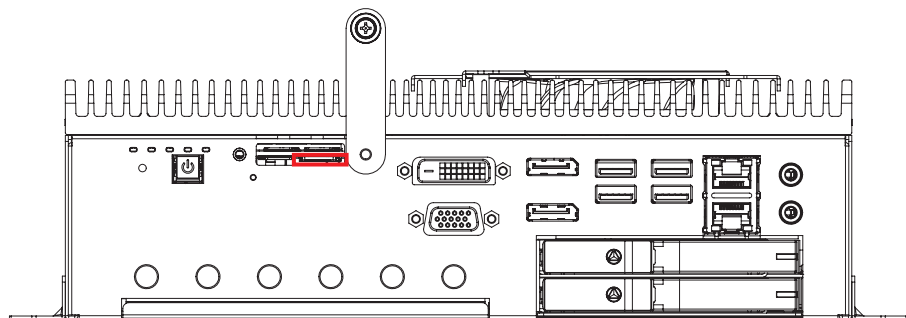


3.7 Installing PCI/PCIe Card


System designs will support 115 mm standard height, 210 mm maximum length (without the I/O bracket & power cable) expansion cards.

(*Based on the position of power connectors and the card sink/case design, not all expansion card within the maximum dimension can fit in to the system. Please consult the Vecow support team for confirmation.)


Step 1 Turn the system upside-down on a steady surface. Remove the screws indicated.

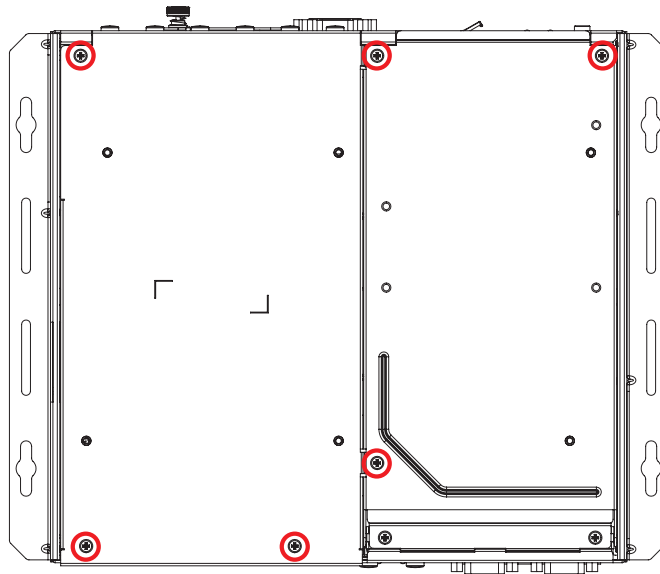


Step 2 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

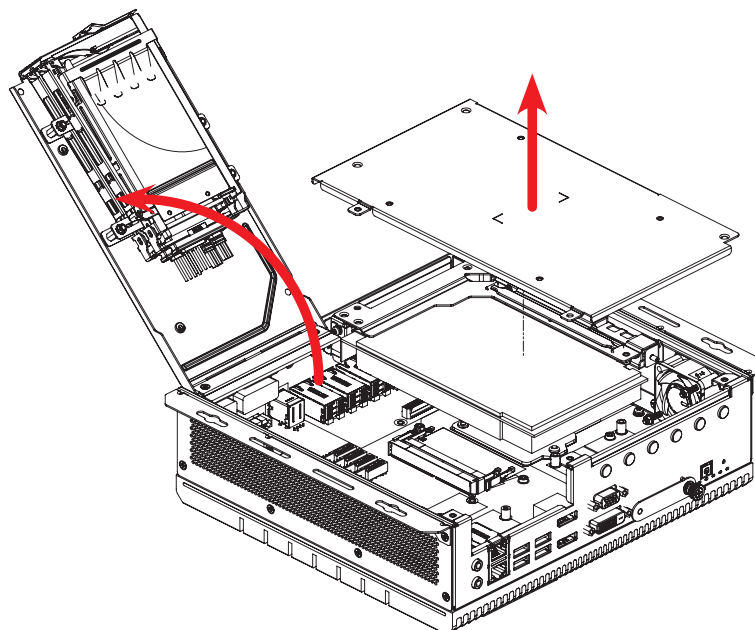


Step 3 Separate Assembly_Riser Card from the enclosure with the puller.

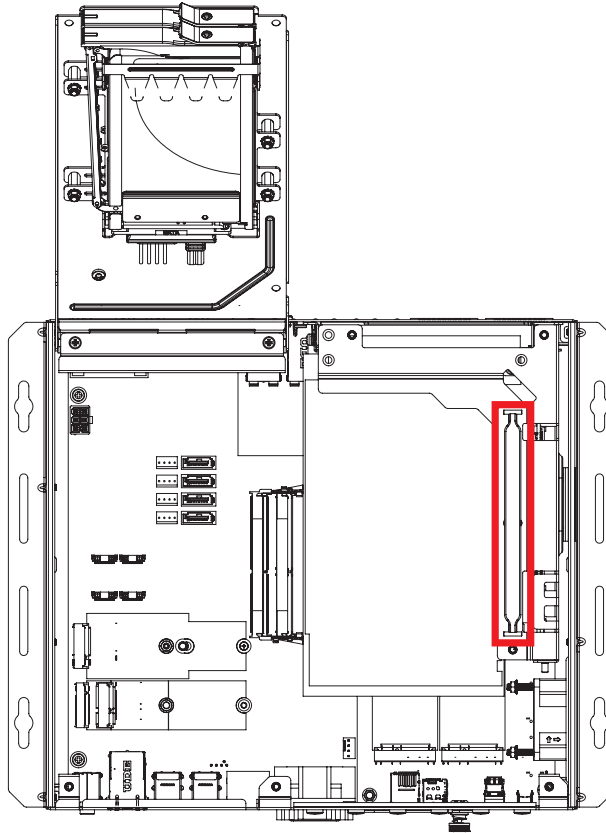


Step 4 Turn Assembly_Riser Card upside-down on a steady surface.

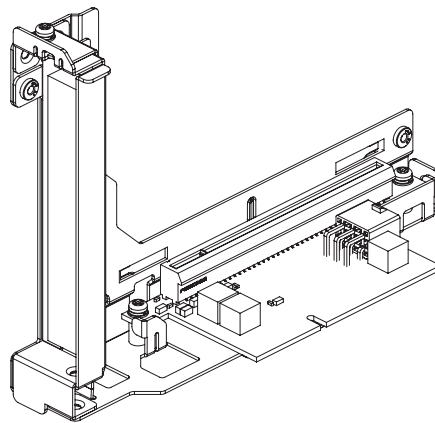

Step 5 Remove the screw indicated and separate I/O bracket from Assembly Riser Card.

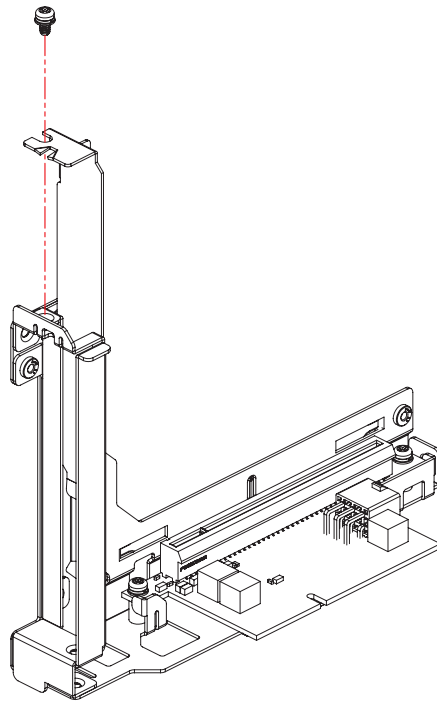

Step 6 Instal PCI/PCIe card and fasten the screw indicated.

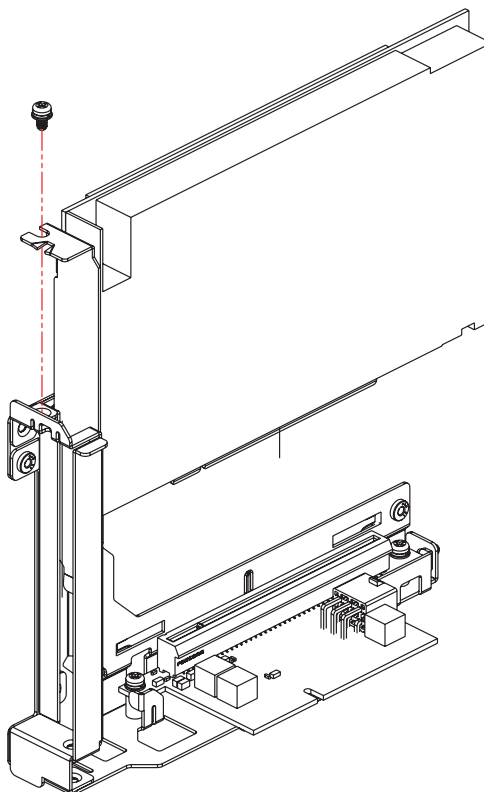

3.8 Installing SSD/HDD

Step 1 Use the trigger and open SSD/HDD tray.



Step 2 Open front door of SSD/HDD tray.



Step 3 Install 2.5" SSD/HDD into the tray and close.




Step 4 Lock the SSD/HDD tray with key.




3.9 Installing M.2

3.9.1 Key E 2230, Key M 2280


Step 1 Turn the system upside-down on a steady surface. Remove the screws indicated.

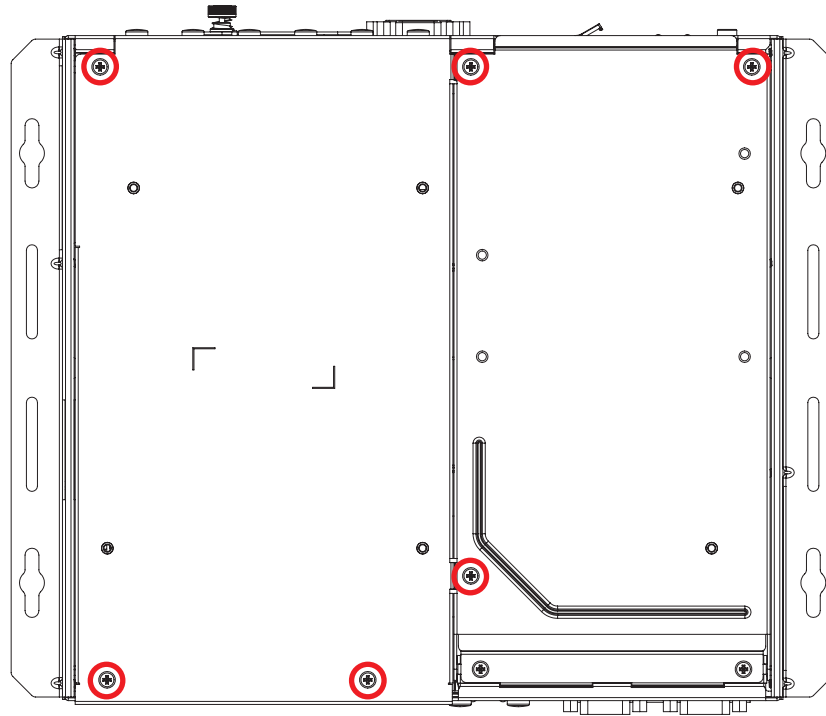


Step 2 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

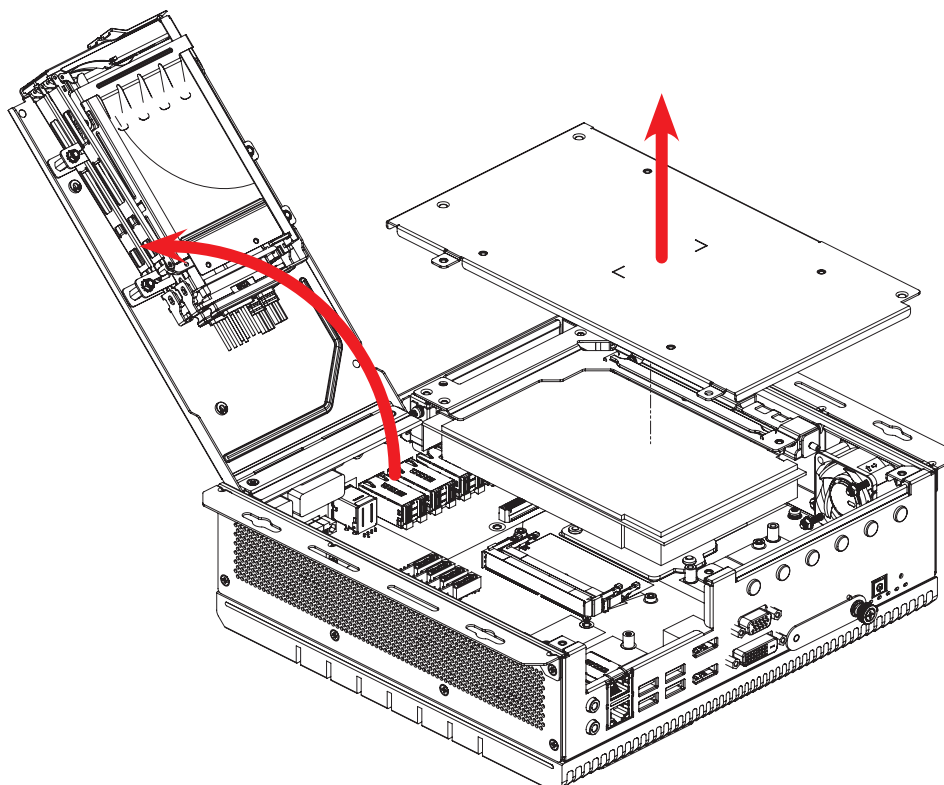


Step 3 Separate Assembly_Riser Card from the enclosure with the puller.

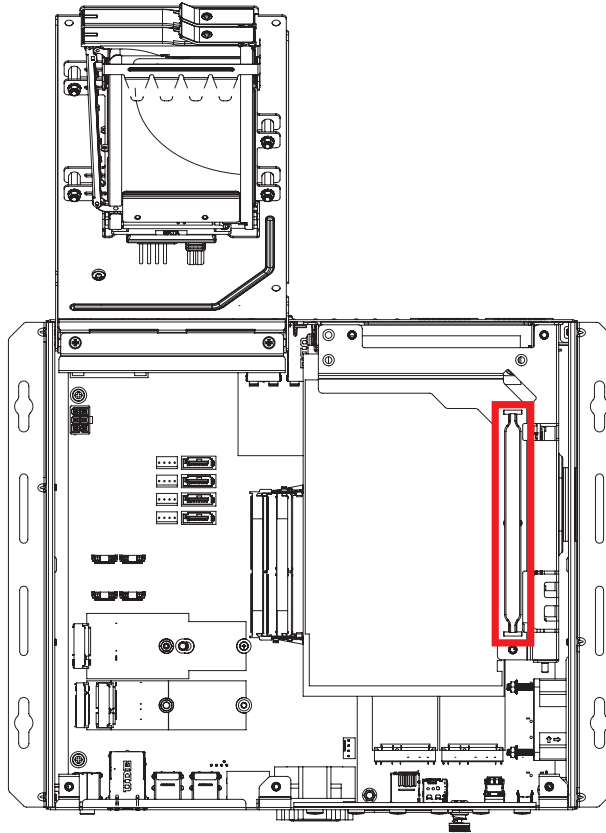



Step 4 Install M.2 module into the slot.

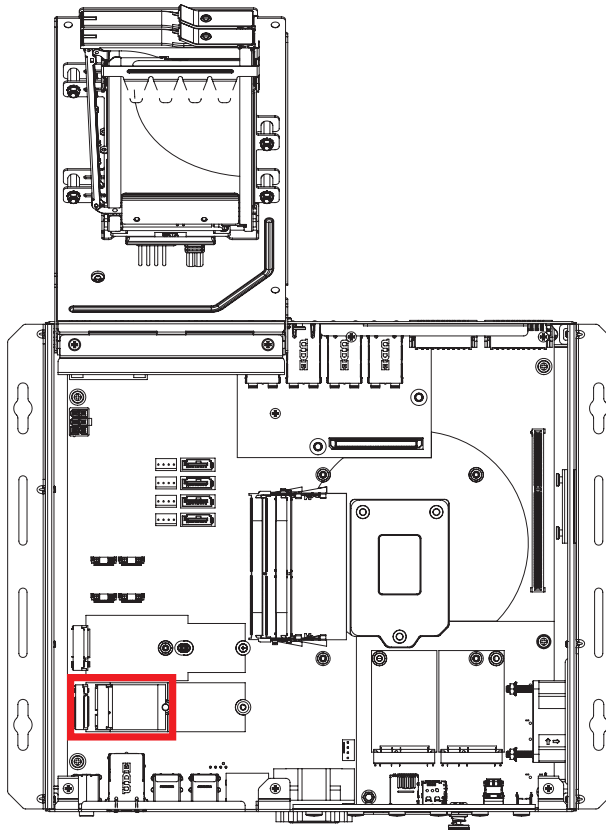

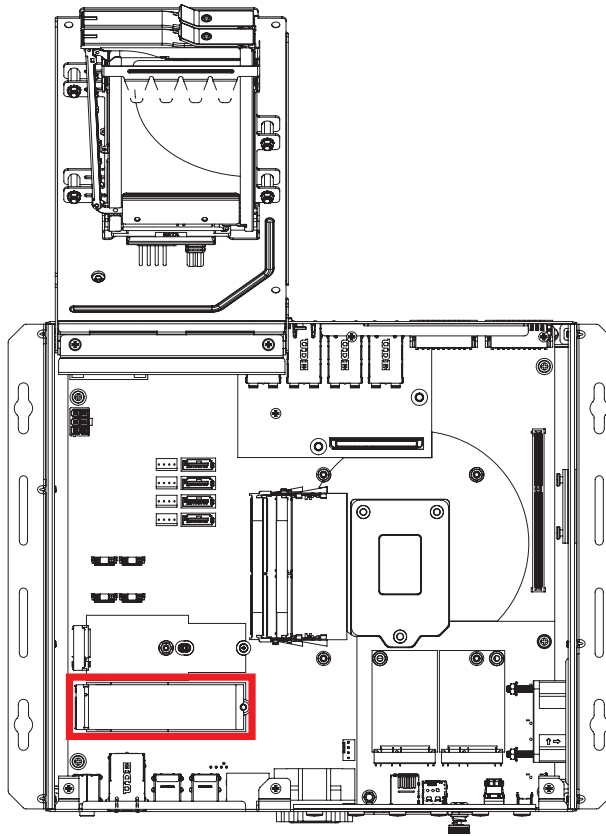


Step 5 Fasten the module with the screw indicated.

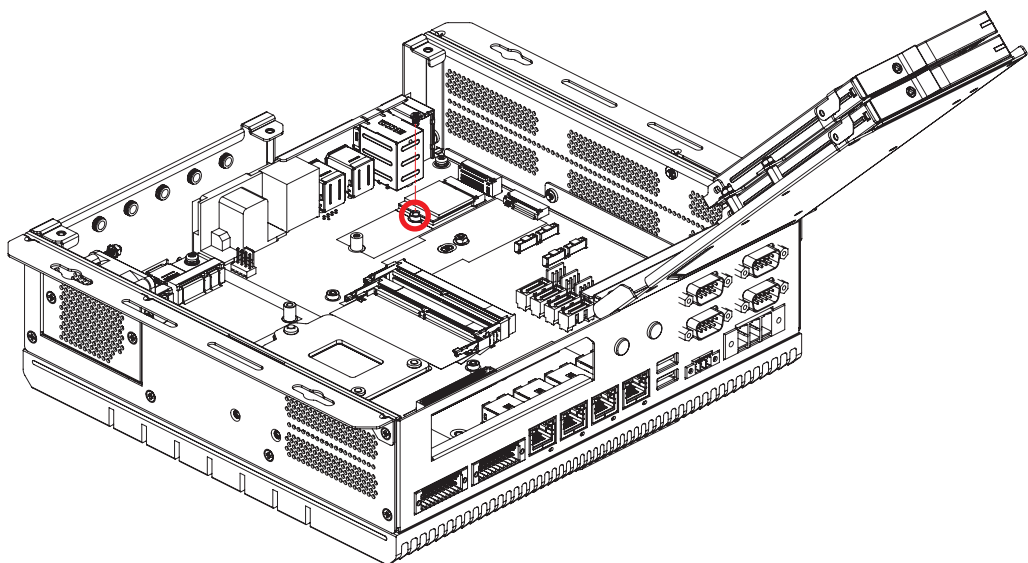

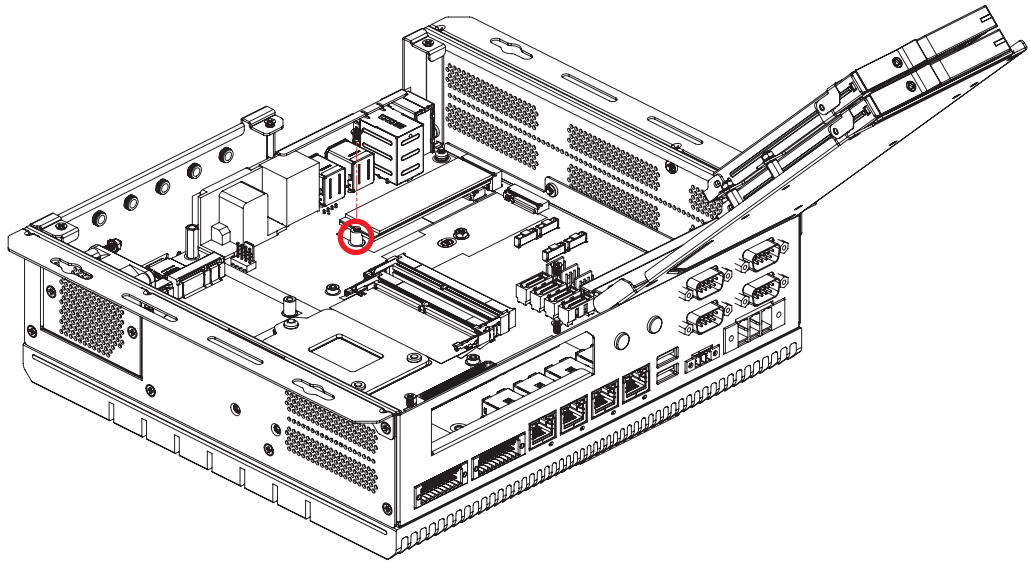


3.9.2 Key B 2242, 3050, 3052, 2280


Step 1 Turn the system upside-down on a steady surface. Remove the screws indicated.

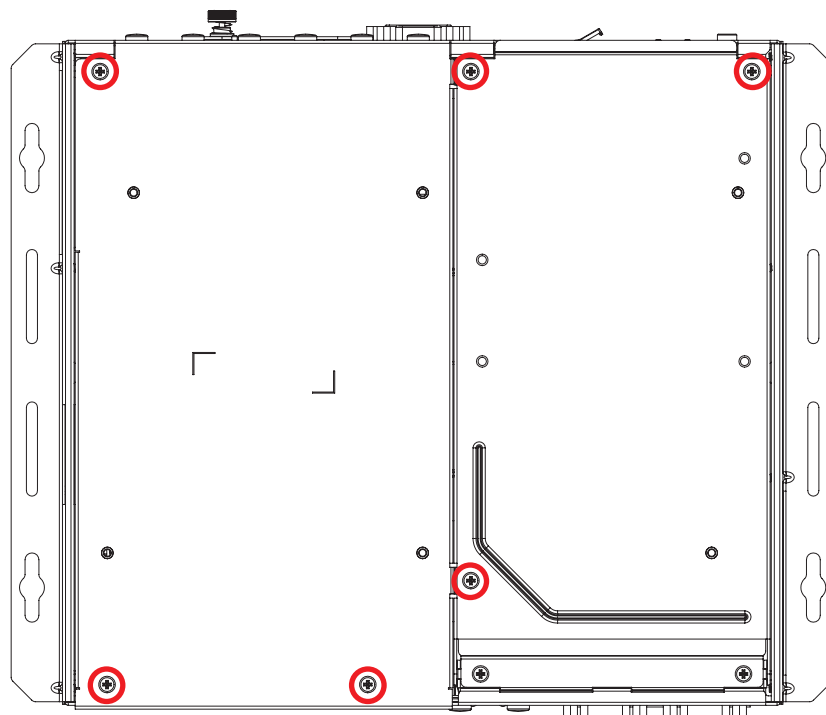


Step 2 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

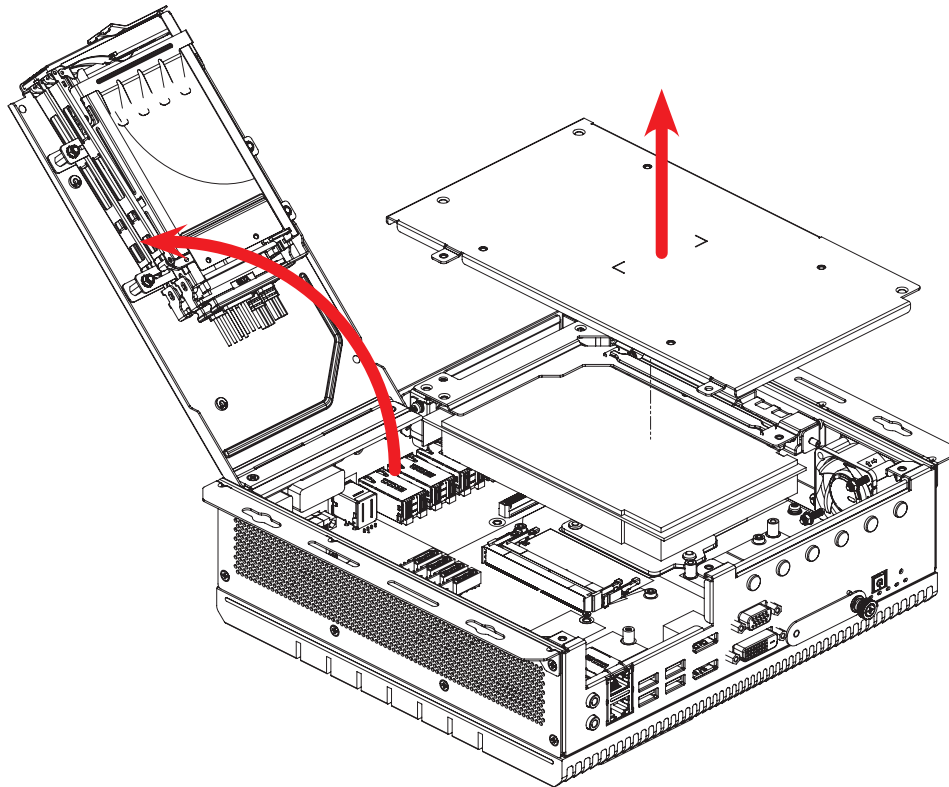


Step 3 Separate Assembly_Riser Card from the enclosure with the puller.

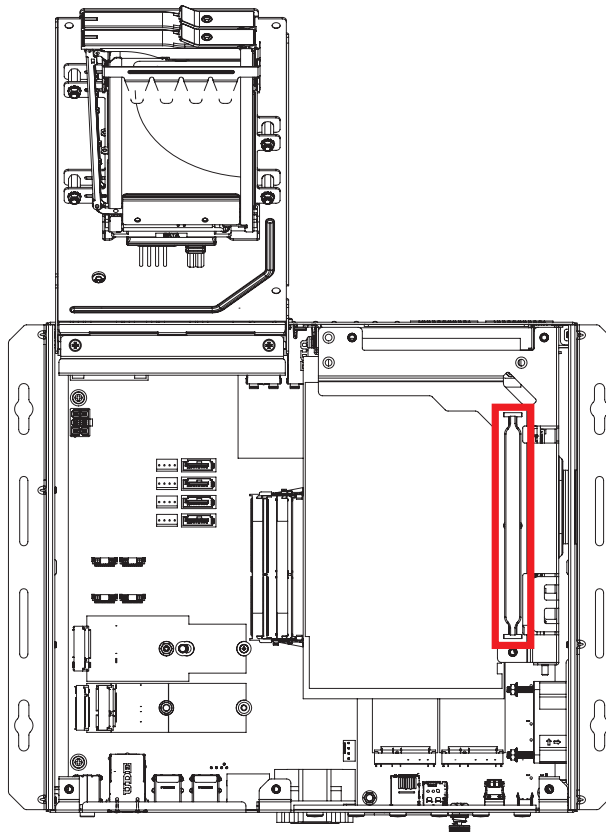


Step 4 Change the position of the standoff indicated, When using Key B 3050, 3052, 2280.

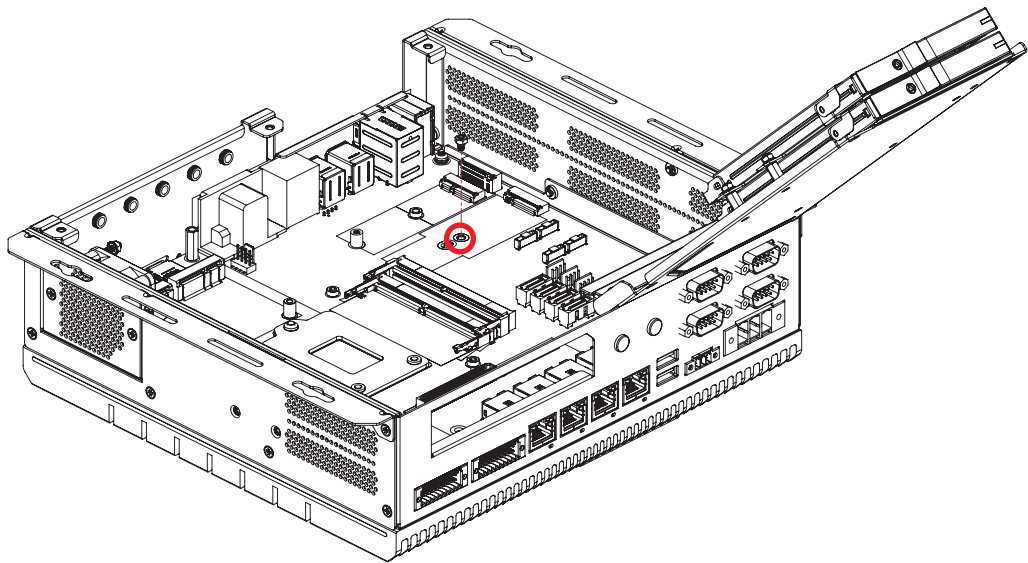

Step 5 Install M.2 module into the slot.

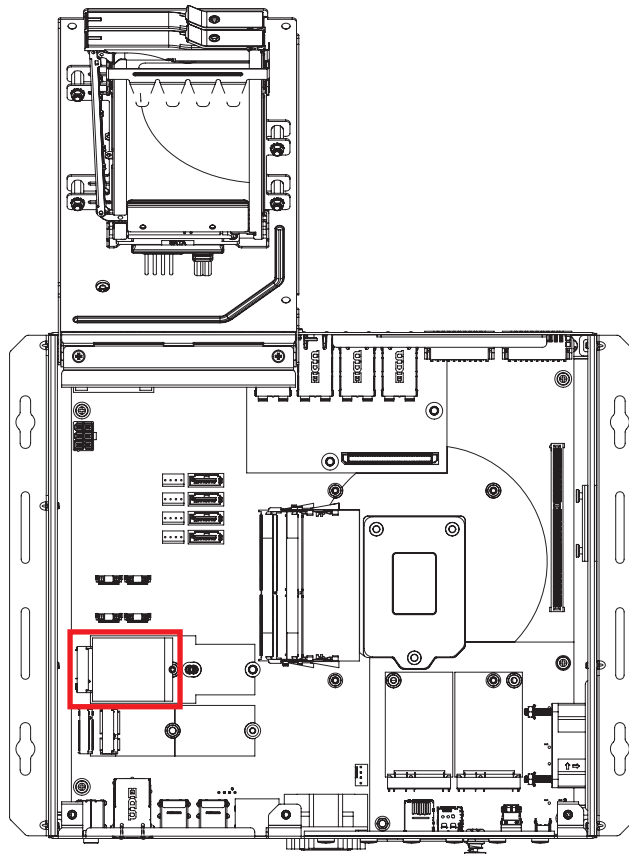

Step 6 Fasten the module with the screw indicated.

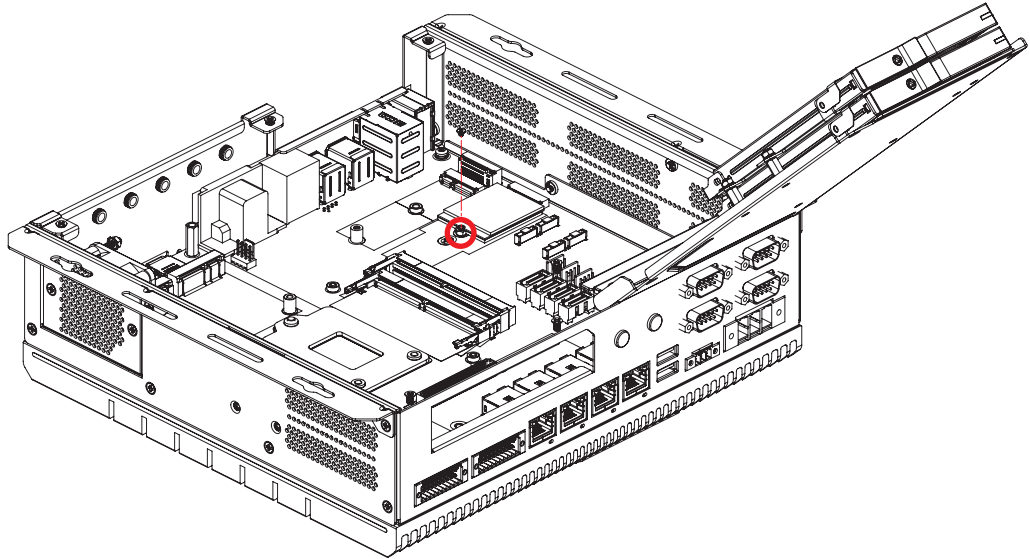


3.10 Installing Antenna Cable


Step 1 Check antenna cable and washer.




Step 2 Turn the system upside-down on a steady surface. Remove the screws indicated.

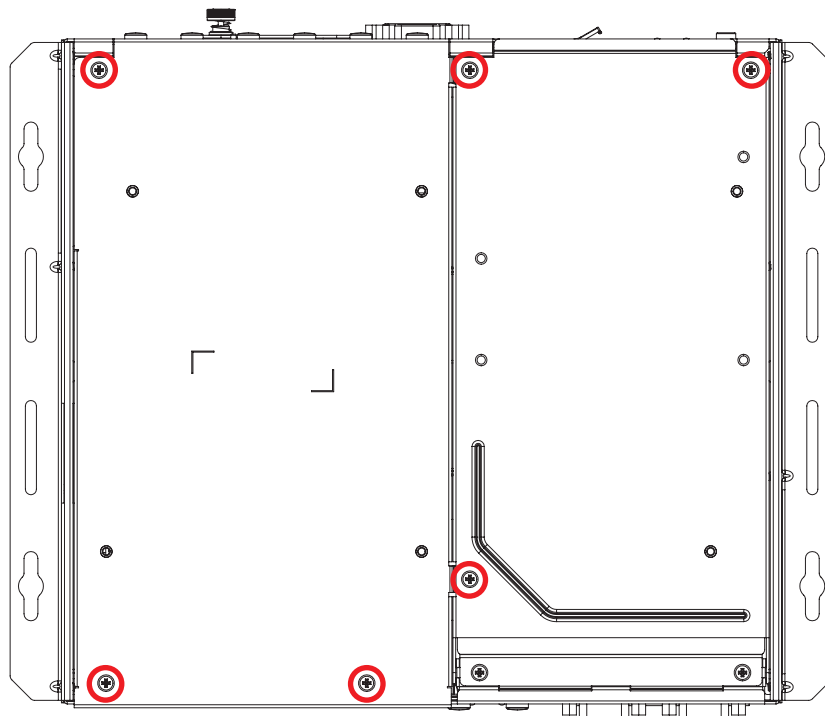


Step 3 Open Cover Bottom HDD Tray and separate Cover Bottom Riser Card from the enclosure.

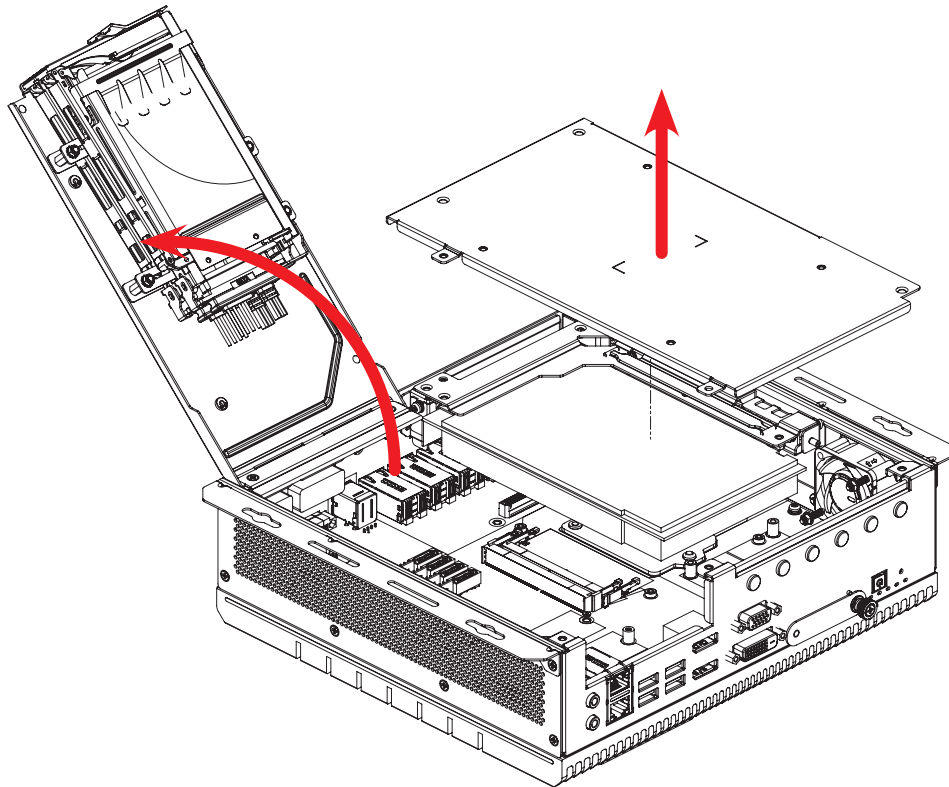

Step 4 Separate Assembly Riser Card from the enclosure with the puller.

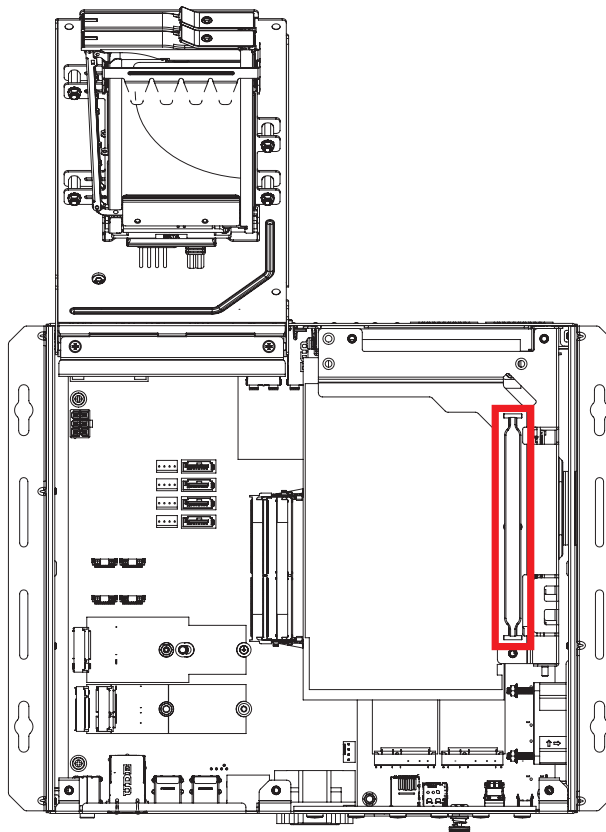


Step 5 Install the cable with nut and washer indicated.

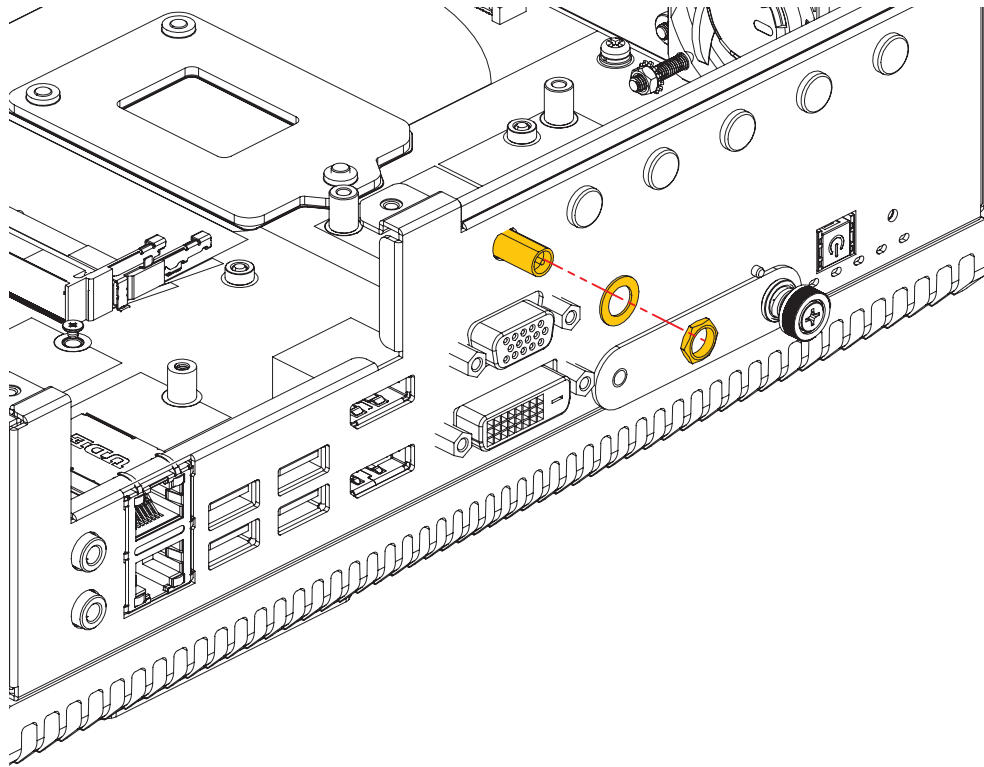


3.11 Mounting Your ECX-2200A/2100A PEG

3.11.1 Wall Mount

Step 1 Loosen the screws (4 pcs) indicated.

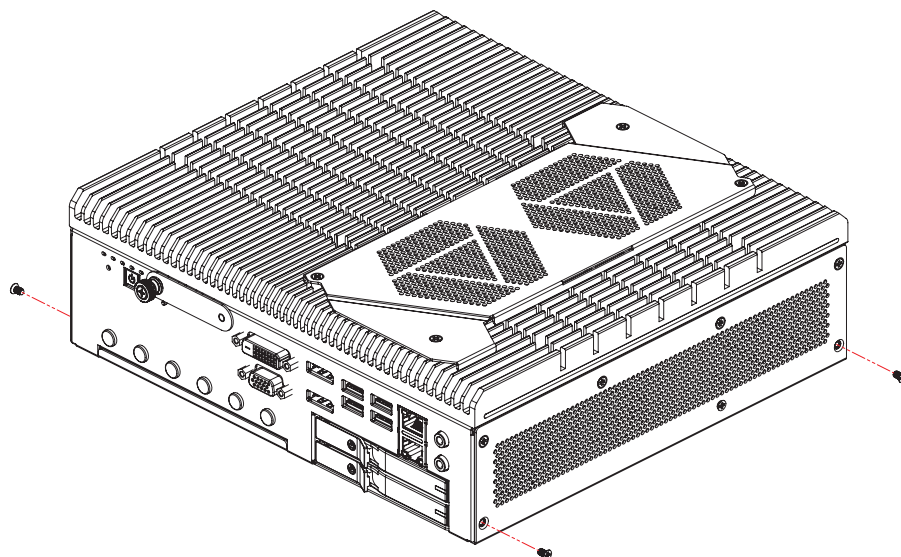


Step 2 Install the brackets with the screws (6 pcs) indicated.

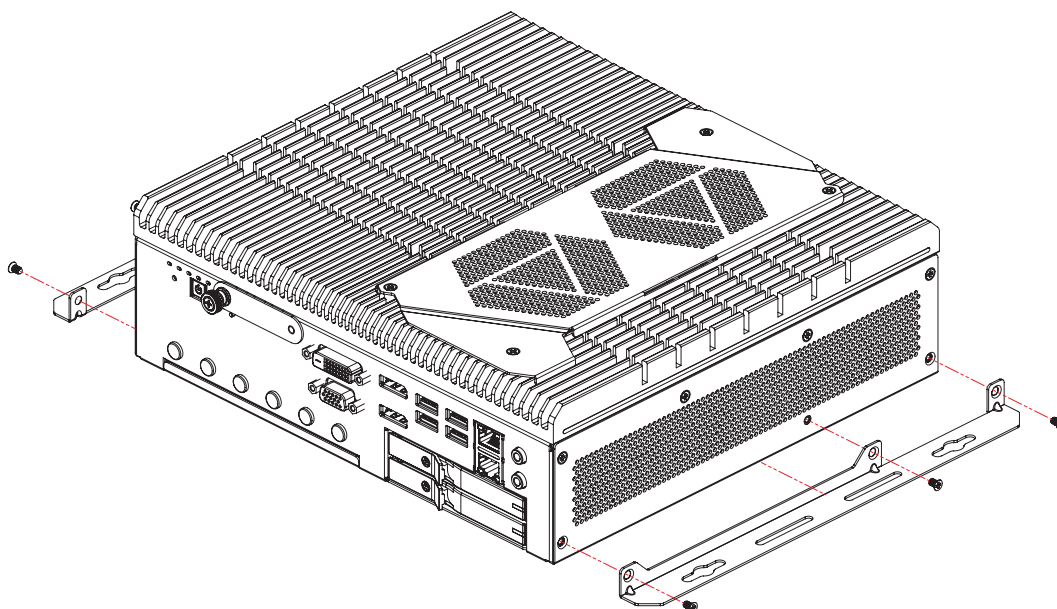


3.11.2 VESA Mount

Install the brackets with the screws (6 pcs) indicated.

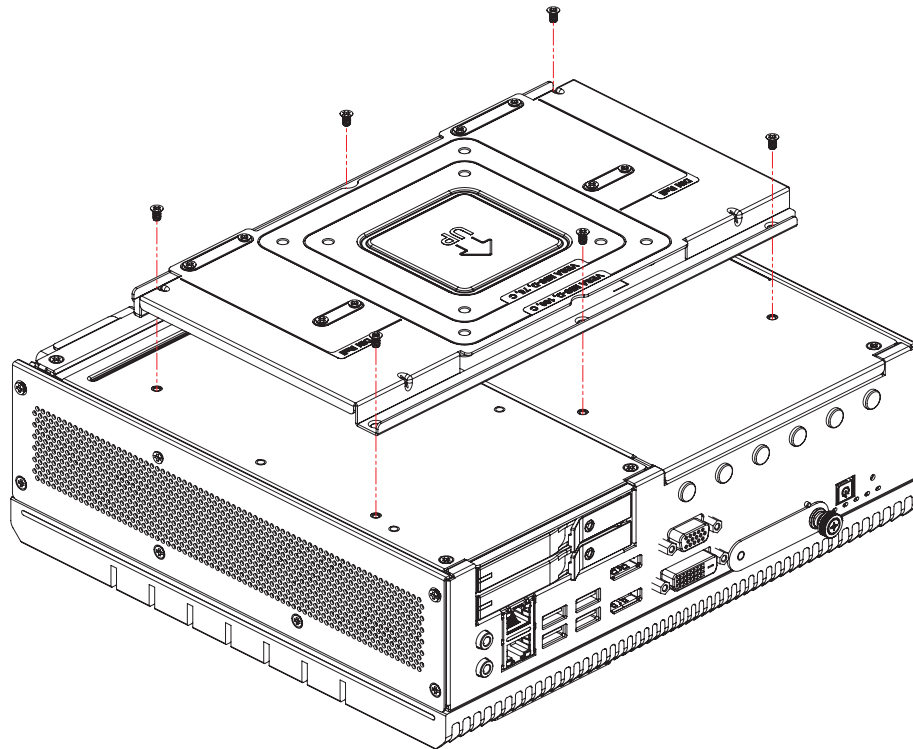


3.11.3 DIN Rail Mount

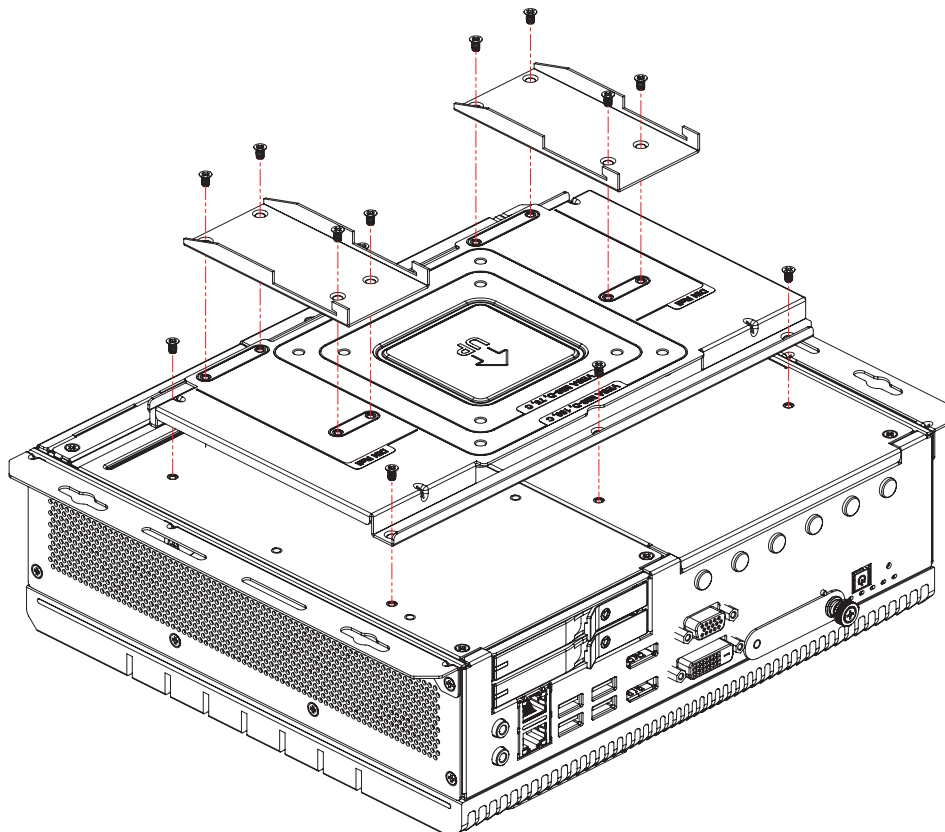


3.11.4 2U Rack Mount


Step 1 Loosen captive panel screw and open Cover Top.

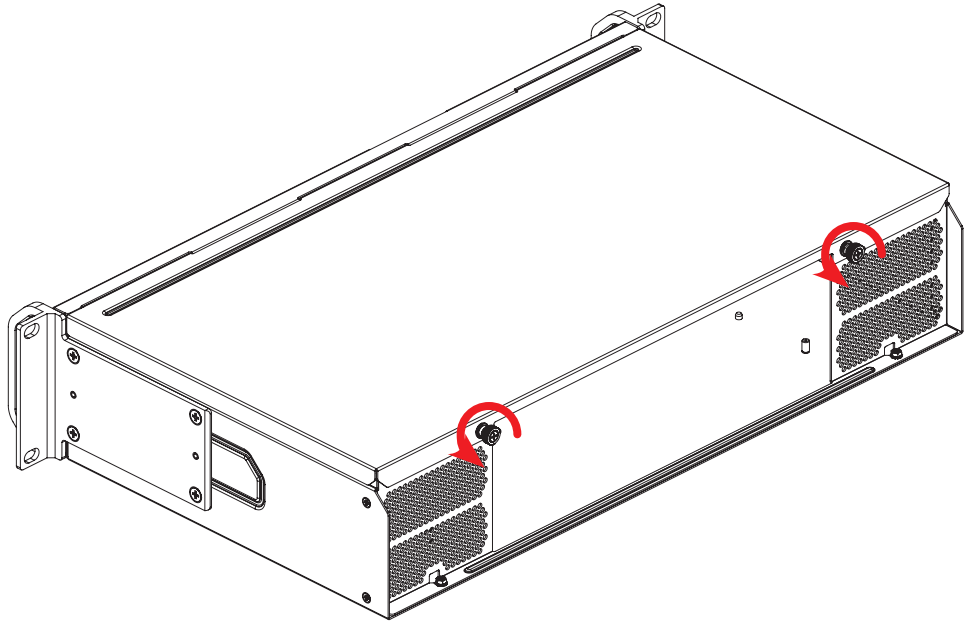


Step 2 Open Cover Top.

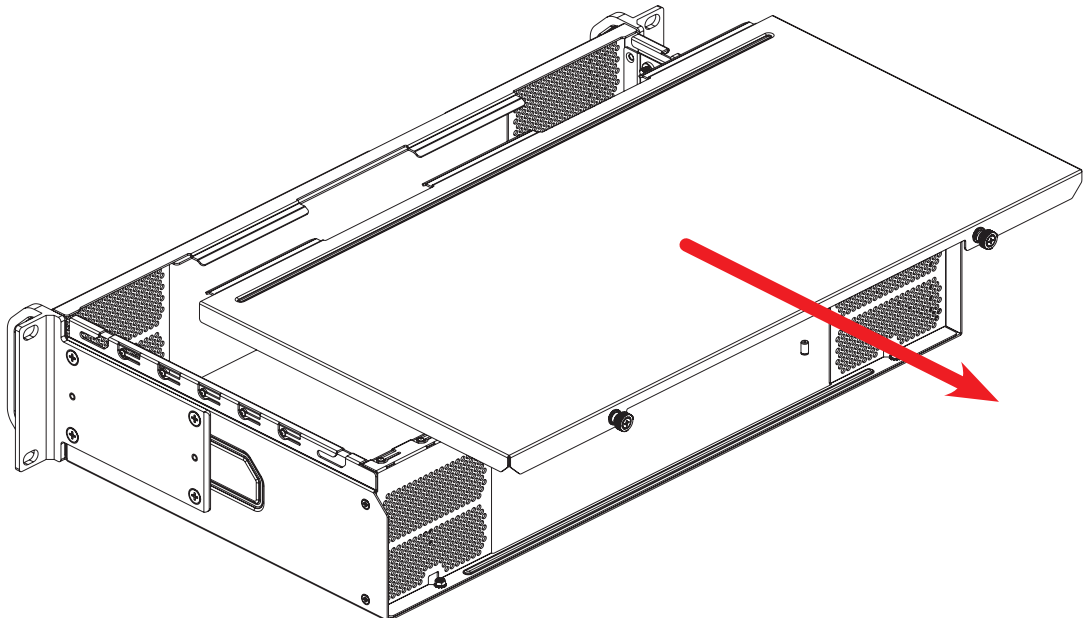


Step 3 Remove the screws and the nuts indicated.

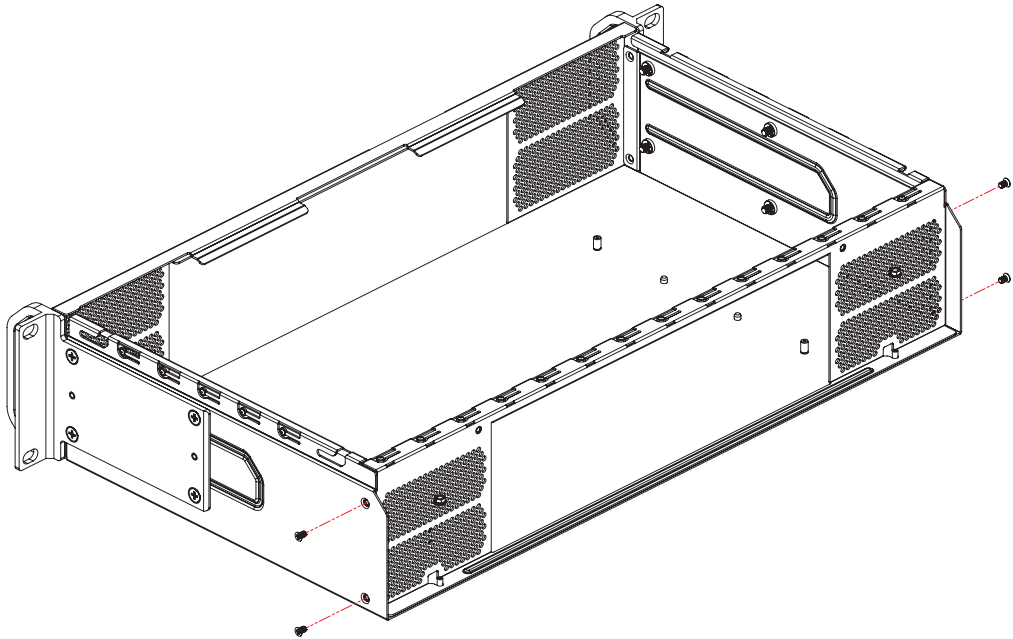

Step 4 Open Cover Rear.

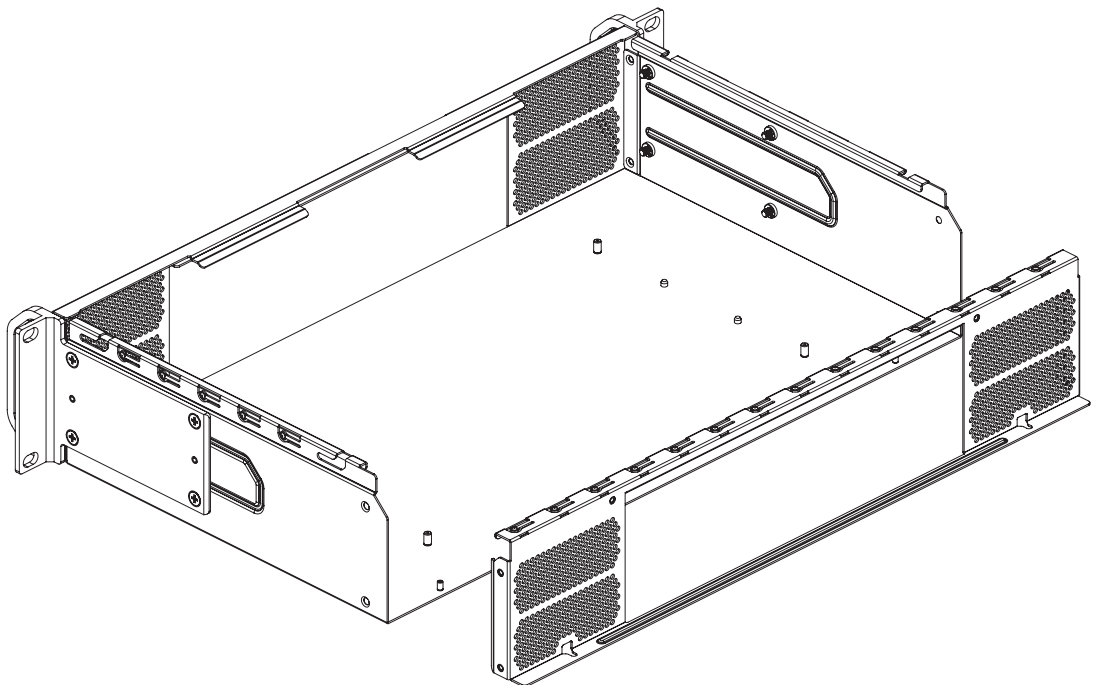

Step 5 Fasten the nuts indicated.

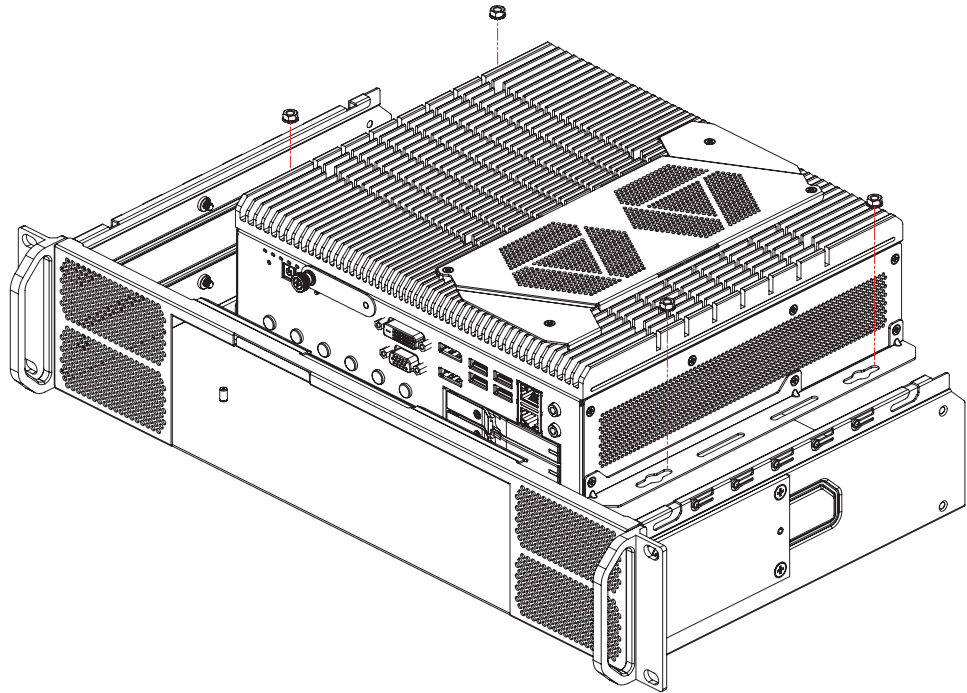

4

BIOS SETUP

4.1 Entering BIOS Setup

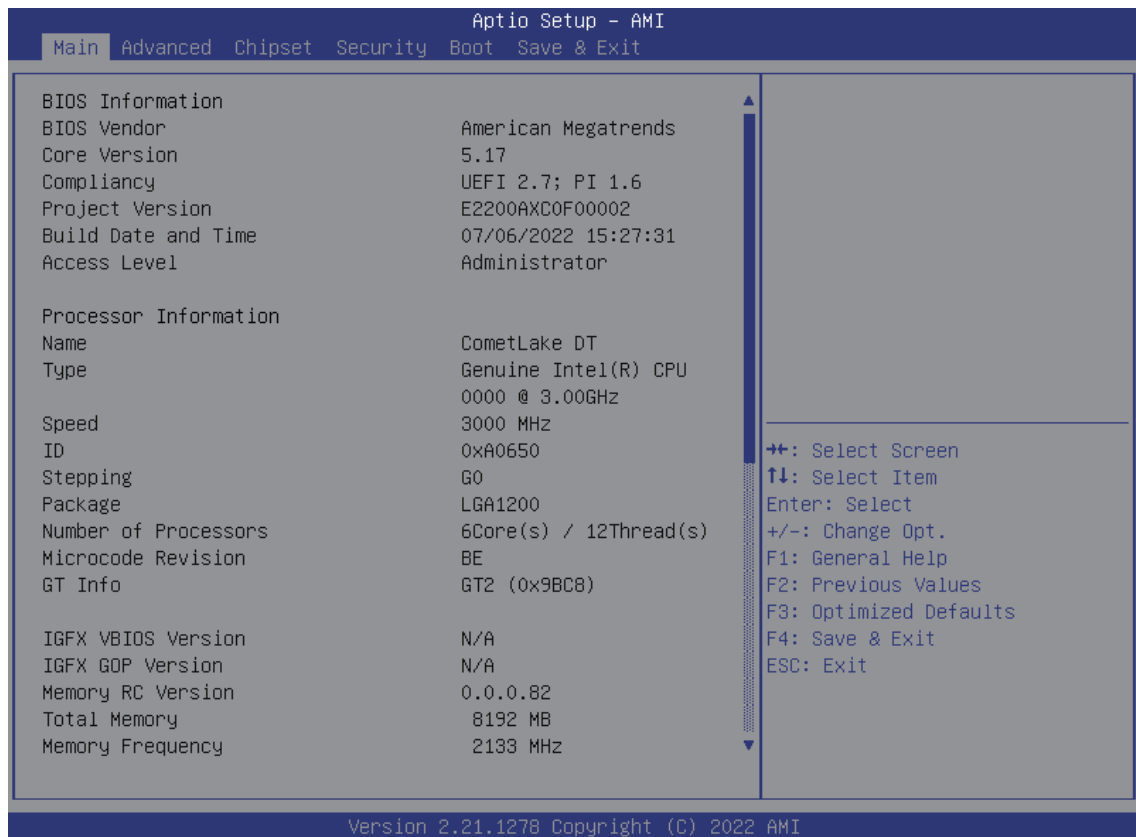


Figure 4-1 : Entering Setup Screen

BIOS provides an interface for users to check and change system configuration. The BIOS setup program is accessed by pressing the key when POST display output is shown.

4.2 Main

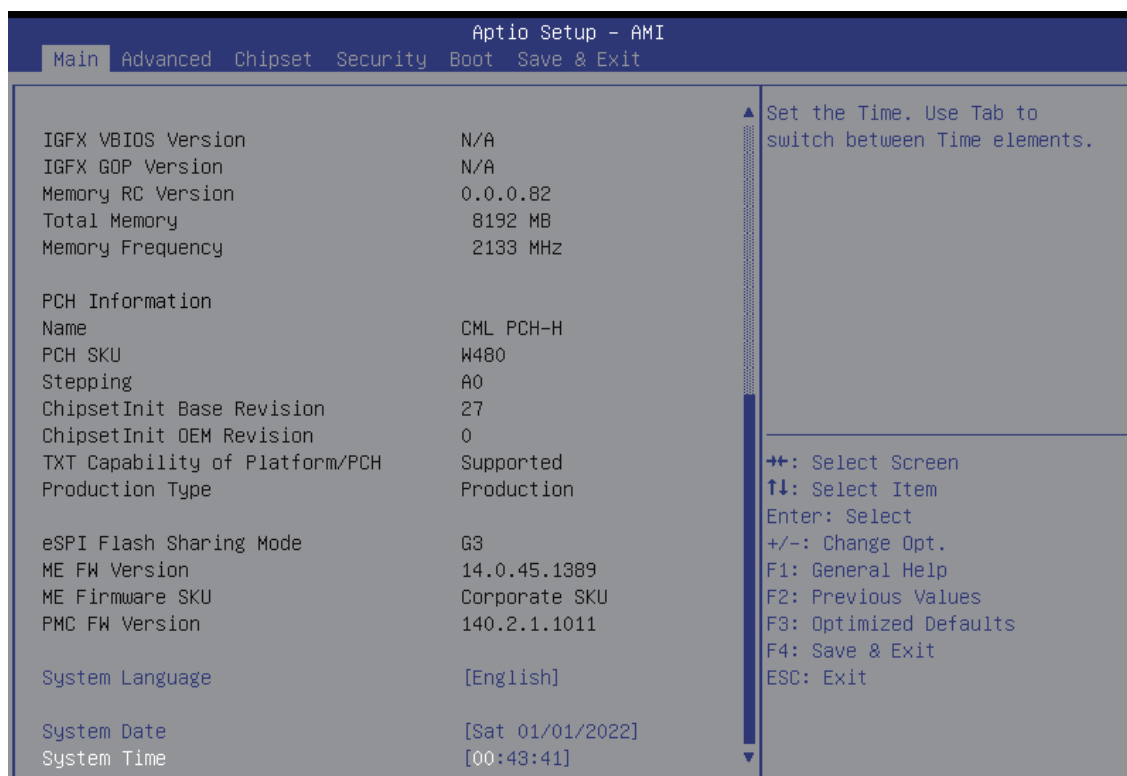


Figure 4-2 : BIOS Main Menu

The main menu displays BIOS version and system information. There are two options on the main menu, system date and system time.

System Date

Set the Date. Use Tab to switch between Date elements.

Default Ranges:

Year: 1998-9999

Months: 1-12

Days: Dependent on month

Range of Years may vary.

System Time

Set the time. Use Tab to switch between time elements.

4.3 Advanced



Figure 4-3 : BIOS Advanced Menu

Select advanced tab to enter advanced BIOS setup options such as CPU configuration, USB configuration, and Network Stack configuration.

4.3.1 Connectivity Configuration

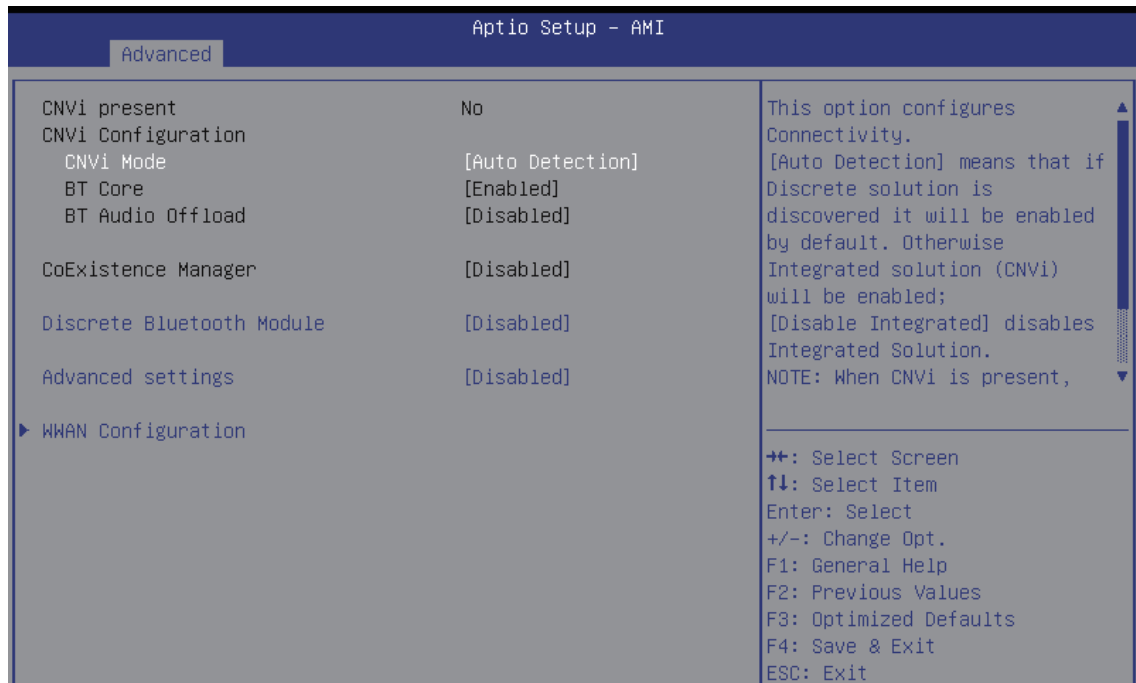


Figure 4-3-1 : Connectivity Configuration

CNVi Mode

This option configures Connectivity.

[Auto Detection] means that if Discrete solution is discovered it will be enabled by default. Otherwise Integrated solution (CNVi) will be enabled;

[Disable Integrated] disables Integrated Solution.

NOTE: When CNVi is present, the GPIO pins that are used for radio interface cannot be assigned to the other native function.

BT Core

This is an option intended to Enable/Disable BT Core in CNVi.

BT Audio Offload

This is an option to Enable/Disable BT Audio Offload which enables audio input from BT device in HFP format to the audio DSP and enables power efficient audio output to BT device via A2DP format. This feature only support with Intel(R) Wireless-AX 22560.

Discrete Bluetooth Module

Seriallo UART0 needs to be enabled to select BT Module.

Advanced settings

Configure ACPI objects for wireless devices.

WWAN Configuration

Configure WWAN related options.

4.3.2 CPU Configuration

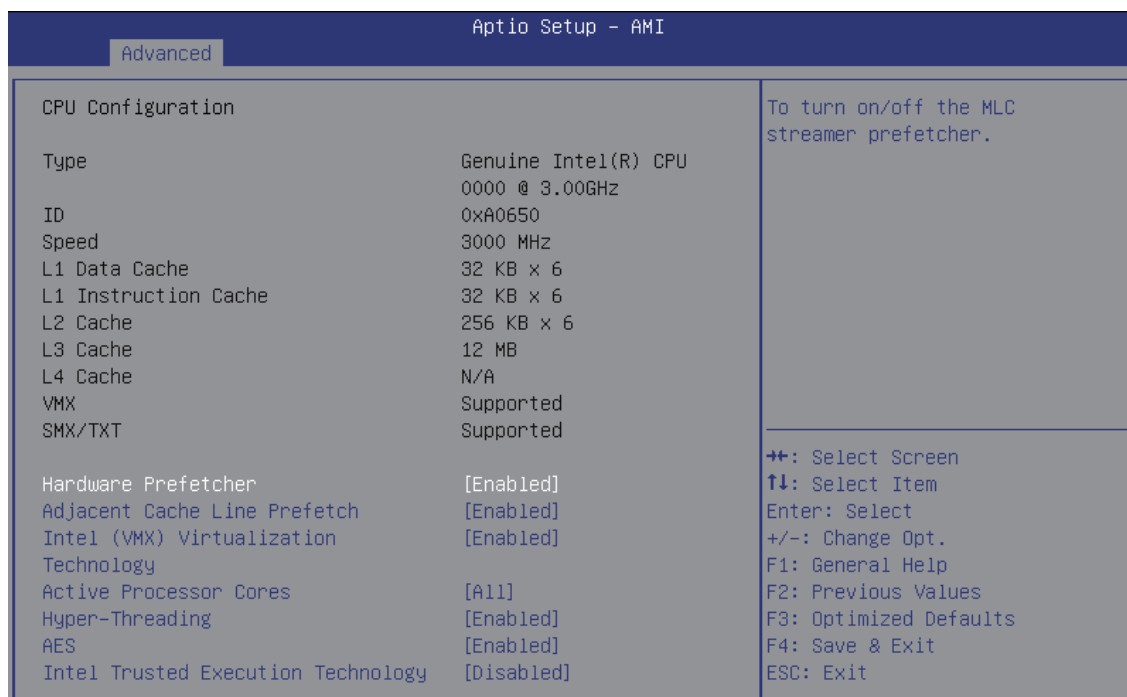


Figure 4-3-2 : CPU Configuration

Hardware Prefetcher

To turn on/off the MLC streamer prefetcher.

Adjacent Cache Line Prefetch

To turn on/off prefetching of adjacent cache lines.

Intel (VMX) Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Active Processor Cores

Number of cores to enable in each processor package.

Hyper-Threading

Enable or Disable Hyper-Threading Technology.

AES

Enable/Disable AES (Advanced Encryption Standard).

Intel Trusted Execution Technology

Enables utilization of additional hardware capabilities provided by Intel (R) Trusted Execution Technology. Changes require a full power cycle to take effect.

4.3.3 Power & Performance

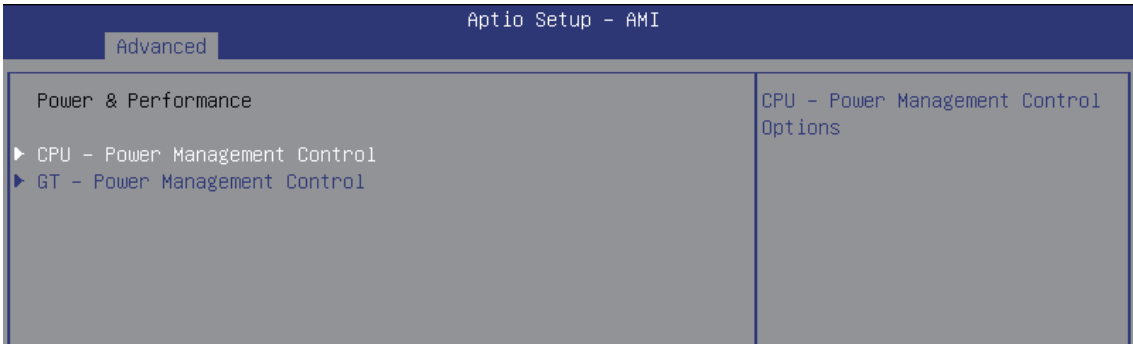


Figure 4-3-3 : Power & Performance

4.3.3.1 CPU – Power Management Control

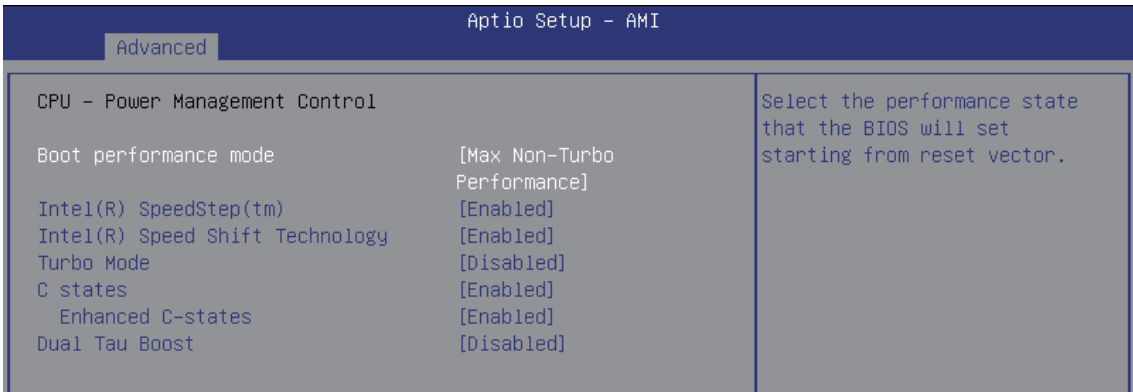


Figure 4-3-3-1 : CPU - Power Management Control

Boot performance mode

Select the performance state that the BIOS will set starting from reset vector.

Intel(R) SpeedStep(tm)

Allows more than two frequency ranges to be supported.

Intel(R) Speed Shift Technology

Enable/Disable Intel(R) Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.

Turbo Mode

Enable/Disable processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled).

C states

Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

Enhanced C-states

Enable/Disable C1E. When enabled, CPU will switch to minimum speed when all cores enter C-State.

Dual Tau Boost

Enable Dual Tau Boost feature. This is only applicable for CMLS 35W/65W/125W sku. When DPTF is enabled this feature is ignored.

4.3.3.2 GT – Power Management Control

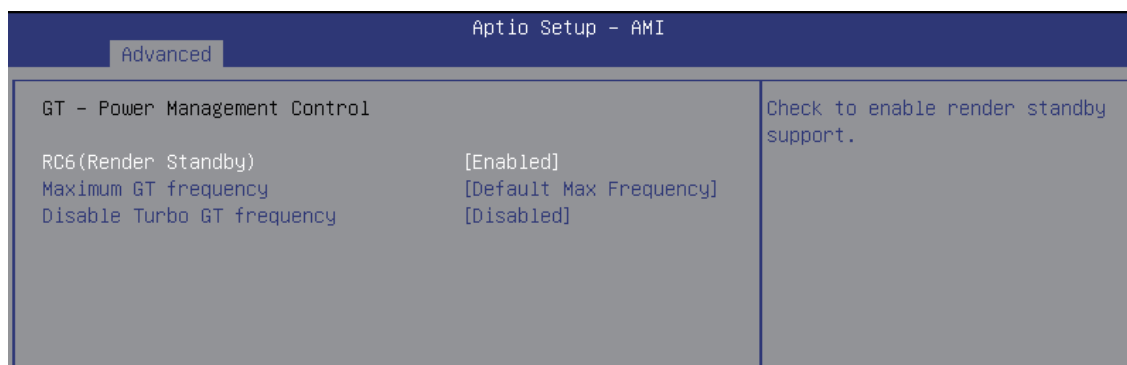


Figure 4-3-2 : GT - Power Management Control

RC6(Render Standby)

Check to enable render standby support.

Maximum GT frequency

Maximum GT frequency limited by the user. Choose between 350MHz (RPN) and 1150MHz (RP0). Value beyond the range will be clipped to min/max supported by SKU.

Disable Turbo GT frequency

Enabled: Disables Turbo GT frequency. Disabled: GT frequency is not limited.

4.3.4 PCH-FW Configuration

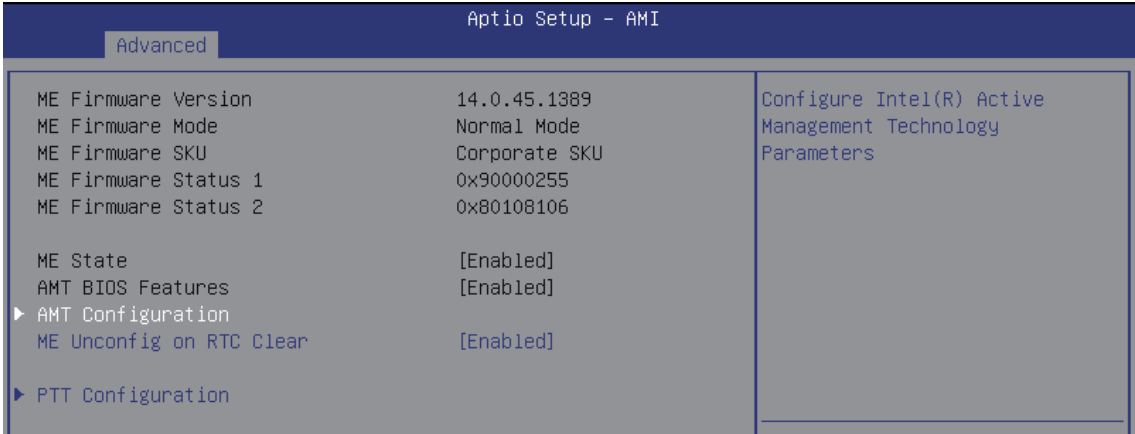


Figure 4-3-4: PCH-FW Configuration

ME State

When Disabled ME will be put into ME Temporarily Disabled Mode.

AMT BIOS Features

When disabled AMT BIOS Features are no longer supported and user is no longer able to access MEBx Setup.

Note: This option does not disable Manageability Features in FW.

AMT Configuration

Configure Intel(R) Active Management Technology Parameters.

ME Unconfig on RTC Clear

When Disabled ME will not be unconfigured on RTC Clear.

PTT Configuration

Configure PTT.

4.3.4.1 AMT Configuration

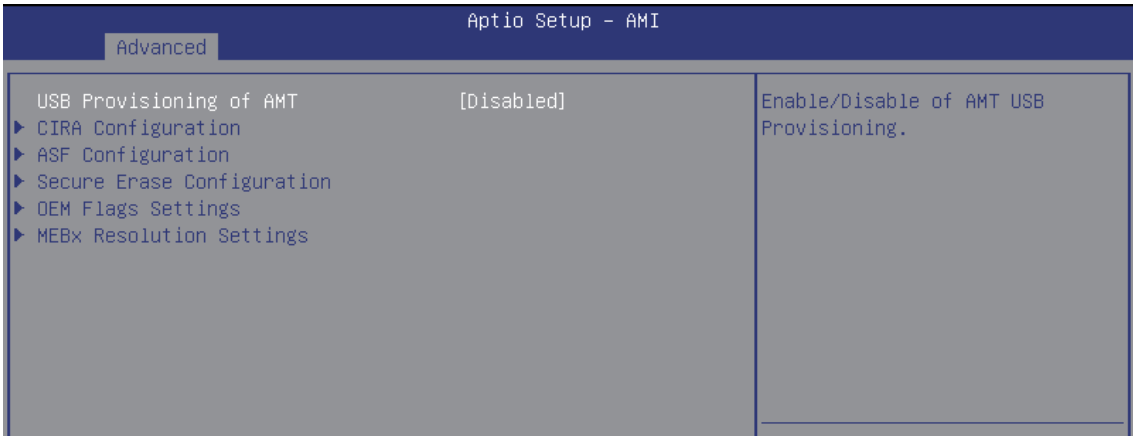


Figure 4-3-4-1: AMT Configuration

USB Provisioning of AMT

Enable/Disable of AMT USB Provisioning.

CIRA Configuration

Configure Remote Assistance Process parameters.

ASF Configuration

Configure Alert Standard Format parameters.

Secure Erase Configuration

Secure Erase configuration menu.

OEM Flags Settings

Configure OEM Flags.

MEBx Resolution Settings

Resolution settings for MEBx display modes.

4.3.4.2 PTT Configuration



Figure 4-3-4-2: PTT Configuration

PTT Capability / State

Platform Trust Technology Capability / Enablement State.

TPM Device Selection

Selects TPM device: PTT or dTPM.

PTT - Enables PTT in SkuMgr dTPM 1.2 - Disables PTT in SkuMgr Warning !

PTT/dTPM will be disabled and all data saved on it will be lost.

4.3.5 Trusted Computing

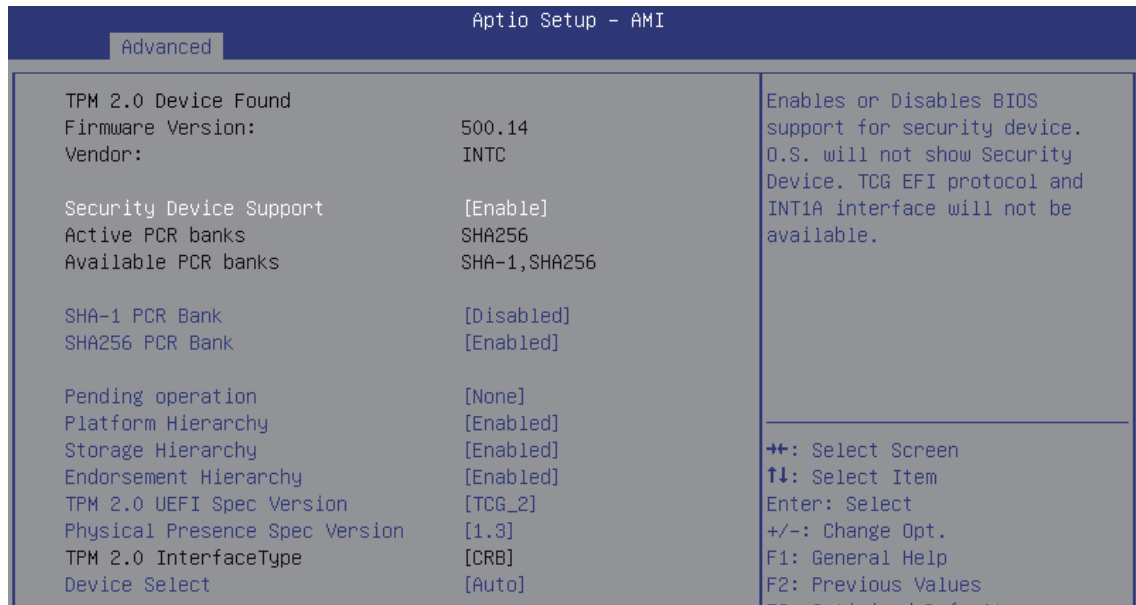


Figure 4-3-5: Trusted Computing

Control the TPM device status and display related information if TPM chip or firmware TPM is present.

Security Device Support

Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

SHA-1 PCR Bank

Enable or Disable SHA-1 PCR Bank.

SHA256 PCR Bank

Enable or Disable SHA256 PCR Bank.

Pending operation

Schedule an Operation for the Security Device.

NOTE: Your Computer will reboot during restart in order to change State of Security Device.

Platform Hierarchy

Enable or Disable Platform Hierarchy.

Storage Hierarchy

Enable or Disable Storage Hierarchy.

Endorsement Hierarchy

Enable or Disable Endorsement Hierarchy.

TPM 2.0 UEFI Spec Version

Select the TCG2 Spec Version Support,

TCG_1_2: the Compatible mode for Win8/Win10,

TCG_2: Support new TCG2 protocol and event format for Win10 or later

Physical Presence Spec Version

Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.

TPM 2.0 InterfaceType

Select the Communication Interface to TPM 20 Device.

Device Select

TPM 1.2 will restrict support to TPM 1.2 devices, TPM 2.0 will restrict support to TPM 2.0 devices, Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated.

4.3.6 ACPI Settings

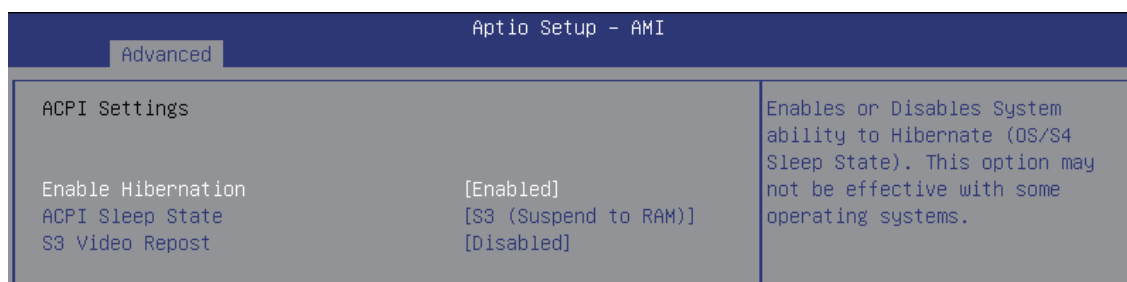


Figure 4-3-6: ACPI Settings

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

S3 Video Repost

Enable or Disable S3 Video Repost.

4.3.7 SMART Settings



Figure 4-3-7: SMART Settings

SMART Self Test

Run SMART Self Test on all HDDs during POST.

4.3.8 IT8786 Super IO Configuration



Figure 4-3-8: IT8786 Super IO Configuration

Serial Port 1 Configuration

Set Parameters of Serial Port 1 (COM1).

Serial Port 2 Configuration

Set Parameters of Serial Port 2 (COM2).

Serial Port 3 Configuration

Set Parameters of Serial Port 3 (COM3).

Serial Port 4 Configuration

Set Parameters of Serial Port 4 (COM4).

4.3.8.1 Serial Port Configuration

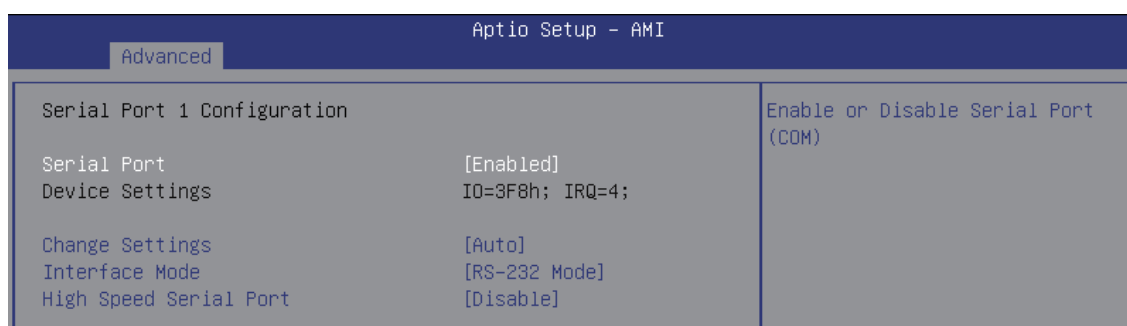


Figure 4-3-8-1: Serial Port Configuration

Serial Port

Enable or Disable Serial Port (COM).

Change Settings

Select an optimal settings for Super IO Device.

Interface Mode

Select UART mode.

High Speed Serial Port

Enable or disable High Speed Serial Port.

Note!!!A device driver is required on OS for high speed serial port function.

(High Speed Serial Port is Port 1 only)

4.3.9 Hardware Monitor

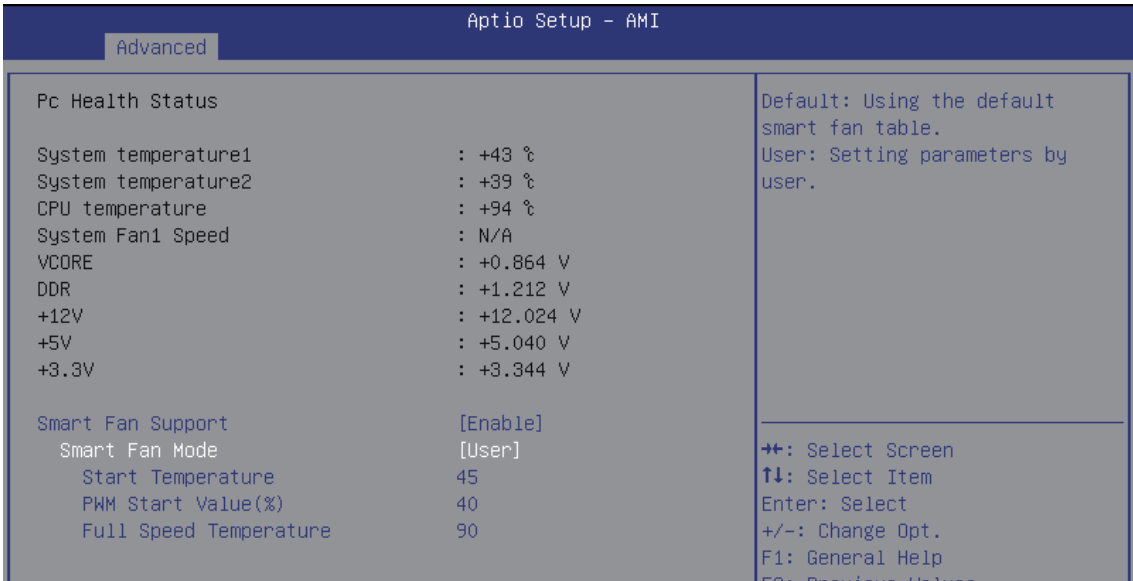


Figure 4-3-9: Hardware Monitor

The IT8786 SIO features an enhanced hardware monitor providing thermal, fan speed, and system voltages' status monitoring.

Smart Fan Support

Smart Fan Support. Work with Full Speed if "Smart Fan Support" is Disabled.

Smart Fan Mode

Default: Using the default smart fan table. User: Setting parameters by user.

Start Temperature

Temperature Limit value of Fan Start (Degree C). Range:10-80.

PWM Start Value(%)

Default PWM value of Fan. (15-100%).

Full Speed Temperature

Temperature Limit value of Fan Full Speed (Degree C). Range:50-90.

4.3.10 Serial Port Console Redirection

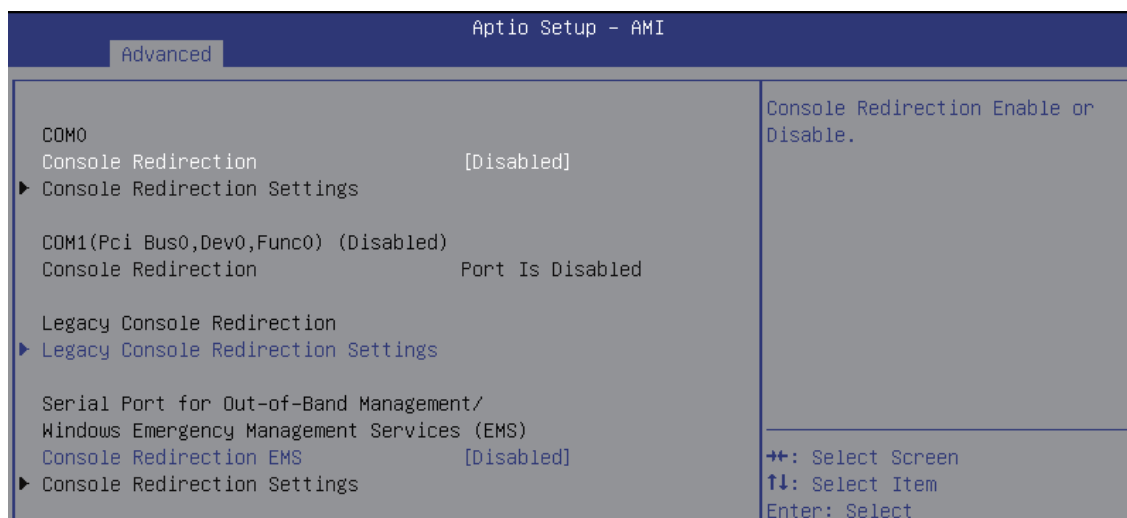


Figure 4-3-10: Serial Port Console Redirection

Console Redirection

Console Redirection Enable or Disable.

Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Legacy Console Redirection Settings

Legacy Console Redirection Settings.

Console Redirection EMS

Console Redirection Enable or Disable.

Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

4.3.11 Intel TXT Information

Aptio Setup - AMI	
Advanced	
Intel TXT Information	
Chipset	Production Fused
BiosAcm	Production Fused
Chipset Txt	Supported
Cpu Txt	Supported
Error Code	None
Class Code	None
Major Code	None
Minor Code	None

Figure 4-3-11: Intel TXT Information

Display Intel TXT information.

4.3.12 Acoustic Management Configuration

Aptio Setup - AMI	
Advanced	
Acoustic Management Configuration	Option to Enable or Disable Automatic Acoustic Management
Acoustic Management Configuration [Disabled]	
▶ SATA Controller 0 - PCI Bus 00 Dev 17 Fun 00	

Figure 4-3-12: Acoustic Management Configuration

Acoustic Management Configuration

Option to Enable or Disable Automatic Acoustic Management.

4.3.13 PCI Subsystem Setting

Aptio Setup - AMI	
Advanced	
AMI PCI Driver Version : A5.01.19	Globally Enables or Disables 64bit capable Devices to be Decoded in Above 4G Address Space (Only if System Supports 64 bit PCI Decoding).
PCI Settings Common for all Devices:	
Above 4G Decoding [Disabled]	
Change Settings of the Following PCI Devices:	
WARNING: Changing PCI Device(s) settings may have unwanted side effects! System may HANG! PROCEED WITH CAUTION.	

Figure 4-3-13: PCI Subsystem Settings

Above 4G Decoding

Globally Enables or Disables 64bit capable Devices to be Decoded in Above 4G Address Space (Only if System Supports 64 bit PCI Decoding).

4.3.14 USB Configuration

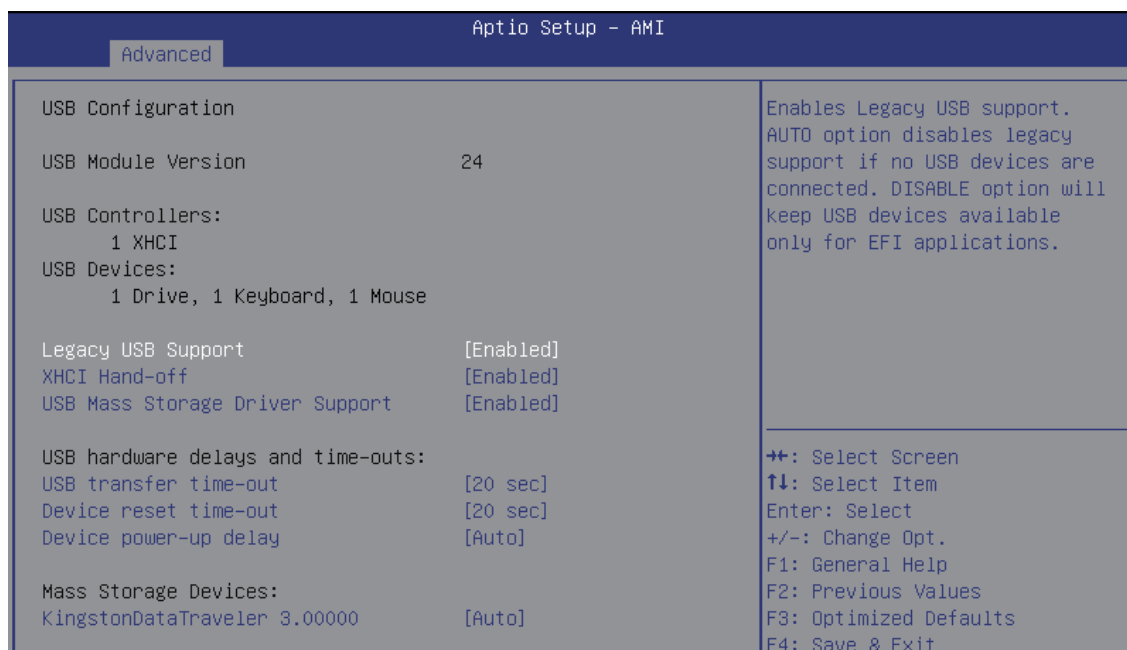


Figure 4-3-14: USB Configuration

Legacy USB Support

Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

USB Mass Storage Driver Support

Enable/Disable USB Mass Storage Driver Support.

USB transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass storage device Start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.

4.3.15 Network Stack Configuration

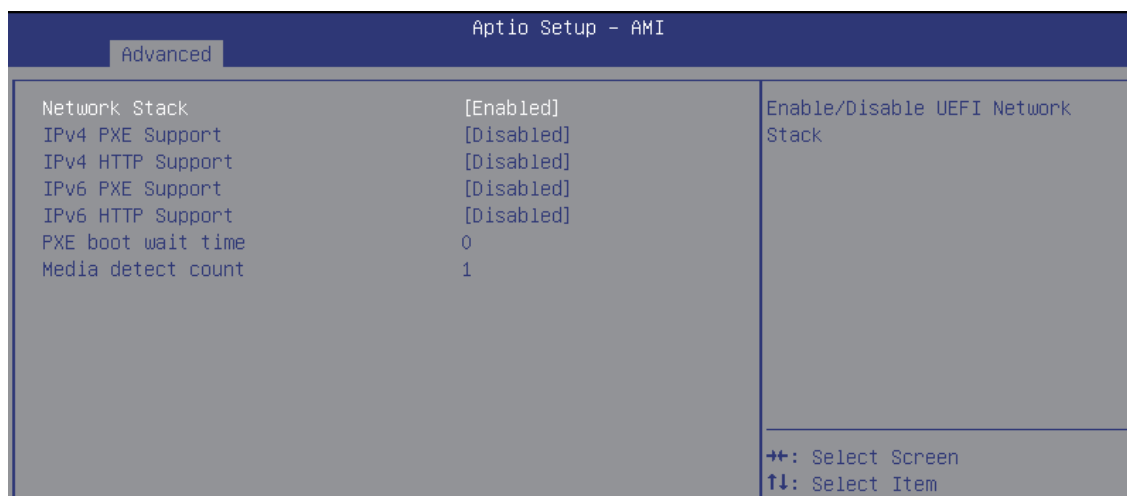


Figure 4-3-15: Network Stack Configuration

Network Stack

Enable/Disable UEFI Network Stack.

IPv4 PXE Support

Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

IPv4 HTTP Support

Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

IPv6 PXE Support

Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

IPv6 HTTP Support

Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.

PXE boot wait time

Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

Media detect count

Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

4.3.16 NVMe Configuration



Figure 4-3-16: NVMe Configuration

Display NVMe Controller and Drive information.

4.3.17 SDIO Configuration

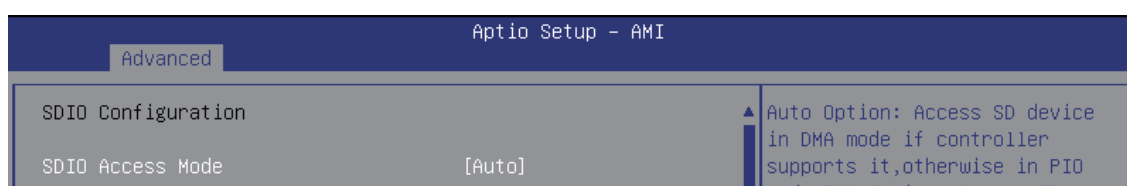


Figure 4-3-17: SDIO Configuration

SDIO Access Mode

Auto Option: Access SD device in DMA mode if controller supports it, otherwise in PIO mode.

DMA Option: Access SD device in DMA mode.

PIO Option: Access SD device in PIO mode.

4.4 Chipset



Figure 4-4: BIOS Chipset Menu

Select chipset tab to enter chipset BIOS setup options such as SA configuration and PCH-IO configuration.

4.4.1 System Agent (SA) Configuration



Figure 4-4-1: System Agent (SA) Configuration

VT-d

VT-d capability.

Memory Configuration

Memory Configuration Parameters.

Graphics Configuration

Graphics Configuration.

PEG Port Configuration

PEG Port Options.

Above 4GB MMIO BIOS assignment

Enable/Disable above 4GB MemoryMappedIO BIOS assignment. This is enabled automatically when Aperture Size is set to 2048MB.

4.4.1.1 Memory Configuration

Aptio Setup - AMI	
Chipset	
Memory Configuration	
Memory RC Version	0.0.0.82
Memory Frequency	2133 MHz
Memory Timings (tCL-tRCD-tRP-tRAS)	15-15-15-36
Channel 0 Slot 0	Not Populated / Disabled
Channel 1 Slot 0	Populated & Enabled
Size	8192 MB (DDR4)
Number of Ranks	1
Manufacturer	Kingston

Figure 4-4-1-1: Memory Configuration

Displays memory information.

4.4.1.2 Graphics Configuration

Aptio Setup - AMI	
Chipset	
Graphics Configuration	
Skip Scanning of External Gfx Card	[Disabled]
Primary Display	[Auto]
Internal Graphics	[Enabled]
GTT Size	[8MB]
Aperture Size	[256MB]
DVMT Pre-Allocated	[32M]
DVMT Total Gfx Mem	[MAX]

Figure 4-4-1-2: Graphics Configuration

Skip Scanning of External Gfx Card

If Enable, it will not scan for External Gfx Card on PEG and PCH PCIE Ports.

Primary Display

Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.

Internal graphics

Keep IGFX enabled based on the setup options.

GTT Size

Select the GTT Size.

Aperture Size

Select the Aperture Size.

Note : Above 4GB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please disable CSM Support.

DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.

DVMT Total Gfx Mem

Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.

4.4.1.3 PEG Port Configuration

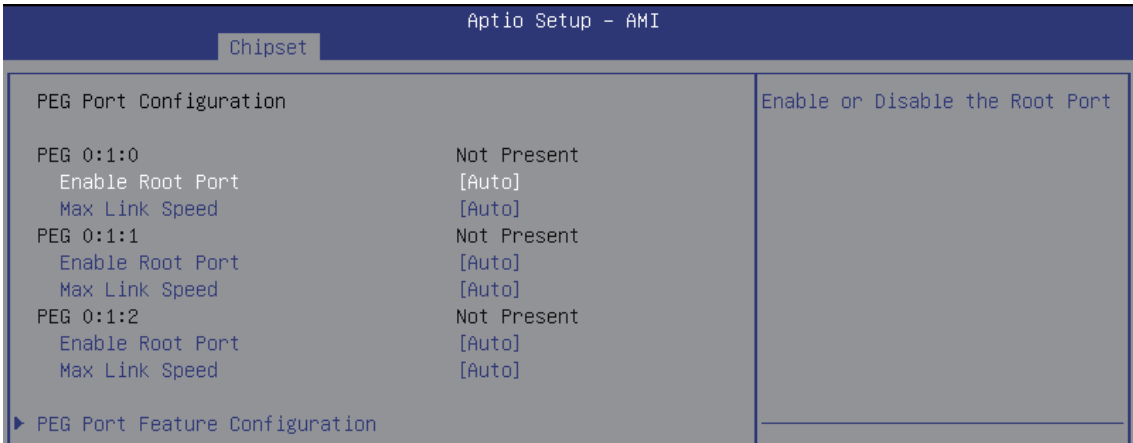


Figure 4-4-1-3: PEG Port Configuration

Enable Root Port

Enable or Disable the Root Port.

Max Link Speed

Configure PEG 0:1:n Max Speed.

PEG Hotplug

PCI Express Hot Plug Enable/Disable.

PEG Port Feature Configuration

- Detect Non-Compliance Device
Detect Non-Compliance PCI Express Device in PEG

4.4.2 PCH-IO Configuration

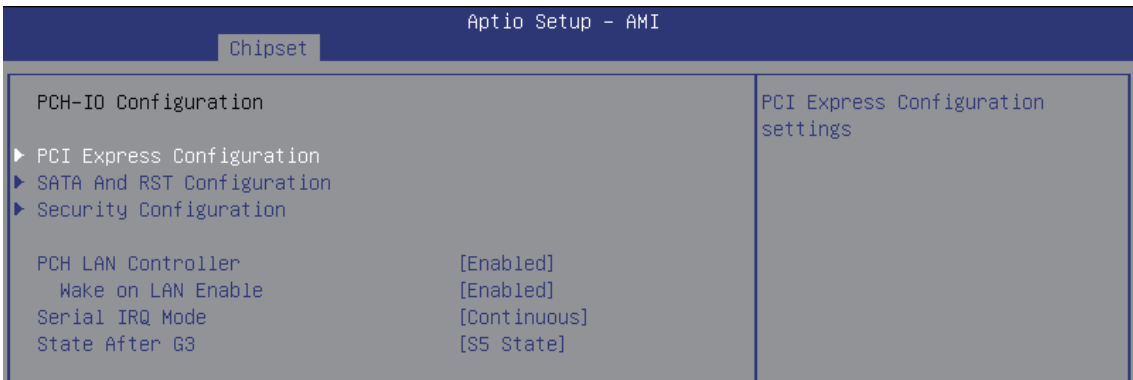


Figure 4-4-2: PCH-IO Configuration

PCI Express Configuration

PCI Express Configuration settings.

SATA And RST Configuration

SATA Device Options Settings.

Security Configuration

Security Configuration settings.

PCH LAN Controller

Enable/Disable onboard NIC.

Wake on LAN Enable

Enable/Disable integrated LAN to wake the system.

Serial IRQ Mode

Configure Serial IRQ Mode.

State After G3

Specify what state to go to when power is re-applied after a power failure (G3 state).

S0 State : Always turn-on the system when power source plugged-in.

S5 State : Always turn-off the system when power source plugged-in.

4.4.2.1 PCI Express Configuration

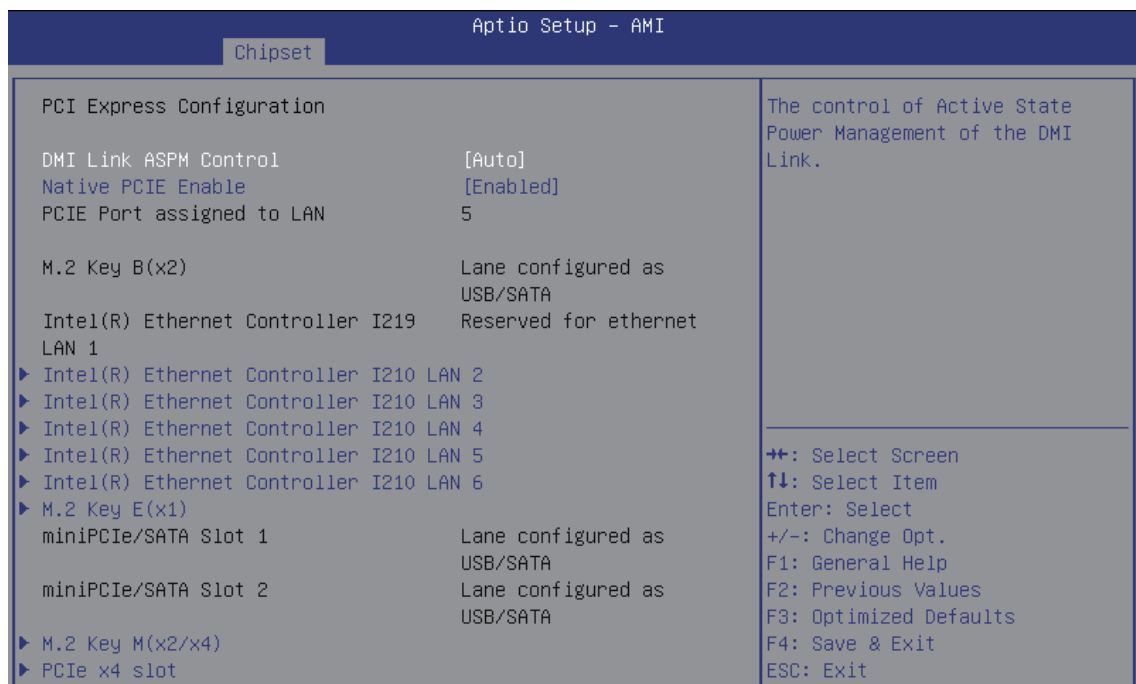


Figure 4-4-2-1: PCI Express Configuration

DMI Link ASPM Control

The control of Active State Power Management of the DMI Link.

Native PCIE Enable

Bit - PCIe Native * control

0 - ~ Hot Plug

1 - SHPC Native Hot Plug control

2 - ~ Power Management Events

3 - PCIe Advanced Error Reporting control

4 - PCIe Capability Structure control

5 - Latency Tolerance Reporting control

PCI Express device settings

BIOS options for PCI Express device setting.

4.4.2.2 SATA and RST Configuration

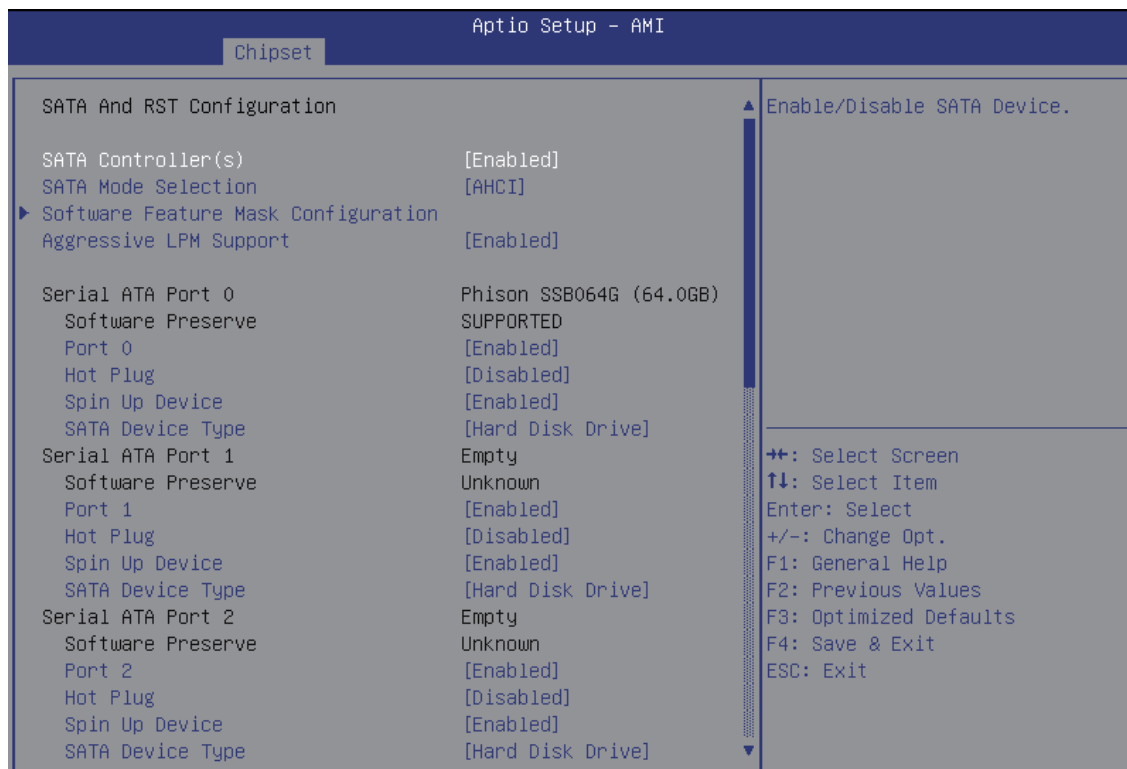


Figure 4-4-2-2 : SATA and RST Settings

SATA Controller(s)

Enable or disable SATA Device.

SATA Mode Selection

Determines how SATA controller(s) operate.

Software Feature Mask Configuration

RST Legacy OROM/RST UEFI driver will refer to the SWFM configuration to enable/disable the storage features.

Aggressive LPM Support

Enable PCH to aggressively enter link power state.

Port n

Enable or disable SATA Port.

Hot Plug

Designated this port as Hot Pluggable.

Spin Up Device

If enabled for any of ports Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.

SATA Device Type

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

4.4.2.3 Security Configuration



Figure 4-4-2-3: Security Configuration

BIOS Lock

Enable/Disable the PCH BIOS Lock Enable feature. Required to be enabled to ensure SMM protection of flash.

4.4.3 GPIOManager Control

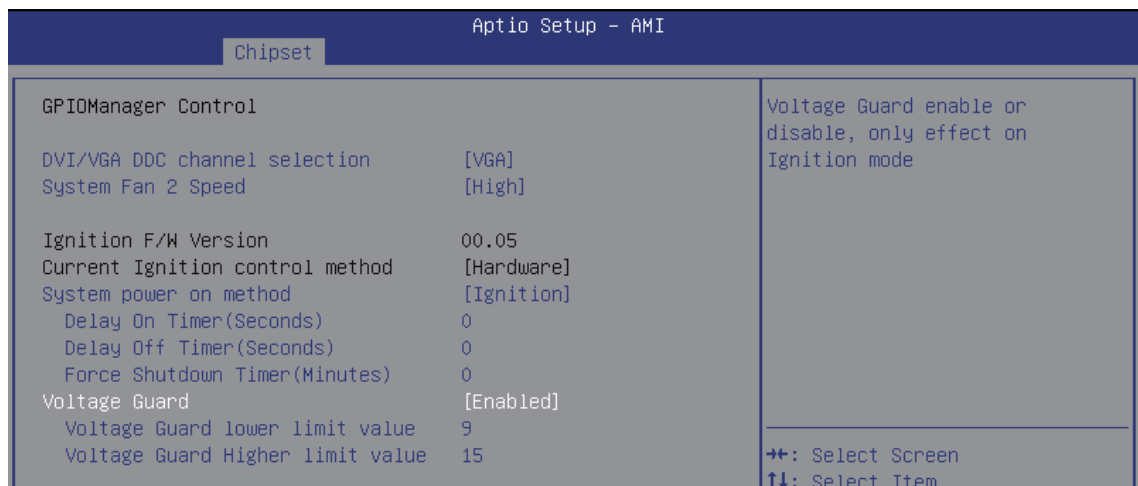


Figure 4-4-3: GPIOManager Configuration

DVI/VGA DDC channel selection

DVI/VGA DDC channel selection for DVI-I connector

System Fan 2 Speed

System Fan 2 Speed control

Ignition F/W Version

Indicate current ignition f/w version

Current Ignition control method

[Hardware] Ignition mode control by hardware switch.

[Software] Ignition mode control by software

System power on method

[Normal] System power on by power button

[Ignition] System power on by ignition pin

Delay On Timer (Seconds)

The delay times after user trigger ignition on signal (Seconds)

Delay Off Timer (Seconds)

The delay times after user trigger ignition off signal (Seconds)

Force Shutdown Timer (Minutes)

Used to force cut off system power when OS unable gracefully shutdown system successfully.

Voltage Guard

Voltage Guard enable or disable, only effect on ignition mode.

Voltage Guard lower limit value

Voltage Guard lower limit value setting

Range : 9V~40V

Voltage Guard

Voltage Guard Higher limit value setting

Range : 15V~50V

4.5 Security

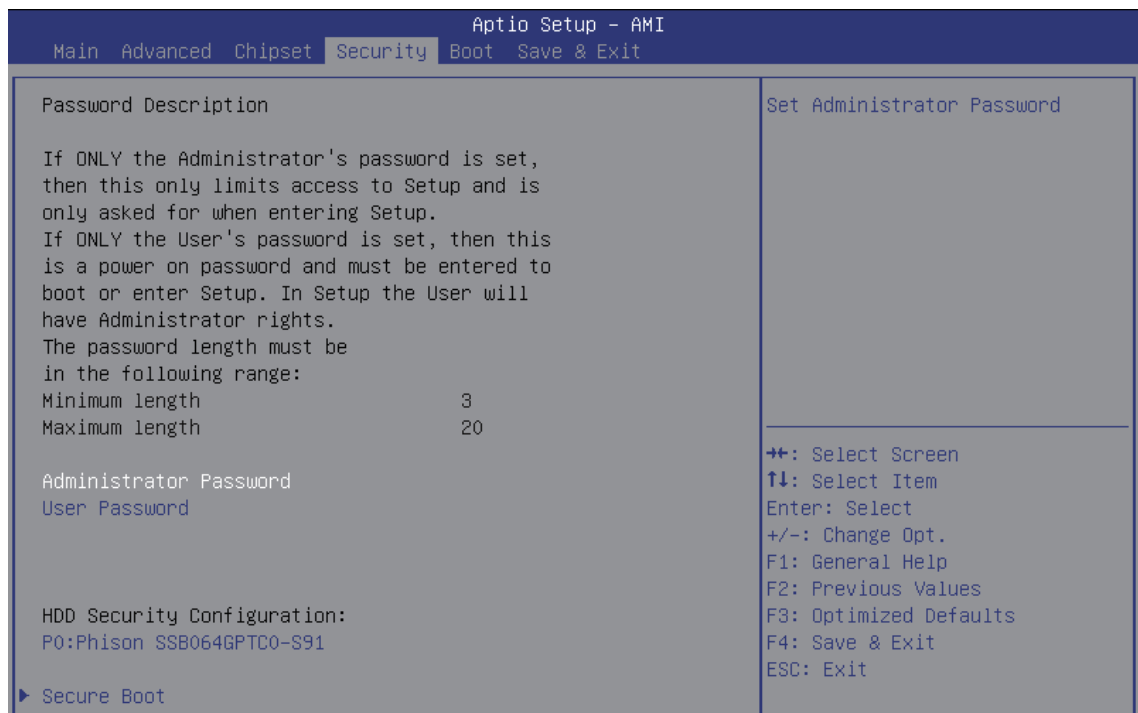


Figure 4-5 : BIOS Security Menu

Administrator Password

Set administrator password.

User Password

Set user password.

Secure Boot

Secure Boot configuration.

4.5.1 HDD Security Configuration

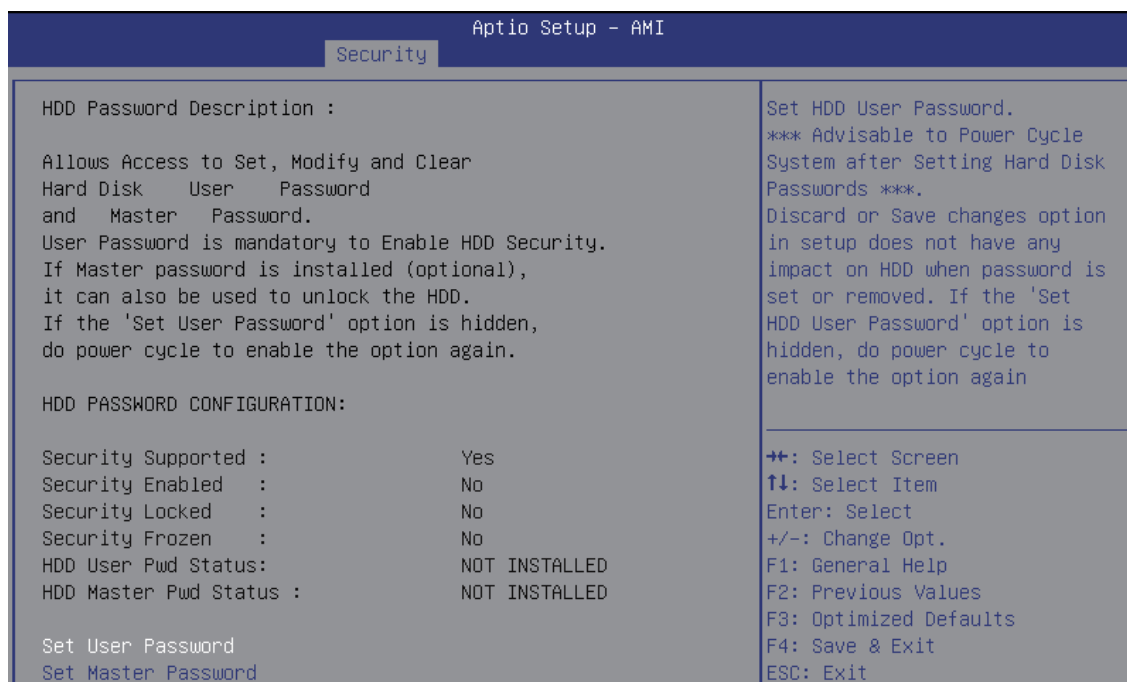


Figure 4-5-1 HDD Security Configuration

Set User Password

Set HDD user password.

*** Advisable to Power Cycle System after Setting Hard Disk Passwords ***

Discard or Save changes option in setup does not have any impact on HDD when password is set or removed. If the 'Set HDD User Password' option is hidden, do power cycle to enable the option again.

Set Master Password

Set HDD Master password.

*** Advisable to Power Cycle System after Setting Hard Disk Passwords ***

Discard or Save changes option in setup does not have any impact on HDD when password is set or removed. If the 'Set HDD Master option' is hidden, user might have entered setup with user HDD Security privilege(expected) or else do power cycle to enable the option again

4.5.2 Security Boot



Figure 4-5-2: Secure Boot

Secure Boot

Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.

Secure Boot Mode

Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

Restore Factory Keys

Force System to User Mode. Install factory default Secure Boot key databases.

Reset To Setup Mode

Delete all Secure Boot key databases from NVRAM.

Key Management

Enables expert users to modify Secure Boot Policy variables without full authentication.

4.6 Boot

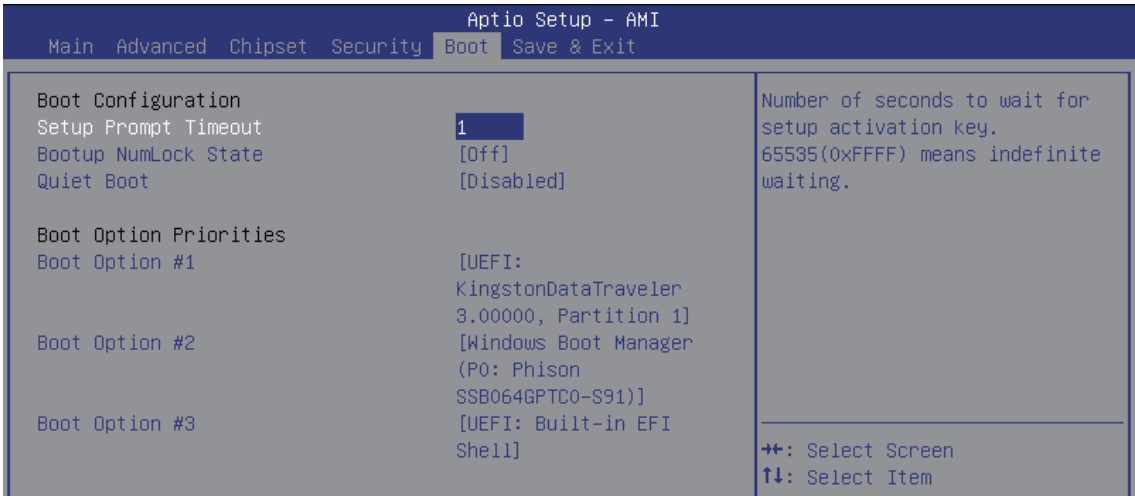


Figure 4-6 : BIOS Boot Menu

Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables or disables Quiet Boot option.

Boot Option

Sets the system boot order.

4.7 Save & Exit

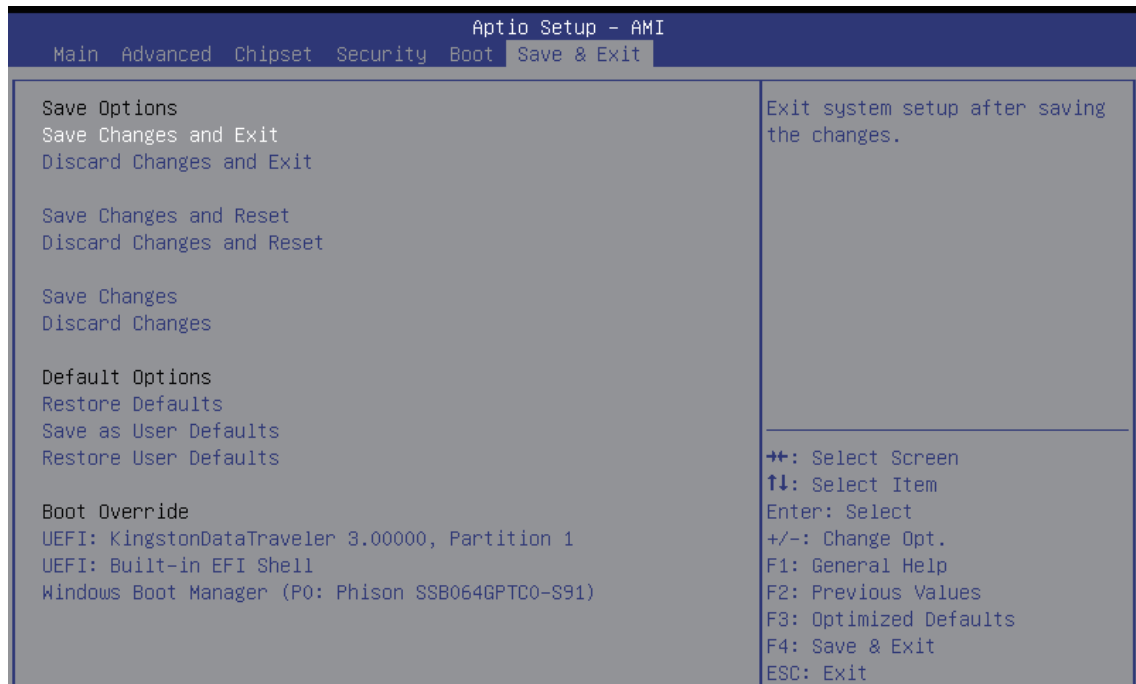


Figure 4-7: Save & Exit Menu

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Default values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

A


APPENDIX A : Isolated DIO/GPIO Guide

A.1 Function Description

The ECX-2200A/ECX-2100A PEG offers a 16-bit Non-Isolated DIO/two 16-bit Isolated DIO 20-pin terminal block connector, a watchdog timer, and a 4-port POE.

Isolated DIO pins are fix by Hardware design that cannot change in/out direction in runtime process.

DIO definition is shown below :

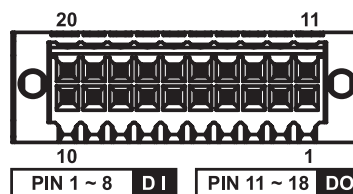


Pin No.	DIO Definition	GPIO Definition	Pin No.	DIO Definition	GPIO Definition
1	DI 0	DIO 0	11	DO 0	DIO 8
2	DI 1	DIO 1	12	DO 1	DIO 9
3	DI 2	DIO 2	13	DO 2	DIO 10
4	DI 3	DIO 3	14	DO 3	DIO 11
5	DI 4	DIO 4	15	DO 4	DIO 12
6	DI 5	DIO 5	16	DO 5	DIO 13
7	DI 6	DIO 6	17	DO 6	DIO 14
8	DI 7	DIO 7	18	DO 7	DIO 15
9	DI COM	NC	19	DIO_GND	DIO_GND
10	DIO_GND	DIO_GND	20	External VDC	NC

POE definition is shown below :

Port No.	Definition	Port No.	Definition
1	POE 0	3	POE 2
2	POE 1	4	POE 3

Do NOT use these functions in below :


1. PE-2000 : DIO1 (ID = 0), POE
2. PE-3000 : POE
3. UE-1000 : USB (ID = 0)

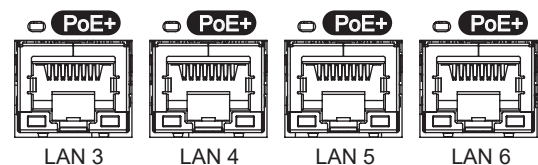


A.2 Isolated DIO Signal Circuit

DI reference circuit :

Sink Mode
(NPN)

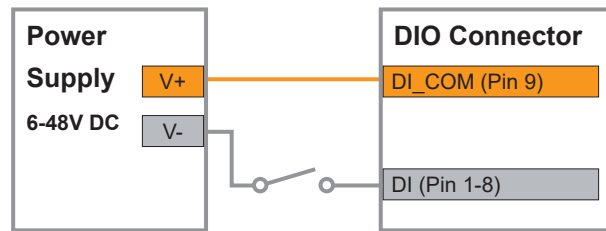


Source Mode
(PNP)

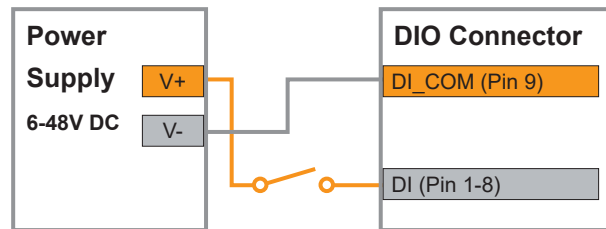


DO reference circuit :

Sink Mode
(NPN, Default)

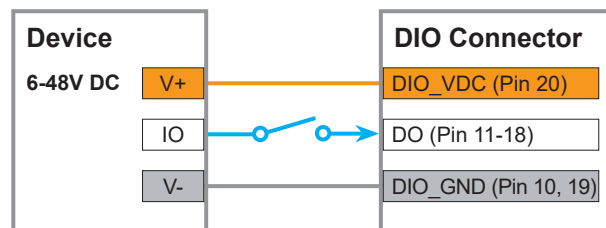

Source Mode
(PNP)

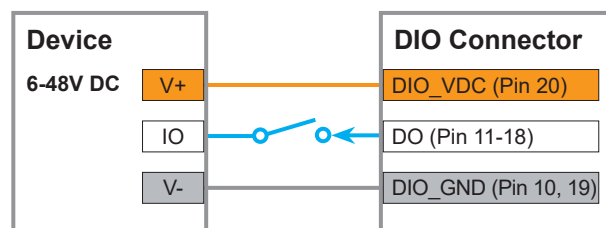

A.3 Software Package Contain

Distribution folder include x32 and x64 versions, use the batch file for driver installation.

There are included as followed :

Win10_32.bat, and Win10_64.bat :

Installation for driver, and

Uninstall_32.bat, and Uninstall_64.bat :

Uninstallation for driver

Run batch file as Administrator.


Make sure Windows version before installation.

Header folder include head file for software developer or System Integration.

Manual folder include API description.


Sample folder include sample program, driver library, and API library for Windows/Linux

Source folder include sample program source code that compile on Visual Studio 2008/ubuntu16.04.

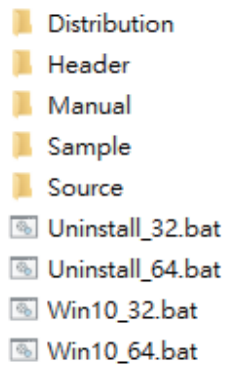


A.4 Sample

Execute demo tool.

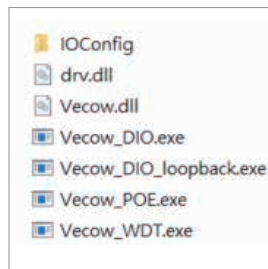

Windows

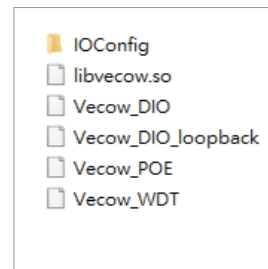

Linux

Sample, as shown below :

```
DIO sample version : v1.0.0609.0608
Load Vecow.dll at least v1.8.1409.0608
Vecow.dll Version : v1.8.1409.0608
Config : IO port I - Isolated DIO
         IO port II - Non-Isolated DIO(GPIO)

Choose IO : (1/2)
```

Vecow_DIO

```
DIO loopback sample version : v1.0.1509.0608
Load Vecow.dll at least v1.8.1409.0608
Vecow.dll Version : v1.8.1409.0608
Config : IO port I - Isolated DIO
         IO port II - Non-Isolated DIO(GPIO)

How many IO temp_port : (1/2)
```

Vecow_DIO_loopback

```
POE sample version : v1.0.1609.0608
Load Vecow.dll at least v1.8.1409.0608
Vecow.dll Version : v1.8.1409.0608

Initial POE success!
Usable slave address ID : 0
Select slave address ID :
```

Vecow_POE

```
WDT sample version : v1.0.0509.0608
Load Vecow.dll at least v1.8.1409.0608
Vecow.dll Version : v1.8.1409.0608
Config : IO port I - Isolated DIO
         IO port II - Non-Isolated DIO(GPIO)

Set WDT timer seconds (1~3932100) :
```

Vecow_WDT

B

APPENDIX B : Software Functions

B.1 Driver API Guide

In Header folder, Vecow.h and VecowLinux.h contain usable API for Windows/Linux.

BOOL initial_SIO(BYTE Isolate_Type, BYTE DIO_NPN)

Initial machine for IO and watch dogtimer.

Isolate_Type : DIO type.

1 : Isolated DIO;

0 : Non-Isolated DIO(GPIO).

DIO_NPN : DI/DO type.

1 : PNP (Source) mode for European rule;

0 : NPN (Sink) mode for Japanese rule.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Driver not exists, or version is too old, or machine not match).

BOOL get_IO1_configuration(BYTE *Iso, BYTE *DI_mode, BYTE *DO_mode, WORD *Mask)

BOOL get_IO2_configuration(BYTE *Iso, BYTE *DI_mode, BYTE *DO_mode, WORD *Mask)

Get DIO configuration (by variable)

Isolate_Type : DIO type.

1 : Isolated DIO;

0 : Non-Isolated DIO(GPIO).

DI_mode ([7:0]) : DI type, pin setting by hexadecimal bitmask only for Isolated DIO.

0xFF : PNP (Source) mode for European rule;

0 : NPN (Sink) mode for Japanese rule.

DO_mode : DO type only for Isolated DIO.

1 : PNP (Source) mode for European rule;

0 : NPN (Sink) mode for Japanese rule.

Mask ([15:0]) : In/Out, pin setting by hexadecimal bitmask only for Non-Isolated DIO(GPIO).

1 : Output;

0 : Input

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error, or call by pointer error, or hardware problem).

BOOL set_IO1_configuration(BYTE Iso, BYTE DI_mode, BYTE DO_mode, WORD Mask)

BOOL set_IO2_configuration(BYTE Iso, BYTE DI_mode, BYTE DO_mode, WORD Mask)

Set DIO configuration.

Isolate_Type : DIO type.

1 : Isolated DIO;

0 : Non-Isolated DIO (GPIO).

DI_mode ([7:0]) : DI type, pin setting by hexadecimal bitmask only for Isolated DIO.

0xFF : PNP (Source) mode for European rule;

0 : NPN (Sink) mode for Japanese rule.

DO_mode : DO type only for Isolated DIO.

1 : PNP (Source) mode for European rule;

0 : NPN (Sink) mode for Japanese rule.

Mask ([15:0]) : In/Out, pin setting by hexadecimal bitmask only for Non-Isolated DIO (GPIO).

1 : Output;

0 : Input

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error or hardware problem).

BOOL get_DIO1(BYTE *DO_data, BYTE *DI_data)

BOOL get_DIO2(BYTE *DO_data, BYTE *DI_data)

Get isolated DIO output(DO) and input (DI).

DI ([7:0]) : Input state, pin setting by hexadecimal bitmask.

1 : High;

0 : Low.

DO ([7:0]) : Output state, pin setting by hexadecimal bitmask.

1 : High;

0 : Low.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error or hardware problem).

FALSE (0) : Fail (Initial error or hardware problem).

BOOL set_DIO1(BYTE DO_data)

BOOL set_DIO2(BYTE DO_data)

Set isolated DIO output(DO).

DO ([7:0]) : Output state, pin setting by hexadecimal bitmask.

1 : High;

0 : Low.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error or hardware problem).

FALSE (0) : Fail (Initial error or hardware problem).

BOOL get_GPIO1(WORD *GPIO_data)

Get GPIO.

GPIO_data ([15:0]) : GPIO state, pin setting by hexadecimal bitmask.

1 : High;

0 : Low.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error or hardware problem).

BOOL get_WDT(DWORD *WDT)

Get watchdog timer setup.

WDT : watchdog timer setup.

Unit : second (Range : 0 ~ 65535 sec, 1093 ~ 65535 min (=65580 ~ 3932100 sec)).

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error, or call by pointer error, or hardware problem).

BOOL set_WDT(DWORD WDT)

Set watchdog timer setup.

WDT : watchdog timer setup.

Unit : second (Range : 0 ~ 65535 sec, 1093 ~ 65535 min (=65580 ~ 3932100 sec)).

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error, or setup 0, or hardware problem).

BOOL cancel_WDT()

Cancel watchdog timer.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Initial error or hardware problem).

BOOL initial_POE(BYTE Scan, BYTE ID)

Initial POE.

Scan : POEID scan type

2 : Auto scan; 1 : Manual setup.

ID : POE ID by manual setting.

Range : 0~15.

Return :

TRUE (1) : Success.

FALSE (0) : Fail (Driver not exists, or version is too old, or out of range error).

BOOL get_POE_configuration(BYTE ID, BYTE *Auto, BYTE *Mask)

Get POE configuration (by variable).

ID : POE ID.

Range : 0~15.

Auto ([3:0]) : Auto mode, pin setting by hexadecimal bitmask.

1 : Auto;
0 : Manual.
Mask ([3:0]) : DC Enable/Disable, pin setting by hexadecimal bitmask.
1 : Enable;
0 : Disable.

Return :

TRUE (1) : Success.
FALSE (0) : Fail (Initial error, or out of range error, or call by pointer error, or hardware problem)

BOOL set_POE_configuration(BYTE ID, BYTE Auto, BYTE Mask)

Set POE configuration (by variable).

ID : POE ID.

Range : 0~15.

Auto ([3:0]) : Auto mode, pin setting by hexadecimal bitmask.

1 : Auto;

0 : Manual.

Mask ([3:0]) : DC Enable/Disable, pin setting by hexadecimal bitmask.

1 : Enable;

0 : Disable.

Return :

TRUE (1) : Success.
FALSE (0) : Fail (Initial error, or out of range error, or hardware problem).

BOOL get_POE(BYTE ID, BYTE *POE)

Get POE state.

ID : POE ID.

Range : 0~15.

POE ([3:0]) : POE state, pin setting by hexadecimal bitmask.

1 : On;

0 : Off.

Return :

TRUE (1) : Success.
FALSE (0) : Fail (Initial error, or out of range error, or call by pointer error, or hardware problem).

BOOL set_POE(BYTE ID, BYTE POE)

Set POE state.

A. ID : POE ID.

Range : 0~15.

B. POE ([3:0]) : POE state, pin setting by hexadecimal bitmask.

1 : On;

0 : Off.

Return :

TRUE (1) : Success.
FALSE (0) : Fail (Initial error, or out of range error, or hardware problem).


C

APPENDIX C : RAID Functions

C.1.1 SATA Mode for RAID

Please select SATA Device to RAID mode on BIOS menu.


Chipset → PCH-IO Configuration → SATA And RST Configuration → SATA Mode Selection → Intel RST Premium → Save Changes and Reset.

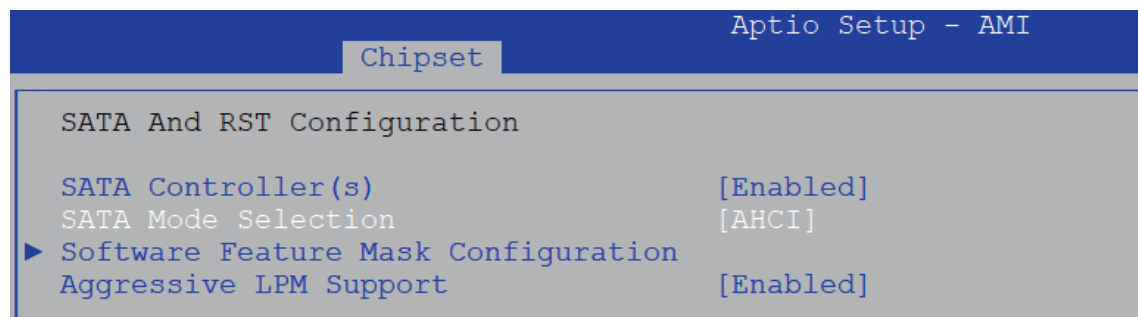


C.1.2 UEFI Mode for RAID

1. Into BIOS menu again, select Intel(R) Rapid Storage Technology on BIOS menu.


Advanced → Intel(R) Rapid Storage Technology

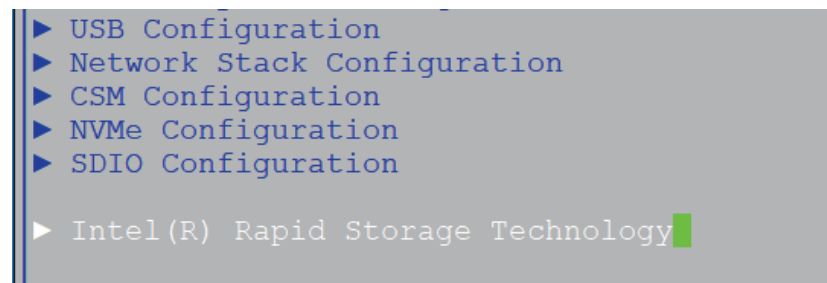

3. Select Create RAID Volume on BIOS menu.

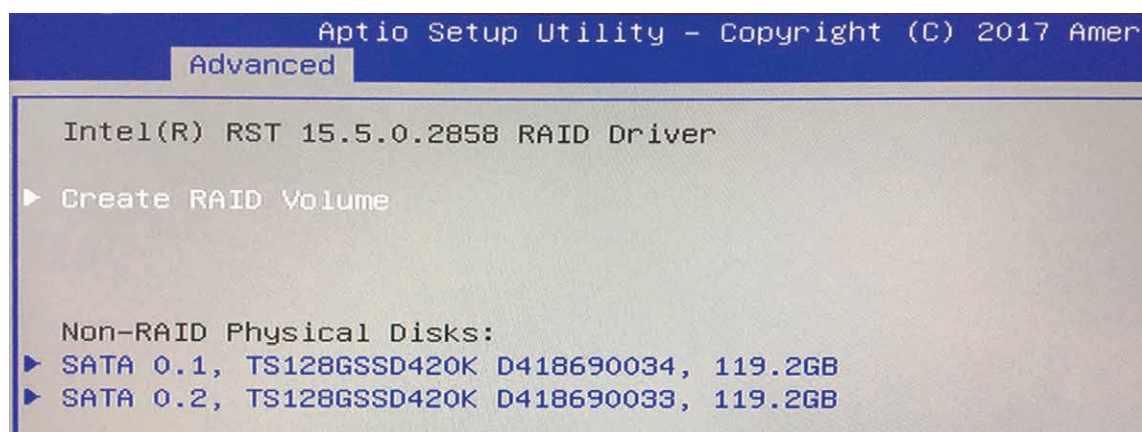

4. Select disks to create RAID Volume then Save Changes and Reset to install OS with EFI mode.

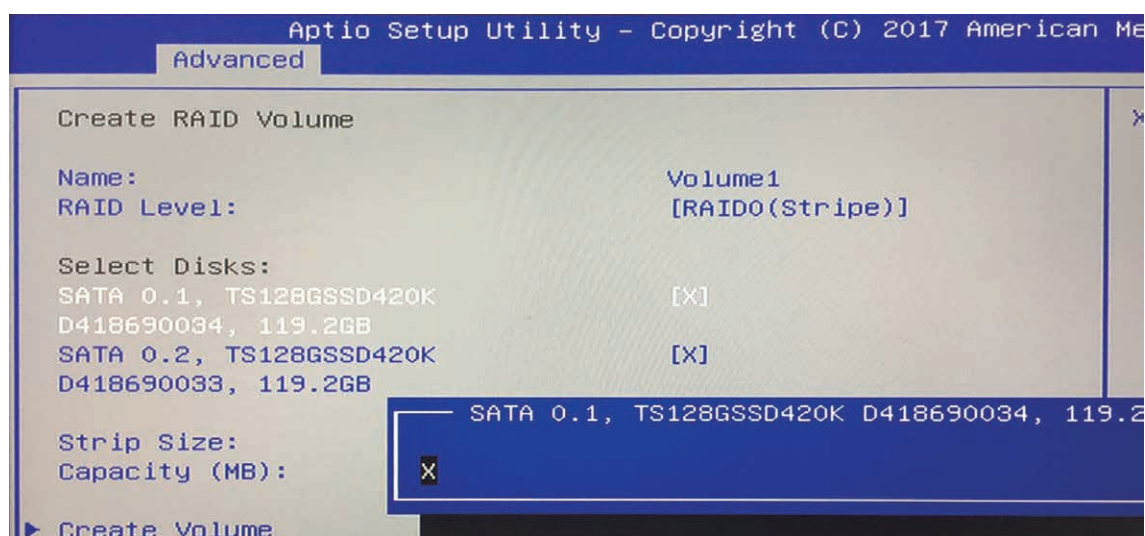

C.2 OS Installation

The system is featured with one M.2 key M for NVME, one mSATA slot, and including two internal SATA.

We used SATA for Windows 10 OS installation as an example.

C.3 To Install All Device Drivers of the System

The instructions are as follows :

1. Install Chipset driver
2. Install Network driver
3. Install ME driver (if available)
4. Install Audio driver
5. Install VGA driver

C.4 To Install "Intel Rapid Storage Technology" Software

You can get the latest information and the software directly from Intel website.

http://www.intel.com/p/en_US/support/highlights/chpsts/imsn

The RAID environment has been done if you completed the steps above.

C.5 To Insert SATA HDD for RAID 1

Please note, you can use two SATA ports for SATA HDD, except for mSATA slot.


C.6 To Create RAID Volume on "Rapid Storage Technology" Software

The system is featured with two SATA HDD's for RAID volume, so there are two options to choose on this page. Let's take RAID 1 as an example, select "RAID 1".




C.7 Disk Management : Partition the Disk

After RAID 1 volume is created, you can see the figure of SATA device allocation.

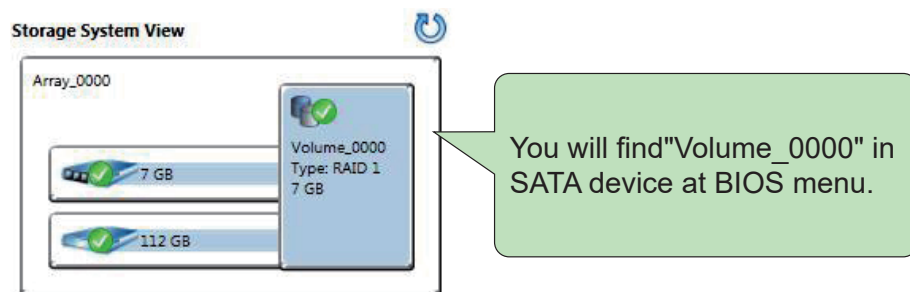


To start disk management tool, select "initialize disk".
Then add "Logical Device" for Windows access.

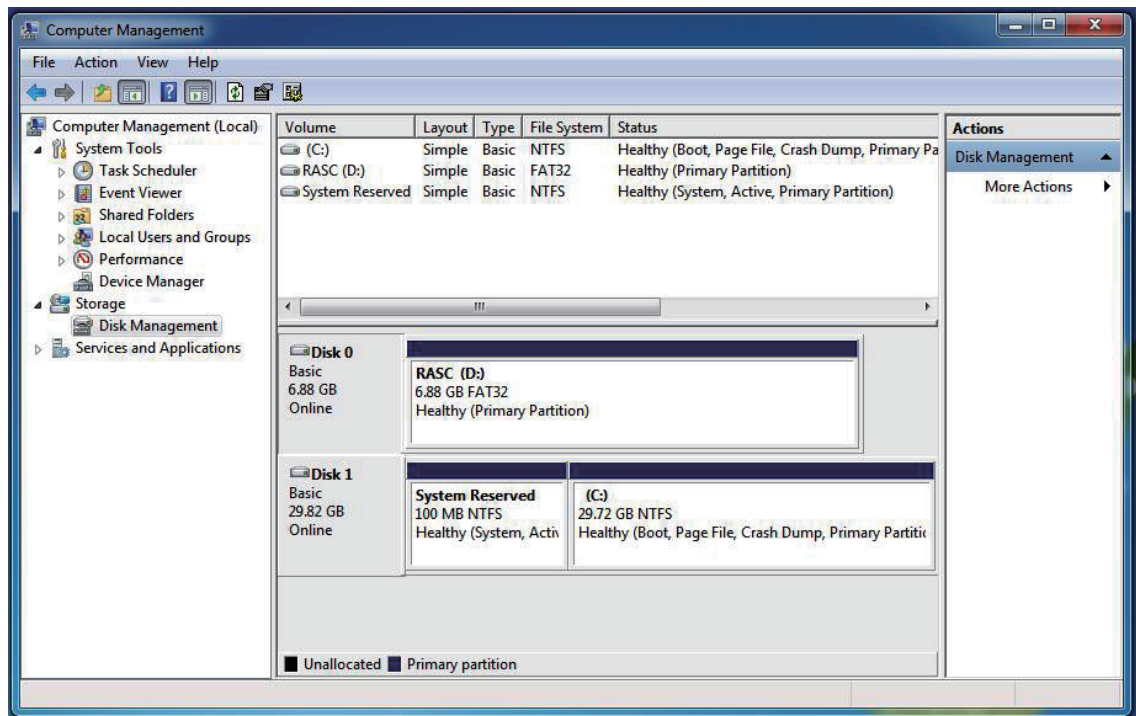


C.8 If One SATA HDD on RAID Volume is Out-of-use

After RAID 1 volume is created, you can see the figure of SATA device allocation.

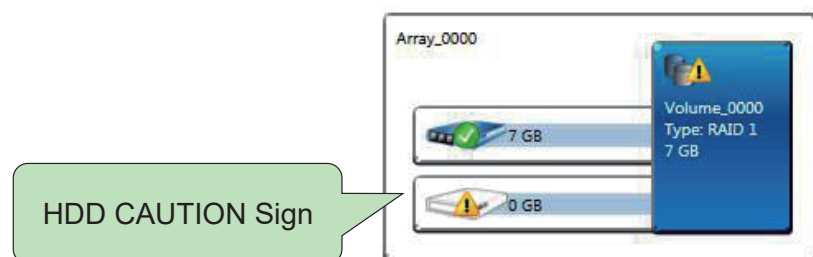


C.9 Recovery and Auto Rebuild When Use the **SAME** RAID HDD

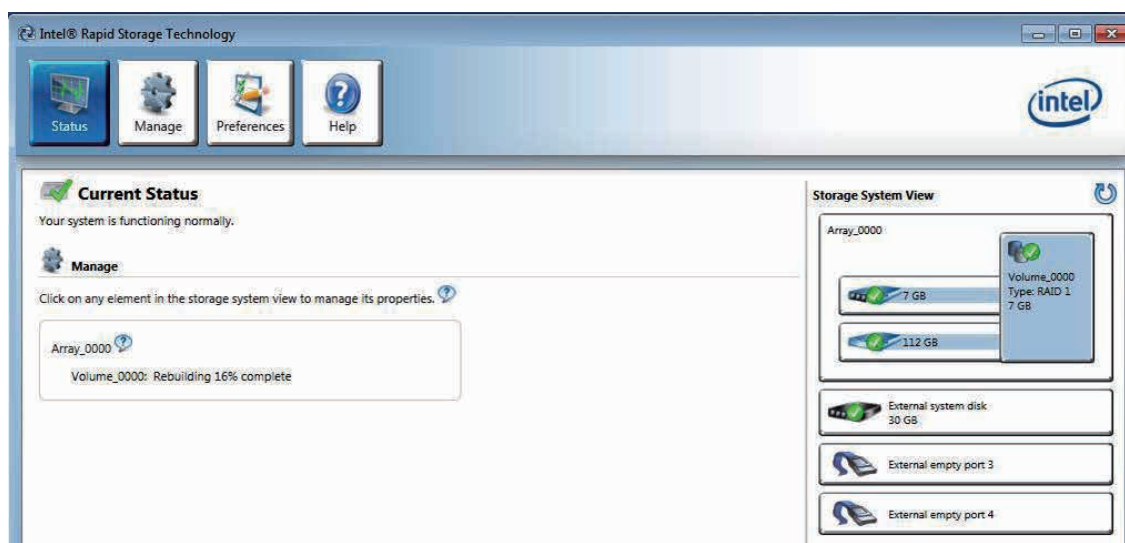

C.10 Recovery and Auto Rebuild When Use **DIFFERENT** RAID HDD

A warning will pop-up to ask you if the disk is not a member of the original RAID volume.

If you press "Rebuild", it will replace the broken SATA HDD to the last SATA HDD of RAID volume.

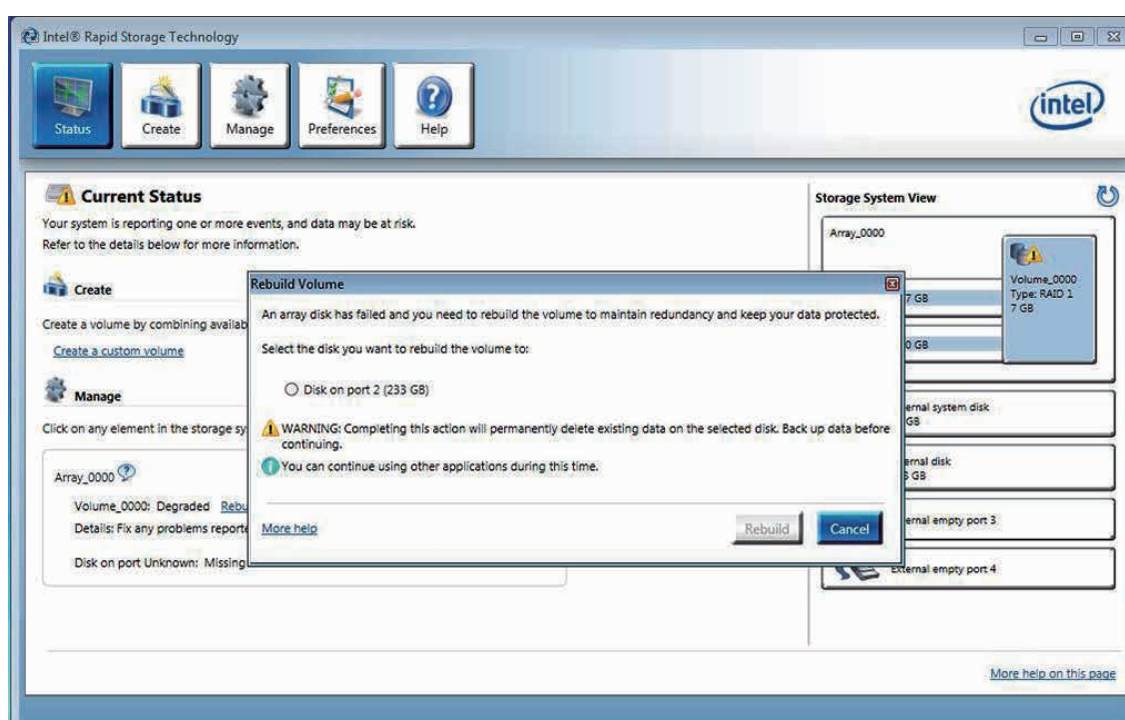

D

APPENDIX D : Power Consumption

Testing Board	ECX-2200A
RAM	16GB * 2
USB-1	USB Microsoft Wired Keyboard 600
USB-2	USB Mouse HP G1K28AA
USB-3	USB Flash Transcend 3.0 8GB
USB-4	USB Flash Transcend 3.0 16GB
USB-5	USB Flash Kingston 3.0 16GB
USB-6	USB Flash Kingston 3.0 32GB
SATA 0	Transcend SATA SSD420 128GB
SATA 1	Seagate HDD 500GB
LAN 1 (i219)	1.0 Gbps
LAN 2 (i210)	1.0 Gbps
Graphics Output	DVI
Power Plan	Balance (Windows10 Power plan)
Power Source	Chroma 62006P-100-25
Test Program-1	BurnInTest
Test Program-2	FurMark

D.1 Intel® Core™ i7-10700TE 2.00GHz (16M Cache, 4.40GHz)

Power on and boot to Win 10 (64-bit)

CPU	Power Input	Standby Mode		Power on and boot to Win 10 (64-bit)			
				Sleep Mode		idle status CPU usage less 3%	
		Max Current	Max Consumption	Max Current	Max Consumption	Max Current	Max Consumption
Core™ i7-10700TE	9V	0.404A	03.64W	0.631A	05.68W	1.850A	16.65W
Core™ i7-10700TE	12V	0.349A	04.19W	0.492A	05.90W	1.376A	16.51W
Core™ i7-10700TE	24V	0.230A	05.52W	0.316A	07.59W	1.513A	36.31W
Core™ i7-10700TE	50V	0.165A	08.23W	0.219A	10.95W	0.790A	39.50W

CPU	Power Input	Power on and boot to Win10 (64-bit)			
		Run 100% CPU usage with 2D		Run 100% CPU usage with 3D	
		Max Current	Max Consumption	Max Current	Max Consumption
Core™ i7-10700TE	9V	4.038A	36.34W	4.619A	41.57W
Core™ i7-10700TE	12V	3.510A	42.12W	3.601A	43.21W
Core™ i7-10700TE	24V	1.780A	42.72W	1.817A	43.60W
Core™ i7-10700TE	50V	0.968A	48.40W	0.997A	49.85W

D.2 Intel® Core™ i5-10500E 3.10GHz (12M Cache, 4.20GHz)

Power on and boot to Win 10 (64-bit)

CPU	Power Input	Standby Mode		Power on and boot to Win 10 (64-bit)			
				Sleep Mode		idle status CPU usage less 3%	
		Max Current	Max Consumption	Max Current	Max Consumption	Max Current	Max Consumption
Core™ i5-10500E	9V	0.406A	03.66W	0.630A	05.67W	2.027A	18.24W
Core™ i5-10500E	12V	0.317A	03.80W	0.490A	05.88W	1.383A	16.59W
Core™ i5-10500E	24V	0.214A	05.14W	0.315A	07.55W	0.810A	19.44W
Core™ i5-10500E	50V	0.156A	07.80W	0.217A	10.87W	0.626A	31.32W

CPU	Power Input	Power on and boot to Win10 (64-bit)			
		Run 100% CPU usage with 2D		Run 100% CPU usage with 3D	
		Max Current	Max Consumption	Max Current	Max Consumption
Core™ i5-10500E	9V	5.992A	53.93W	7.059A	63.53W
Core™ i5-10500E	12V	4.415A	52.98W	6.151A	73.82W
Core™ i5-10500E	24V	2.414A	57.94W	2.506A	60.15W
Core™ i5-10500E	50V	1.264A	63.19W	1.495A	74.76W

D.3 Intel® Xeon® W-1270E 3.40GHz (16M Cache, up to 4.80GHz)

Power on and boot to Win 10 (64-bit)

CPU	Power Input	Standby Mode		Power on and boot to Win 10 (64-bit)			
				Sleep Mode		idle status CPU usage less 3%	
		Max Current	Max Consumption	Max Current	Max Consumption	Max Current	Max Consumption
Xeon® W-1270E	9V	0.431A	03.88W	0.604A	05.44W	1.762A	15.86W
Xeon® W-1270E	12V	0.341A	04.10W	0.472A	05.66W	1.324A	15.88W
Xeon® W-1270E	24V	0.269A	06.45W	0.304A	07.30W	1.561A	37.46W
Xeon® W-1270E	50V	0.195A	09.73W	0.212A	10.59W	0.646A	32.29W

CPU	Power Input	Power on and boot to Win10 (64-bit)			
		Run 100% CPU usage with 2D		Run 100% CPU usage with 3D	
		Max Current	Max Consumption	Max Current	Max Consumption
Xeon® W-1270E	9V	9.308A	83.77W	9.459A	85.13W
Xeon® W-1270E	12V	6.660A	79.92W	6.775A	81.29W
Xeon® W-1270E	24V	3.412A	81.89W	3.478A	83.46W
Xeon® W-1270E	50V	1.779A	88.95W	1.886A	94.30W

C.4 Intel® Xeon® W-1290E 3.50GHz (20M Cache, up to 4.80GHz)

Power on and boot to Win 10 (64-bit)

CPU	Power Input	Standby Mode		Power on and boot to Win 10 (64-bit)			
				Sleep Mode		idle status CPU usage less 3%	
		Max Current	Max Consumption	Max Current	Max Consumption	Max Current	Max Consumption
Xeon® W-1290E	9V	0.429A	03.86W	0.604A	05.44W	1.934A	17.41W
Xeon® W-1290E	12V	0.340A	04.08W	0.471A	05.65W	1.902A	22.83W
Xeon® W-1290E	24V	0.237A	05.68W	0.304A	07.29W	1.268A	30.42W
Xeon® W-1290E	50V	0.180A	08.98W	0.213A	10.63W	0.672A	33.60W

CPU	Power Input	Power on and boot to Win10 (64-bit)			
		Run 100% CPU usage with 2D		Run 100% CPU usage with 3D	
		Max Current	Max Consumption	Max Current	Max Consumption
Xeon® W-1290E	9V	11.804A	106.23W	13.300A	119.70W
Xeon® W-1290E	12V	8.319A	99.83W	8.462A	101.55W
Xeon® W-1290E	24V	4.195A	100.67W	4.241A	101.79W
Xeon® W-1290E	50V	2.123A	106.15W	2.164A	108.22W

D.5 Intel® Core™ i5-10500E Add GeForce GTX 1650 Graphics Card

Power on and boot to Win 10 (64-bit)

CPU	Power Input	Standby Mode		Power on and boot to Win 10 (64-bit)			
				Sleep Mode		idle status CPU usage less 3%	
		Max Current	Max Consumption	Max Current	Max Consumption	Max Current	Max Consumption
Core™ i5-10500E	9V	0.402A	03.62W	0.556A	05.00W	3.563A	32.07W
Core™ i5-10500E	12V	0.322A	03.86W	0.438A	05.26W	2.970A	35.64W
Core™ i5-10500E	24V	0.227A	05.45W	0.283A	06.79W	1.107A	26.57W
Core™ i5-10500E	50V	0.173A	08.64W	0.200A	10.00W	0.634A	31.70W

CPU	Power Input	Power on and boot to Win10 (64-bit)			
		Run 100% CPU usage with 2D		Run 100% CPU usage with 3D	
		Max Current	Max Consumption	Max Current	Max Consumption
Core™ i5-10500E	9V	6.626A	59.63W	12.920A	116.28W
Core™ i5-10500E	12V	4.876A	58.51W	9.752A	117.03W
Core™ i5-10500E	24V	2.576A	61.82W	5.011A	120.26W
Core™ i5-10500E	50V	1.370A	68.50W	2.518A	125.90W

E

APPENDIX E : Supported Memory & Storage List

E.1 Test Item

Testing Board	ECX-2200A
Memory Test	MemTest86 V8.4
BurnInTest	BurnInTest Pro V8.1 (build 1025)

Channel	Memtest	Bunin	Flash BIOS	Remove Battery
*2	PASS	PASS	PASS	PASS
*1 (Socket 1)	PASS	PASS	N/A	PASS
*1 (Socket 2)	PASS	PASS	N/A	PASS

E.2 Supported Non-ECC Memory List

Brand	Info	Test Temp. (Celsius)
MEMXPRO 16GB DDR4-2666 SODIMM	D4S-AG26H1G8W2	25°C
UD info 32GB DDR4-2666 SODIMM	UD4S26EBGSLC-A	25°C
Innodisk 16GB DDR4-2933 SODIMM	M4S0-AGS1O5UN-H03	25°C
Innodisk 16GB DDR4-2933 SODIMM	M4S0-AGS1OCUN-H03	25°C
SL LINK 8GB DDR4-3200 SODIMM	J4AGSH1G8TMEC	25°C
SL LINK 16GB DDR4-3200 SODIMM	J4AGSH1G8TMFC	25°C
SL LINK 32GB DDR4-3200 SODIMM	J4BGSH2G8TMFC	25°C
UD info 16GB DDR4-3200 SODIMM	UD4S32GAGSJC-C	25°C
Innodisk 16GB DDR4-3200 SODIMM	M4S0-AGS1OCEM-H03	25°C
Innodisk 16GB DDR4-3200 SODIMM	M4S0-AGS1O5EM-H03	25°C
Innodisk 32GB DDR4-3200 SODIMM	M4S0-BGS2OCEM-H03	25°C
Innodisk 32GB DDR4-3200 SODIMM	M4S0-BGS2O5EM-H03	25°C
AFASTOR 16G DDR4-3200 SODIMM	STI2046SO410825-SD	25°C
AFASTOR 32G DDR4-3200 SODIMM	ST4096SO420825SA	25°C
MEMXPRO 32GB DDR4-3200 SODIMM	D4S-BG32M2G8W1	25°C

E.3 Supported ECC Memory List

Brand	Info	Test Temp. (Celsius)
KINGSTON 16GB DDR4-2666 SODIMM	KSM26SED8/16ME	25°C
AFASTOR 32GB DDR4-2666 SODIMM	ST4097SO420893SA	25°C
AFASTOR 32GB DDR4-2666 SODIMM	STI4097SO420893SA	25°C
SL LINK 8GB DDR4-3200 SODIMM	J48GDH1G8TMJC	25°C
SL LINK 16GB DDR4-3200 SODIMM	J4AGDH1G8TMKC	25°C
AFASTOR 32GB DDR4-3200 SODIMM	ST4097SO420825SA	25°C
Innodisk 32GB DDR4-3200 SODIMM	M4D0-BGS2QCEM-H03	25°C
Innodisk 32GB DDR4-3200 SODIMM	M4D0-BGS2Q5EM-H03	25°C

E.4 Supported Storage Device List

Type	Brand	Model	Capacity
Micro SD	Innodisk	3ME2 EA3TFM-064G	64GB
	Innodisk	3ME2 ES3TFW-064G	64GB
	UD info	uSD-08UD	128GB
SATA HDD	Seagate	SDC001	500GB
mSATA SSD	Intel	Intel-310 SSDMAEMC080G2	80GB
	Transcend	mSATA TS64GMSA370	64GB
	Kingston	SUV500MS	120GB
SATA SSD	Kingston	SUV500/120G	120GB
	Intel	540s SSDSC2KW120H6	120GB
	Intel	E5400s SSDSC2KR120H6	120GB
	FORESEE	S903S128G	128GB
	WD	GREEN WDS240G2G0A	240GB
	SAMSUNG	860 EVO MZ-76E250	250GB
	FORESEE	S903S256G	256GB
	LITE-ON	K8-L1256	256GB
	LITE-ON	K8-L1512	512GB
M.2 SSD SATA	SANDISK	X400 SD8SN8U-128G-1002	128GB
	MEMXPRO	M.2 2280 SATA PM31 256GB ST FP28S-B5GTMS464C1	256GB
		M.2 2280 SATA PM31 512GB WT FP28S-E1GTMS464W1	512GB
		M.2 2280 SATA PT31 512GB WT FP28S-E1GMTS594W1	512GB
	Innodisk	M.2 (S80) 3TE7 DEM28-01TDK1ECAQF-H03	1TB


Type	Brand	Model	Capacity
M.2 PCIe SSD	AFASTOR	S1800v (C-temp) SVM2P8B480GST51	480GB
		S1800v (I-temp) SVM2P8B480GSTI51	480GB
		M1400v (C-temp) SVM2PHA480GMT51	480GB
		M1400v (I-temp) SVM2PHA480GMTI51	480GB
	Innodisk	M.2 (P80) 3TE6 DEM28-01TDD1ECAQF-H03	1TB
		M.2 (P80) 3TG3-P DGM28-02TDA1ECBEH-H03	2TB
	INTEL	760P SSDPEKKW128G8	128GB
	SAMSUNG	970 EVO PLUS MZ-V7S250	250GB
	FORESEE	FSGPMMC-256G	256GB
	TOSHIBA	KXG50ZNV512G	512GB
	Kingston	SA1000M8	240GB
		SA2000MB	500GB

** If more help is needed, please contact Vecow Technical Support.**


F

APPENDIX F : Install Win11 (BIOS TPM Setting)



Step 1 Click on “Advanced”, then click on “PCH-FW Configuration”

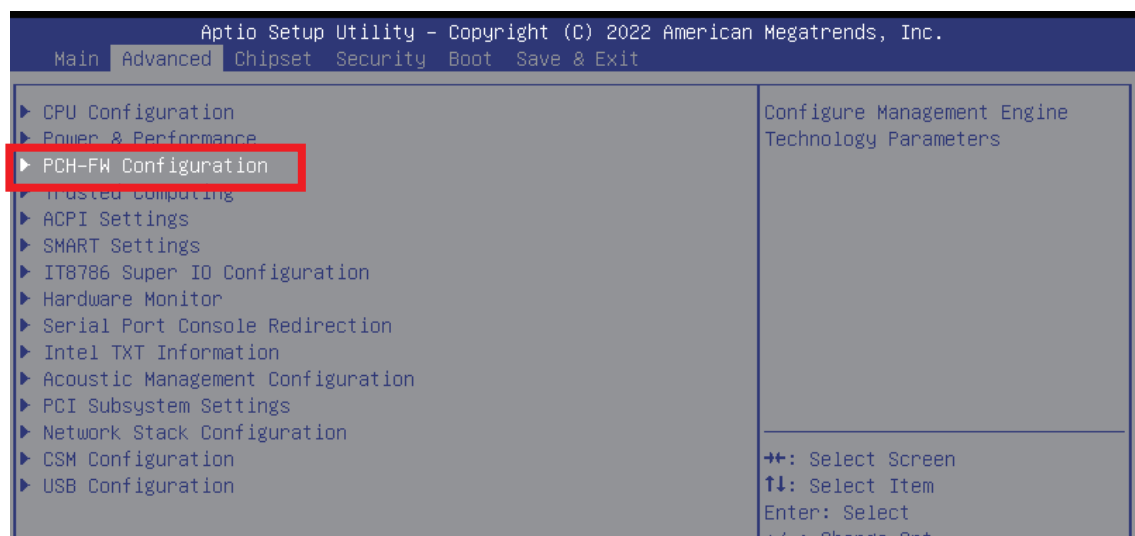


Step 2 Click on “PTT Configuration”

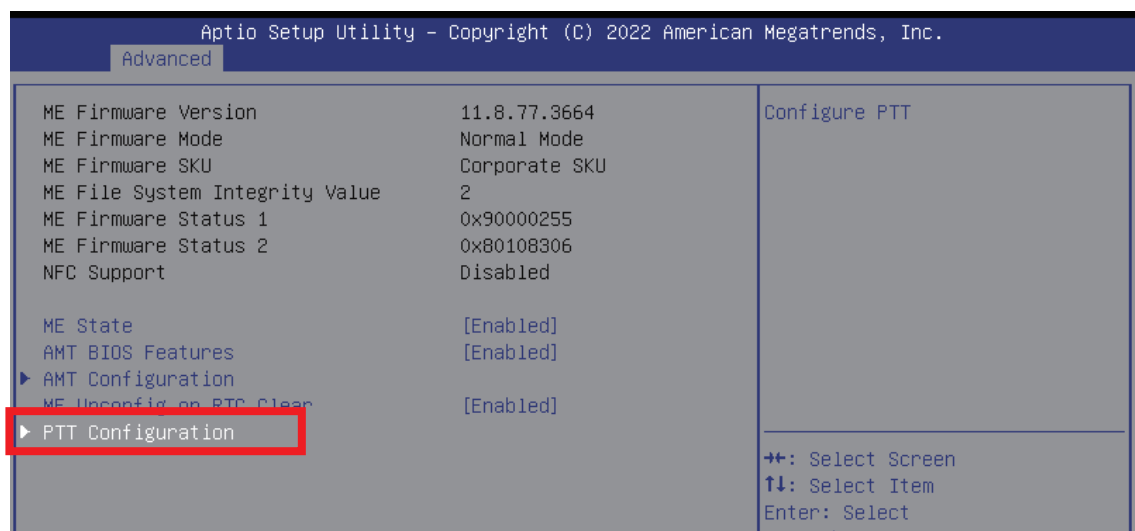


Step 3 Click on “dTPM” (TPM Device Selection)

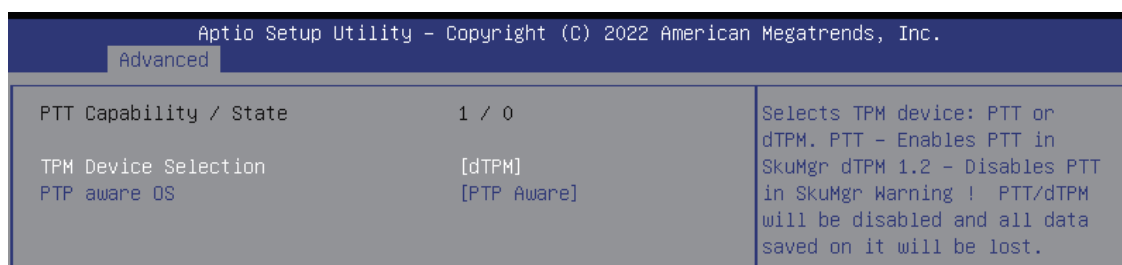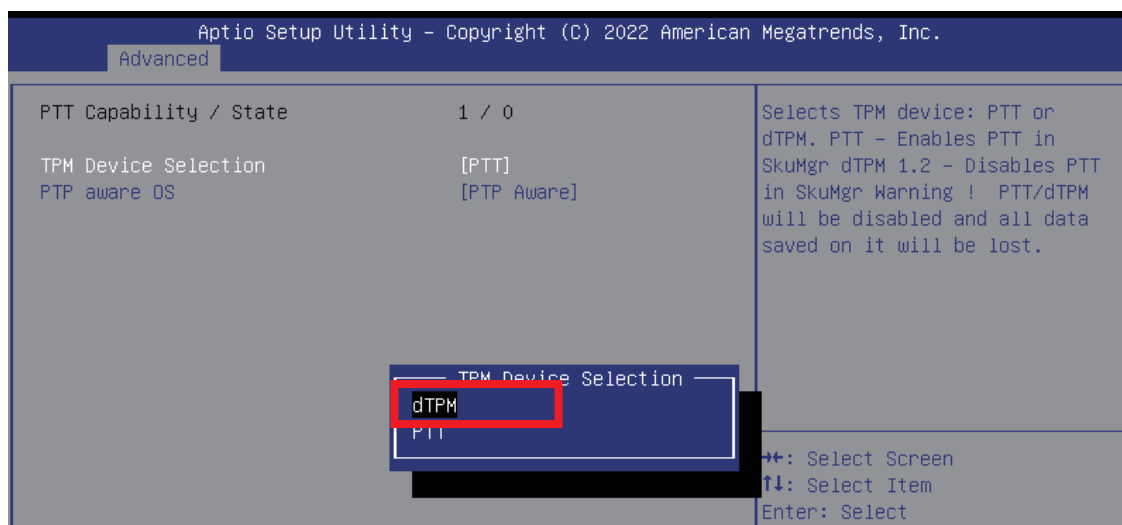


Step 4 Please save the BIOS settings by pressing F4. Please press Enter when the pop-up window which asks “Save configuration and exit?” appears. The computer will then restart.

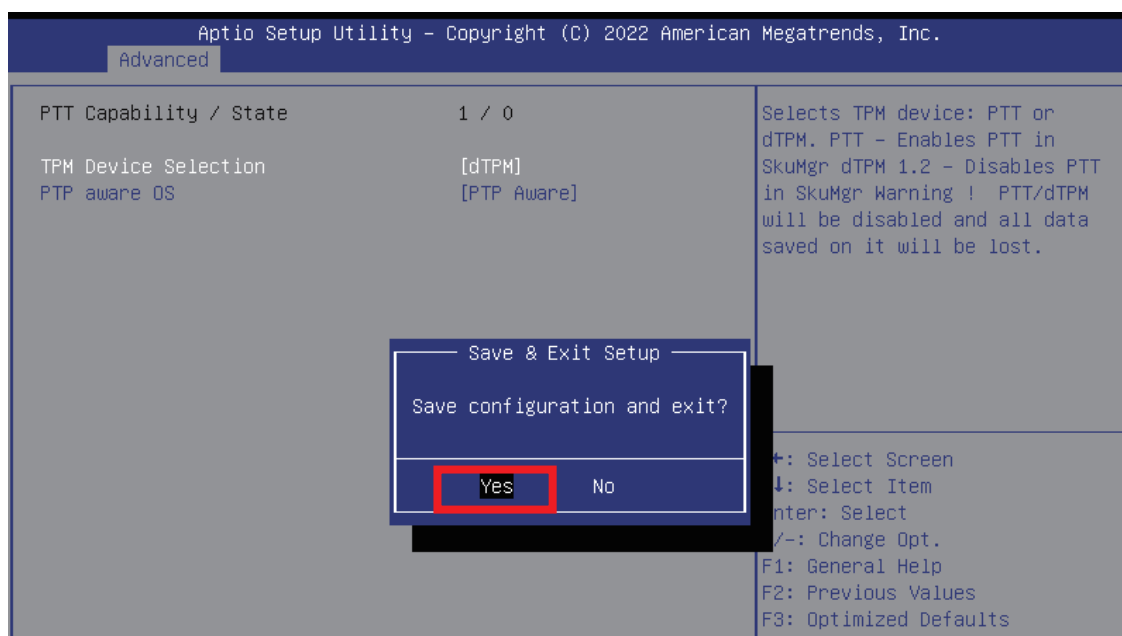

Step 5 Click on “Trusted Computing”

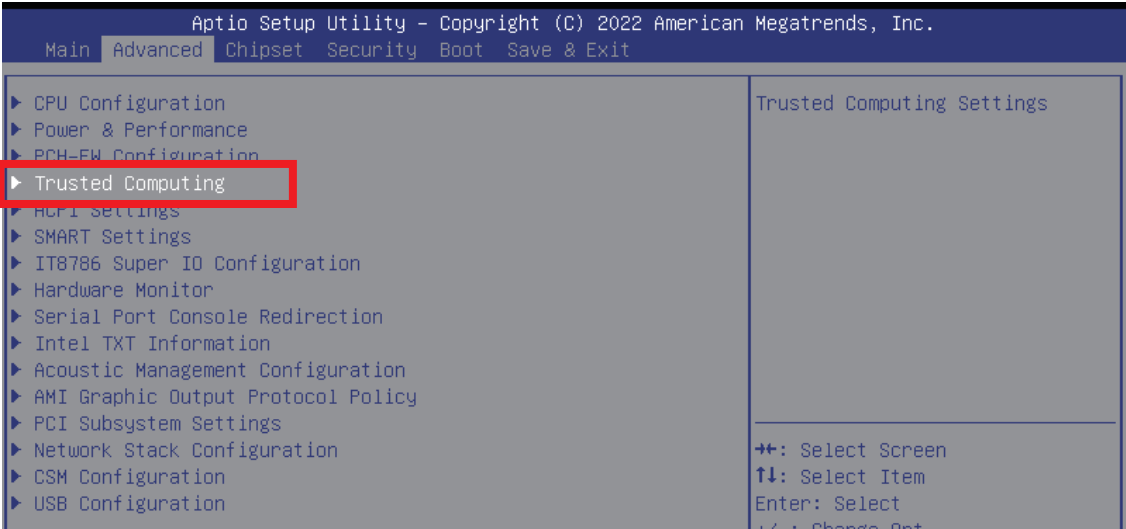

Step 6 If the window shows “TPM2.0 Device Found Firmware Version:5.62”, then the setting is completed.

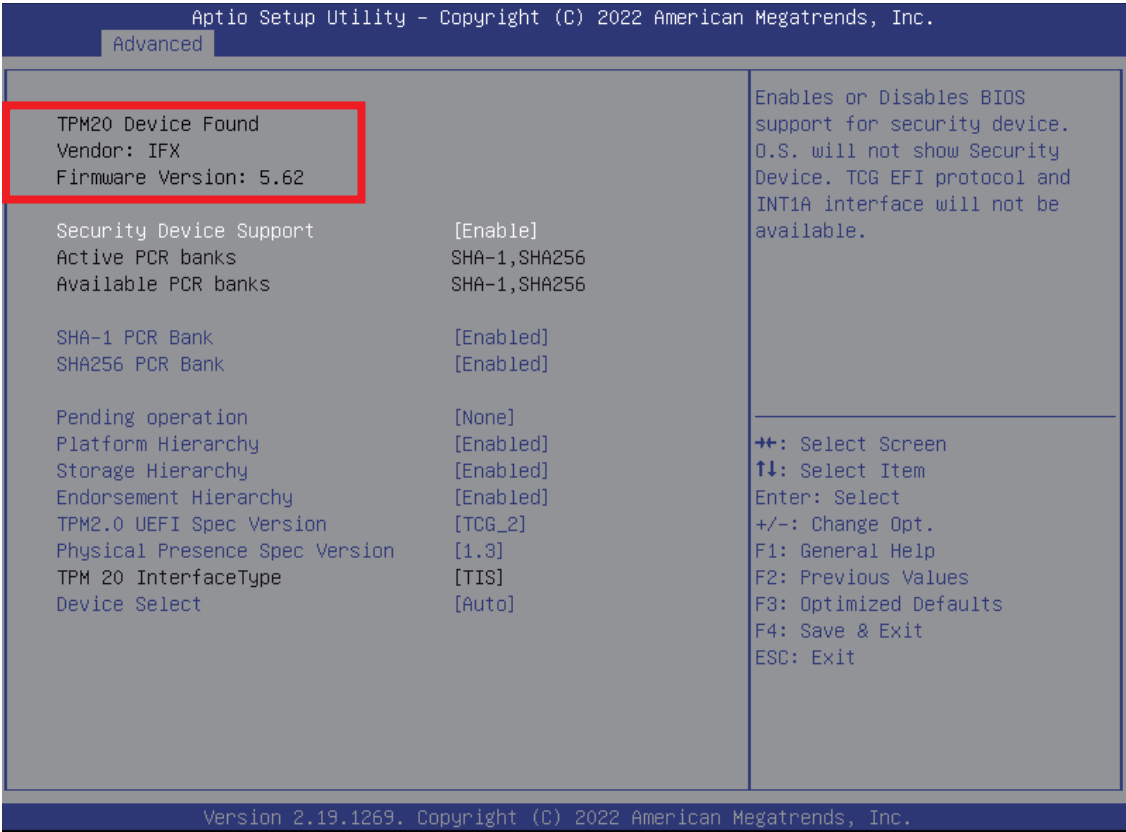

**** If more help is needed, please contact Vecow technical support ****



For further support information, please visit www.vecow.com

This document is released for reference purpose only.

All product offerings and specifications are subject to change without prior notice.

No part of this publication may be reproduced in any form or by any means, electric, photocopying, or recording, without prior authorization from the publisher.

The rights of all the brand names, product names, and trademarks belong to their respective owners.

© Vecow Co., Ltd. 2023. All rights reserved.